




Philips
Portable DVD Player

18cm/ 7" LCD

3hr playtime
TUV

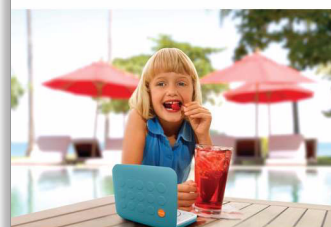

PD7006



Your fun portable DVD

with spill resistant design

Indulge in entertainment wherever you go. The portable PD7006 DVD player's spill resistant design makes it perfect for kids, letting them enjoy favorites without worry about spillage from drinks. TUV complied mounting pouch is included .

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Spill resistant design

- Protect your device from spilled water
- Easy clean rubber surface

Extra touches for your convenience

- TUV complied mounting pouch included
- Enjoy up to 3 hours playback with a built-in battery*
- USB connection for video, photo and music playback
- Full Resume on Power Loss
- Car adaptor included

PHILIPS

Highlights

MP3-CD, CD and CD-RW playback




MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

View JPEG from picture disc



Play JPEG photos that are saved on your disc. Relive your favorite moments with family and friends anytime you want!

DVD, DVD+/-RW, (S)VCD, CD

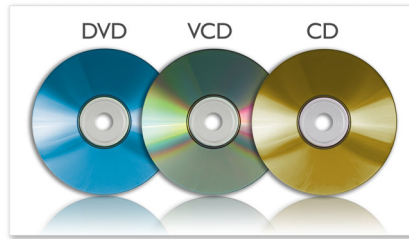

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply is discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!

DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the

Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

USB connection



Simply plug in your portable USB device to the USB connector on your Philips portable DVD player and playback your digital videos, music or photos directly. Now you can share your favorite moments with family and friends.

Spill resistant design

The device is built to resist accidental spillages. The spill-proof design with its rubber surface prevents liquids from damaging electrical or mechanical components, and it is easy to clean.

TUV mounting pouch

TUV complied mounting pouch included



Specifications

Picture/Display

- Diagonal screen size: 7 inch / 18 cm
- Resolution: 480(w)x234(H)x3(RGB)
- Display screen type: LCD TFT

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom, Resume Playback from Stop
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone
- AV output: Composite (CVBS) x1
- USB

Convenience

- Battery charging indication

- Shock proof
- Waterproof standard: IPX4

Accessories

- AC/DC Adaptor: DC 9V, 0.8A, 110-240v, 50/60Hz
- User Manual: Multi Languages
- Car kit: cigarette outlet adaptor, 12vDC
- Pouch: TUV complied pouch for in car mounting

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 3hrs*

Outer Carton

- Gross weight: 5,681 kg
- GTIN: 1 87 12581 63866 2
- Outer carton (L x W x H): 35,8 x 23,6 x 24,4 cm
- Nett weight: 4,32 kg
- Number of consumer packagings: 3
- Tare weight: 1,361 kg

Packaging dimensions

- Type of shelf placement: Dummy
- Packaging dimensions (W x H x D): 34 x 23 x 7,3 cm
- EAN: 87 12581 63866 5
- Gross weight: 1,75 kg
- Nett weight: 1,44 kg
- Number of products included: 1
- Packaging type: Dummy
- Tare weight: 0,31 kg

Product dimensions

- Product dimensions (W x H x D): 20,2 x 4 x 16,4 cm
- Weight: 0,82 kg



Issue date 2017-04-05

Version: 1.1.11

12 NC: 8670 000 88218
EAN: 87 12581 63866 5

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivX Networks, Inc. and are used under license.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.

* Packaging inside pouch is compliance with sample which is comply with Annex IV of ECE R21.01 regulation conducted by TUV Rheinland (test report no.: 85-R21-087/12.)