



Philips
Portable DVD Player

22.9 cm/9" widescreen LCD



PET9422



Double your movies on the road

with two DVD players

Play your movies and music in the car! The Philips PET9422 features two 22.9cm (9") DVD players to let passengers indulge in enjoying their own DVD movies, music and photos on the road. The mounting kits make installation faster and easily.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enrich your AV entertainment experience

- 22.9 cm (9") TFT color widescreen LCD display
- Dual TFT LCD screens for great movie enjoyment
- Watch movies separately or share one movie on both players
- Built-in stereo speakers

Extra touches for your convenience

- Single cable connection for quick installation in the car
- Car adaptor and mounting strap included

PHILIPS
sense and simplicity


Highlights

Dual TFT LCD screens



Dual screens allow you to display same videos or images from the portable DVD players. Simply plug in and mount the screens on the headrests in your car. Now you can enjoy your favorite DVD movies and JPEG photos with family and friends at the backseats easily and comfortably.

DVD, DVD+/-RW, (S)VCD, CD

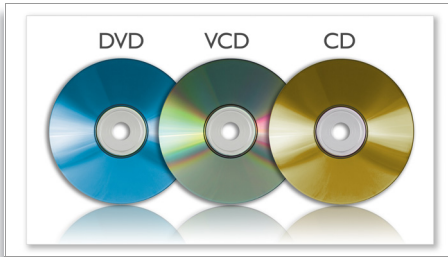

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats.



Likewise, DVD+/-RW handles both common rewritable disc types.

MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

22.9cm/9" TFT color widescreen



The high resolution color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints.

Specifications

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size (inch): 9 inch
- Resolution: 640(w)x220(H)x3(RGB)
- Brightness: 100 cd/m²
- LCD panel type: Anti-glare polarizer
- Contrast ratio (typical): 200:1
- Effective viewing area: 198.240(W)x111.735(H)mm
- Response time (typical): 30 ms

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 10mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone), >62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Zoom
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: Dolby Digital, MP3
- MP3 bit rates: 32 - 320 kbps
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V, 1A
- Headphone jack: 3.5mm Stereo Headphone
- AV output: Composite (CVBS) x1

Accessories

- AC/DC Adaptor: DC-in 9V (110-240v, 50/60Hz)
- Cables: AV Cables
- Car kit: cigarette charger, headrest mounting straps x 2
- User Manual: Multi Languages

Dimensions

- Master carton dimensions: 1220 x 790 x 1050 mm
- Master carton quantity: 32
- Master carton weight: 100 kg
- Packaging dimensions (W x H x D): 508 x 381 x 127 mm
- Packaging type: D-box
- Product dimensions (W x H x D): 240 x 183 x 38 mm
- Product weight: 2 kg



Issue date 2013-01-31

Version: 1.1.3

12 NC: 8670 000 56478
UPC: 6 09585 17651 5

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com