




Philips
Wireless hi-fi headphones

40mm drivers/closed-back

Over-ear
Soft ear cushions

SHC8535

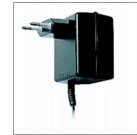

Wireless freedom, clear sound

Freedom to enjoy music at home. With the HiFi sound reproduction, this Philips SHC8535/10 stereo headphone is the ultimate in personal convenience.

You'll forget you're wearing them!

- 3-way adjustment for a better fit and bass performance
- Preformed soft ear-cushions ensure a comfortable fit

The perfect wireless listening experience

- The whole ear is covered to optimize sound quality
- 40mm speaker driver delivers sound without distortion
- Convenient automatic tuning ensures best reception

Always ready to go

- FM Wireless transmission for freedom of movement
- Simple, convenient charging with a wireless dock

PHILIPS

Specifications

Sound

- Acoustic system: closed
- Magnet type: Neodymium
- Sensitivity: 100 dB
- Speaker diameter: 40 mm
- Signal/noise ratio: > 68 dB
- Channel separation: > 30 dB
- Frequency range: 10 - 21,000 Hz

Tuner/Reception/Transmission

- Pilot tone frequency: 19 kHz
- Effective range: 100 m
- Modulation: FM
- Number of channel: 3
- Carrier frequency range: 863.5 - 864.5 MHz

Convenience

- Battery charging indicator
- Automatic power off
- Operating time: +/- 15 hours
- Low battery indicator

Power

- Power supply headphone: 2.4 VDC
- Power supply transmitter: AC/DC adapter 8 V/375

mA

Outer Carton

- Gross weight: 3.72 kg
- Outer carton (L x W x H): 39 x 26 x 32.5 cm
- Nett weight: 1.968 kg
- Tare weight: 1.752 kg
- GTIN: 1 69 23410 71050 9
- Number of consumer packagings: 3

Packaging dimensions

- Packaging dimensions (W x H x D):
24 x 32 x 12.2 cm
- Gross weight: 1.032 kg
- Nett weight: 0.656 kg
- Tare weight: 0.376 kg
- EAN: 69 23410 71050 2
- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Both

Product dimensions

- Product dimensions (W x H x D):
19.5 x 20 x 10 cm
- Weight: 0.308 kg

Highlights

3-way adjustable ear shells

Enjoy a comfortable fit and experience better bass performance thanks to the three-way adjustable ear shells that fit naturally around your ears.

Full size design

Full-size earshells of these Philips headphones not only cover your whole ear for better sound quality, but also provide space for a larger, higher performance driver.

40 mm speaker driver

The 40 mm speaker driver is made of a composite mylar material for a highly sensitive yet powerful element that delivers sound without audible distortion.

FM Wireless transmission

With high frequency FM wireless transmission, which can even pass through walls, you can even listen to your music when you're in another room.

Convenient automatic tuning

Convenient automatic tuning ensures best reception

Preformed soft ear-cushions

Preformed soft ear-cushions ensure a comfortable fit

Simple, convenient charging

Simple, convenient charging with a wireless dock



Issue date 2016-03-16

Version: 5.3.7

12 NC: 8670 000 79039
EAN: 69 23410 71050 2

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com