


Philips  
Philips Georg Jensen  
speaker

**Bluetooth®**

4 W Output Power  
6 hours of play time  
IPX7 waterproof

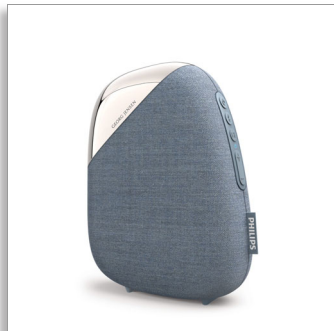

**Tajs30**

## Bring the music. In style.

Beautifully curved, beautifully tactile. With its wool-blend speaker fabric and polished-steel top plate, this small Bluetooth speaker will turn heads wherever you go. You get crisp sound and up to 6 hours of play time.

### **Bluetooth speaker. Beautifully tactile design.**

- A stylish companion
- Tactile harmony. Georg Jensen polished-steel elements
- Kvadrat speaker fabric. Designed to let the sound through
- Organically curved form. Stable base.

### **Plays well wherever you go**

- 6 hours of play time. Pair for stereo sound
- Crisp, clear sound. 1.75" full-range driver
- Built-in mic for hands-free calls
- IPX7-rated internal speaker. For peace of mind

### **Simple control. Small design.**

- Easy Bluetooth pairing. Up to 20 m wireless range
- Buttons for volume, play/pause, on/off, speaker pairing
- USB charging. 2 hours charging time
- Dimensions: 98 x 131 x 43 mm

**PHILIPS**

Philips Georg Jensen speaker  
Bluetooth® 4 W Output Power, 6 hours of play time, IPX7 waterproof

# Specifications

## Sound

- Output power (RMS): 4 W
- Sound System: Mono

## Loudspeakers

- Speaker driver: 1 x 1.75" full-range driver and 1 passive radiator

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 20 m or 66 ft
- Bluetooth version: 5.0
- Wireless: Yes, TWS pairing

## Convenience

- Water resistance: IPX7
- Volume control: Digital up/down
- Automatic power off
- Built-in mic
- Call Management: Answer/End Call
- Ease of Installation: Automatic pairing

## Power

- Power LED indicator: Blue
- Battery type: Lithium-ion (built-in)
- Battery Capacity: 2200 mAh, 7.4 V
- Operating time on battery: 6 hr
- Charging time: 2 hr

## Accessories

- Included accessories: Quick install guide, Warranty Card, World Wide Warranty leaflet
- Cable: USB charging cable

## Dimensions

- Product dimensions (WxDxH): 98 x 43 x 131 mm
- Packaging dimensions (WxDxH): 196 x 130 x 70 mm
- Product weight: 0.36 kg
- Weight incl. Packaging: 0.62 kg

TAJS30/00

# Highlights

## Tactile harmony




Designed together with Georg Jensen, this small, curved Bluetooth speaker is simple yet striking. The polished-steel top plate contrasts beautifully with the tactile Kvadrat speaker fabric. Discreet brand signatures nod subtly to Philips and Georg Jensen.

## Kvadrat speaker fabric



This speaker is covered with a premium speaker fabric created by high-end manufacturer Kvadrat. The beautiful wool-blend material is acoustically transparent, allowing the sound to flow freely from the speaker into the room.

## 6 hours of play time

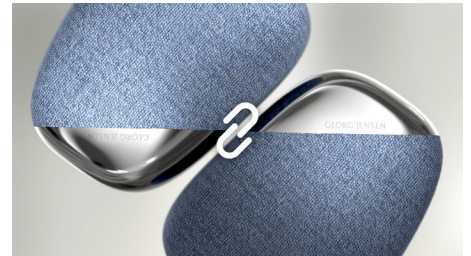

The battery gives you 6 hours of play time from a full charge and there are buttons on the speaker for volume control. You can pair with an identical Philips Georg Jensen speaker to enjoy your music in stereo. Simply press and hold the power button for 2 seconds.

## A stylish companion

With its curved form and eye-catching contrasts, this speaker makes a beautiful impression. The Kvadrat speaker fabric has the added bonus of making the speaker easy to grip when you pick it up.

## Easy Bluetooth pairing

Pairing with your Bluetooth device is simple and the speaker remembers the last device it was paired with. The wireless range is up to 20 m and charging the speaker takes 2 hours via the included USB-C cable.

## IPX7-rated internal speaker

The IPX7 rating means the internal speaker driver can be submerged for up to 30 minutes at a depth of up to 1 m. The wool-blend Kvadrat speaker fabric is not waterproof but can withstand a drop or two of rain.



Issue date 2021-10-07

Version: 11.0.2

12 NC: 8670 001 66211  
EAN: 48 95229 10219 4

© 2021 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)