




Philips
Universal Remote Control

6in1

SRU5060

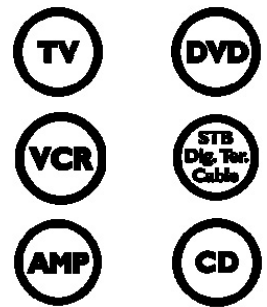

Full replacement remote

Operates more than 1000 brands

A truly excellent universal remote control that gives you complete control over up to six devices from most brands. It has dedicated menu keys and learns codes from your old remote.

Ideal replacement for your old remote

- 6-in-1 remote for your TV, VCR, STB, DVD, CD and AMP.
- Convenient IR learning from another remote
- Ready for use with Philips equipment

Great convenience

- Eye-catching chrome finish
- Dedicated keys for moving around menus
- A light indicates current active device mode
- Battery low indication shows when to refresh batteries

Quick and easy set-up

- Automatically searches for your equipment brand
- Batteries are included for unwrap-and-zap
- For questions and assistance call our URC service line
- URC support service via dedicated website

PHILIPS
sense and simplicity

Specifications

Convenience

- **Universal IR database:** TV, VCR, DVD, SAT, CABLE, CD/MD, RECEIVER, AMP
- **TV functions:** Program up/down, Volume up/down, mute, Power/standby, Digit keys, AV selection, external, Menu control, Colour/Brightness control, Teletext keys, Fast text keys, Previous program, Sleep/timer, 16:9, Guide, info
- **Teletext enhancements:** Fast text
- **DVD functions:** Transport keys, System menu control, Disc menu control, Digit keys
- **VCR functions:** Transport keys (6), Showview, VCR plus, Menu control
- **SAT/CBL functions:** Digit keys, Menu control, Guide, info, Favourites, Text functions
- **Ease of Installation:** Autosearch
- **Installation steps:** 2
- Copy key function
- **Language support:** GB/I/E/P/GR/RU/CZ/PL
- **Number of keys:** 40
- Pre-programmed for Philips
- **Regulatory Approvals:** CE Mark
- Splash proof

Accessories

- **Battery:** Yes, 1.5V Battery R03/AAA

Infrared Capabilities

- **Operating distance:** 33 ft (10 m)

- **Transmitting LEDs:** 1
- Universal IR code database
- **Number of brands in database:** Over 1100
- **Carrier frequency range:** 24 - 55 kHz
- **Transmission angle:** 90 degree
- Learning IR codes
- **Learning frequency range:** 20 kHz to 70 kHz and 455 kHz

Power

- **Battery lifetime:** 12 Months
- **Number of batteries:** 2
- **Battery type:** AAA

Outer Carton

- **Quantity:** 6
- **EAN/UPC/GTIN:** 87 10895 93608 8
- **Height:** 172 mm
- **Length:** 312 mm
- **Width:** 151 mm

Packaging Data

- **I2NC:** 908210006488
- **EAN/UPC/GTIN:** 87 10895 93607 1
- **Length:** 304 mm
- **Height:** 33 mm
- **Width:** 157 mm

Product highlights

6in1 remote control

Replace a table full of remote controls with one robust unit that'll operate your TV, VCR, satellite receiver, digital or cable set-top box (STB), DVD, CD player and amplifier/receiver regardless of the brand or model.

Learning functionality

Learning functionality refers to the process through which a remote control captures and stores infrared signals from other remotes for later use. When device codes are not included in the on-board database, they can always be learned from the original remote, simply by pointing to it.

Pre-programmed for Philips

If you have Philips equipment, you can use your universal remote control without programming it because all keys are pre-set for Philips.

Chrome finish

Stylish chrome finish that looks good and complements the latest equipment design.

Dedicated menu keys

Dedicated keys to move easily around your equipment's menus mean simple one finger operation without having to press shift or function shift keys

Device mode indicator

Small lights keep you informed about which device mode is currently active.

Battery-low indication

To know in time when the batteries need to be recharged or replaced.

Auto brand search

Getting your new remote control working is simply a case of having your remote automatically search for the most suitable code for your equipment.

