


Philips
Portable DVD Player

22.9 cm (9") LCD
5-hr playtime

PD9000

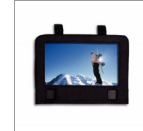

Enjoy movies longer, while on the go

Enjoy your movies anytime, anyplace! The PD9000 portable DVD player features 9" TFT LCD screen for your great viewing experience. You can indulge in up to 5 hours of DVD/DivX[®]/MPEG movies, MP3-CD/CD music and JPEG photos on the go.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enrich your AV entertainment experience

- 22.9 cm (9") TFT color widescreen LCD display
- Built-in stereo speakers

Extra touches for your convenience

- Up to 5-hour playback with a built-in battery*
- AC adaptor, car adaptor and AV cable included
- Car mount pouch included for easy in-car use
- Full Resume on Power Loss


PHILIPS

Portable DVD Player
22.9 cm (9") LCD 5-hr playtime

PD9000/37

Highlights

DVD, DVD+/-RW, (S)VCD, CD

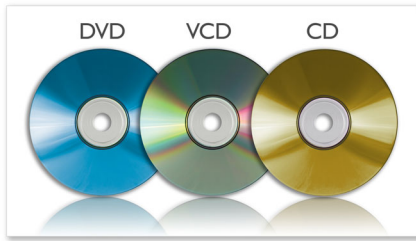

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

5-hour built-in battery*

This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 5 hours of continuous movie, photo and

music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

22.9cm/9" TFT color widescreen

The high resolution color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints.

DivX Certified

With DivX[®] support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified[®] Philips device.

Car mount pouch



Mount your portable DVD player easily to your car headrest. You can enjoy DVD movies on the road.

Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!



Specifications

Product dimensions

- Product dimensions (W x H x D): 17.8 x 24 x 3.95 cm
- Product dimensions (W x H x D): 7.0 x 9.4 x 1.6 inch
- Weight: 0.952 kg
- Weight: 2.099 lb

Packaging dimensions

- Packaging dimensions (W x H x D): 27.2 x 28.5 x 7 cm
- Packaging dimensions (W x H x D): 10.7 x 11.2 x 2.8 inch
- Nett weight: 1.31 kg
- Nett weight: 2.888 lb
- Gross weight: 1.575 kg
- Gross weight: 3.472 lb
- Tare weight: 0.265 kg
- Tare weight: 0.584 lb
- UPC: 6 09585 18235 6
- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Laying

Outer Carton

- Outer carton (L x W x H): 28.2 x 23.3 x 30 cm
- Outer carton (L x W x H): 11.1 x 9.2 x 11.8 inch
- Nett weight: 3.93 kg
- Nett weight: 8.664 lb
- Gross weight: 5.075 kg
- Gross weight: 11.188 lb
- Tare weight: 1.145 kg
- Tare weight: 2.524 lb
- GTIN: 1 06 09585 18235 3
- Number of consumer packagings: 3

Picture/Display

- Diagonal screen size (inch): 9 inch
- Resolution: 640(w)x220(H)x3(RGB)
- Display screen type: LCD TFT

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(earphone), >62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom, Resume Playback from Stop
- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone x 1
- AV output: Composite (CVBS) x1

Convenience

- Battery charging indication
- Shock proof

Accessories

- AC/DC Adaptor: DC-IN 9V, 0.8A, 110-240v, 50/60Hz
- Car kit: cigarette outlet adaptor, 12vDC
- Remote control: AY5521 slim remote
- Cables: 1 x AV Cables
- User Manual: Multi Languages
- Pouch: Car mounting pouch

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 5 hrs*

Dimensions

- Master carton dimensions: 225 x 295 x 280 mm
- Master carton quantity: 3
- Master carton weight: 5.1 kg
- Packaging dimensions (W x H x D): 272 x 285 x 70 mm
- Product dimensions (W x H x D): 239 x 39 x 178 mm
- Product weight: 1.1 kg
- Packaging type: D-box



Issue date 2017-05-07

Version: 1.1.8

12 NC: 8670 000 59231
EAN: 00 60958 51823 56

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.
* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.
* Battery life varies by use and settings.
* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.