


Philips Micro music system

Bluetooth[®] USB port for charging

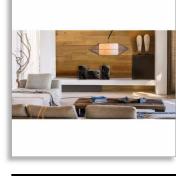

BTM1360

Bring power to your tunes

Listen to digital music from your Smartphone via Bluetooth, or play MP3-CDs and CD-R/RW on this Philips micro system. Bass Reflex speakers and 30W maximum output power deliver booming bass and room filling sound.

Enjoy your music from multiple sources

- Stream music wirelessly via Bluetooth[™] from your smartphone
- USB Direct for easy MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- Audio-in for portable music playback

Enrich your sound experience

- Digital Sound Control
- Bass Reflex Speaker System delivers a powerful, deeper bass
- 30W RMS Maximum output power

Easy to use

- Motorized CD loader for convenience access
- · Digital tuning with preset stations for extra convenience



Highlights

Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even loptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players.









Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

BTM1360/12

Specifications

Sound

- Sound enhancement: digital sound control
- Maximum output power (RMS): 30W

Loudspeakers

- Speaker drivers: 3.5" woofer
- Speaker types: bass reflex speaker system

Audio playback

- Disc playback modes: fast forward/backward, next/ previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop, program play

Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM fixed pigtail antenna
- Tuner enhancement: auto digital tuning, auto scan

Connectivity

- USB: USB host
- Audio in (3.5mm)
- Bluetooth profiles: A2DP, AVRCP
- USB: USB host, USB 500mAh Charging

Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- · Clock: On main display, sleep timer
- Display type: LED display
- · Loader type: tray

Accessories

- Included accessories: User Manual
- Remote control: 21-key remote

Dimensions

- Main unit width: 180 mm
- Main unit height: 119 mm
- Main unit depth: 220.4 mm
- Main speaker dimensions (W x D): 127 x 160 mm
- Main speaker height: 170 mm
- Packaging width: 659 mm
- Packaging height: 234 mm
- Packaging depth: 180 mm
- Gross weight: 4.6 kg
- Net weight: 3.94 kg

Power

• Power supply: 100-240VAC, 50/60Hz



Issue date 2016-08-02

© 2016 Koninklijke Philips N.V. All Rights reserved.

Version: 1.0.5

All Rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

12 NC: 8670 001 22353 EAN: 48 95185 60575 3

www.philips.com