




Philips  
Stereo Headphones

For indoors and outdoors

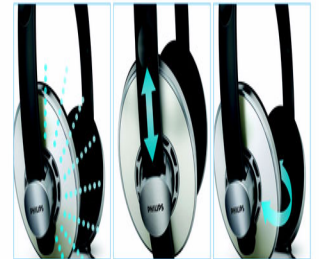

SHP5401



## For at home and on the go

Powerful sound and lightweight portability combine in these stereo headphones, providing you with great sound and maximum comfort for indoor and outdoor usage

### Made to fit you

- Lightweight design improves comfort for prolonged use.

### Always ready to go

- Single-sided cable reduces tangling and improves comfort

### The perfect listening experience

- The whole ear is covered to optimise sound quality
- 40 mm speaker driver delivers sound without distortion

### You'll forget you're wearing them!

- Ear cushions improve wearing comfort and bass response
- Ultra-soft headband cushions for supreme wearing comfort



**PHILIPS**

# Specifications

## Sound

- Acoustic system: open
- Magnet type: Neodymium
- Frequency response: 15–28,000 Hz
- Impedance: 32 ohm

## Connectivity

- Cable Connection: one-sided
- Connector: 3.5 and 6.3 mm
- Finishing of connector: chrome-plated
- Type of cable: Oxygen-Free Copper

## Accessories

- Adapter plug: 3.5 - 6.3 mm

## Packaging dimensions

- Packaging dimensions (W x H x D):  
20.6 x 26 x 11.5 cm
- Net weight: 0.179 kg
- Gross weight: 0.444 kg

- Tare weight: 0.265 kg
- EAN: 87 12581 43923 1
- Number of products included: 1
- Packaging type: Carton

## Outer Carton

- Outer carton (L x W x H): 74.1 x 45 x 57.7 cm
- Net weight: 4.296 kg
- Gross weight: 14.473 kg
- Tare weight: 10.177 kg
- EAN: 87 12581 43924 8
- Number of consumer packages: 24

## Inner Carton

- Inner carton (L x W x H): 43 x 35.8 x 27.6 cm
- Net weight: 1.074 kg
- Gross weight: 3.227 kg
- Tare weight: 2.153 kg
- EAN: 87 12581 43925 5
- Number of consumer packages: 6

# Highlights

## Comfortable ear cushions

The special shape and luxurious materials used for the ear cushions of these Philips headphones ensure a perfect fit for maximum comfort. They prevent audio leakage and enhance bass performance too. The ear cushions are shaped in such a way that they perfectly align with the area around a person's ear.

## Lightweight design

The durable, lightweight quality materials of these Philips headphones enhance comfort for extended wear.

## Single-sided cable

The cable is conveniently connected to just one side, considerably reducing the risk of tangling and simplifying winding the cable up for storage.

## Full-size design

The full-size ear shells of these Philips headphones not only cover your whole ear for better sound quality, but also provide space for a larger, higher-performance driver.

## for supreme wearing comfort

The ultra-soft headband cushions wrapped in fabric matching the ear cushions allow a snug and secure fit on the top of the head, without adding any pressure to the skull.

## 40 mm speaker driver

The 40 mm speaker driver is made of a composite Mylar material for a highly sensitive yet powerful element that delivers sound without audible distortion.

