




Philips
Soundbar speaker

3.1 CH wired subwoofer

Bluetooth®
HDMI ARC
150W

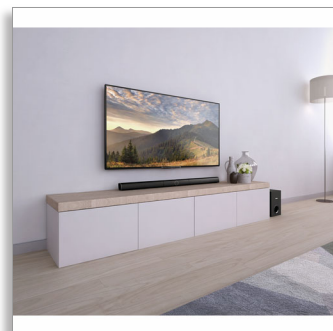

HTL2193B

Unmatched voice clarity from 3.1 Ch

with Bluetooth and FM Radio

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience, plus wireless music streaming over Bluetooth.

Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- FM digital tuning with auto scan and presets for ease of use
- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3 music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control

Richer sound for watching TV and movies

- Dedicated center-channel speaker for superior voice clarity
- Dolby Digital and Pro Logic II surround sound
- Virtual Surround Sound for a realistic movie experience
- External subwoofer adds thrill to the action

PHILIPS

Soundbar speaker
3.1 CH wired subwoofer Bluetooth®, HDMI ARC, 150W


HTL2193B/98

Highlights

Center-channel speaker


A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

Virtual Surround Sound

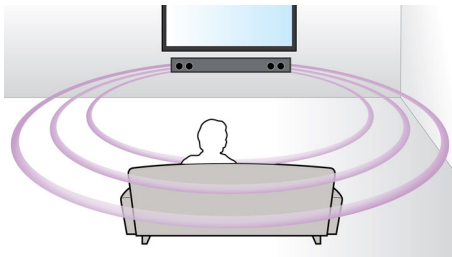

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.


Dolby Digital and Pro Logic II

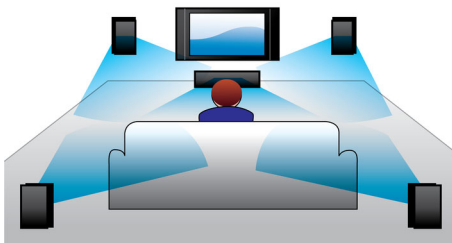

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a


surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Bluetooth

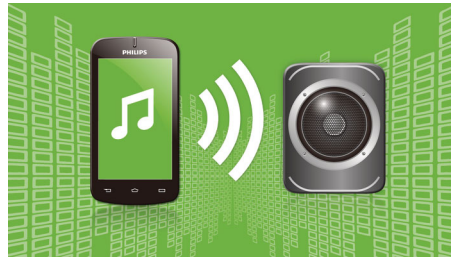

Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

FM digital tuning

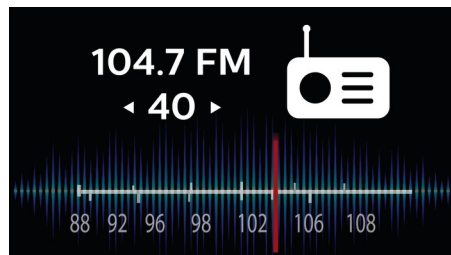

Digital FM radio delivers new music options and entertainment to your soundbar speaker, speaker system and home theater system. Auto scan is available for radio stations, so searching for your favorite channel will never take more than a few seconds. Preset radio

stations can be stored, giving you instant access to all your favorite stations without manual tuning each time.

USB playback



Simply plug in your device to the USB port on your Philips Soundbar speaker. Your digital music will be played directly from the device. Now you can share your favorite moments with family and friends.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



Specifications

Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode, Audio sync, Movie, Music, Voice
- Sound System: Dolby Digital, Dolby pro-logic 2
- Speaker output power: 32W x 3
- Subwoofer output power: 55 W
- Total Power RMS @ 10% THD: 150 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 2 ohm
- Drivers per Soundbar: 3 x race track woofers

Connectivity

- Integrated Connections: Bluetooth
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in, HDMI 1.4 output (ARC), FM Antenna Socket
- Top connections: Audio In (3.5mm), USB 2.0

Design

- Wall mountable

Power

- Power consumption: 30 W
- Power supply: 100-240VAC, 50-60Hz
- Standby power consumption: < 0.5 W

Dimensions

- Main Unit (W x H x D): 950 x 51 x 69 mm
- Main Unit Weight: 1.62 kg
- Subwoofer Weight: 2.78 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 395 x 418 x 295 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Weight incl. Packaging: 6.6 kg

Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AC Adapter, FM antenna, Screws (x6), Optical audio cable

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

Audio Playback

- Compression format: MP3



Issue date 2022-04-29

Version: 4.1.7

12 NC: 8670 001 26474
EAN: 48 95185 61035 1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com