

Philips  
Soundbar speaker

### Virtual surround

Integrated subwoofer  
2 HDMI In & HDMI out ARC  
Bluetooth®

HTL3120



## Powerful sound for any TV

with Integrated subwoofer

Unleash the full sound potential of all your media devices. With its integrated subwoofer and orientation sensor, it gives you the freedom to place the soundbar just the way you like it.

#### Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Connect to HDMI x 2 for great picture and sound quality
- Enjoy MP3/WMA music directly from your portable USB devices
- Wireless music streaming via Bluetooth

#### Designed for simplicity

- Flexible placement on the wall or tabletop
- Great Sound built-in for true simplicity without clutter

#### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- 120W RMS power delivers great sound for movies and music
- Bass Reflex speakers deliver a powerful, deeper bass
- Dolby Digital and DTS for great surround sound
- Dual 3" driver to deliver deep bass


# PHILIPS

Soundbar speaker  
Virtual surround Integrated subwoofer, 2 HDMI In & HDMI out ARC, Bluetooth®

HTL3120/93

# Highlights

## Virtual Surround Sound

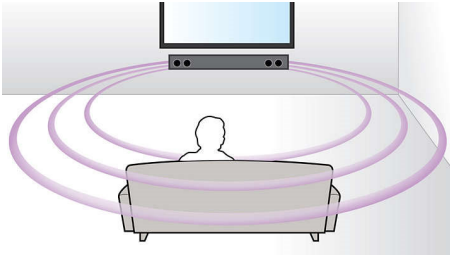


Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## HDMI x 2

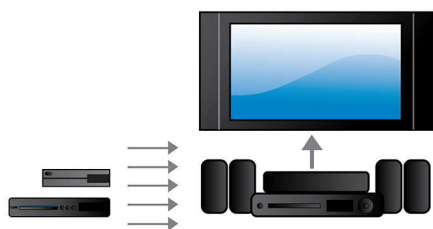

Enjoy larger-than-life 3D playback and crystal-clear 5.1 or 7.1 audio by simply plugging our

player's audio HDMI x 2 output to the connection in your non-3D AV receiver.

## USB



Enjoy MP3/WMA music directly from your portable USB devices

## Bluetooth




Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

## 120W RMS power

120W RMS power delivers great sound for movies and music


## Bass Reflex System

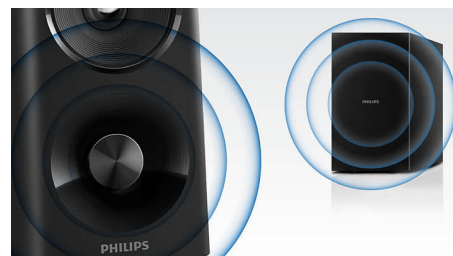

A chamber behind the speaker driver that channels air to acoustically tuned vents built


into the speaker give the bass notes a more punchy, realistic sound.

## Dolby Digital and DTS

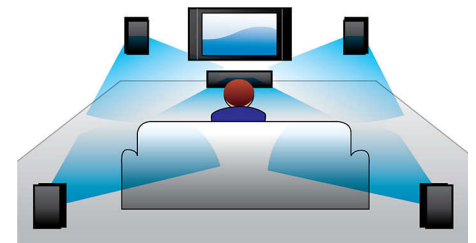

Go digital and get the most out of your music and movies. Even stereo music sounds great because Dolby Digital and DTS Digital Surround enhance digital music and videos, pumping it up so you get truly immersive surround sound out of your home cinema speaker.

## Dual 3" driver

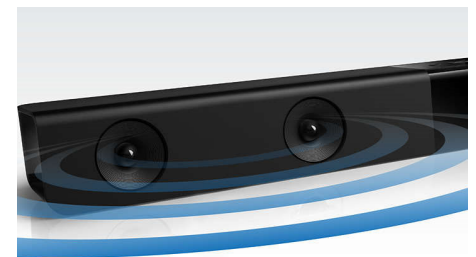

Dual 3" driver to deliver deep bass

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



# Specifications

## Sound

- Sound Enhancement: Audio sync, Auto Volume Leveler, Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Speaker output power: 2 x 60 W
- Total Power RMS @ 30% THD: 120 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 2 x 2" Fullrange woofers
- Speaker Frequency Range: 55 - 18k Hz
- Speaker Impedance: 3 ohm
- Tweeter Impedance: 12 ohm

## Connectivity

- Front / Side connections: Audio in, USB
- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2
- iPod/iPhone: via 3.5mm Audio In, via bluetooth

## Outer Carton

- EAN: 69 23410 72006 8
- Length: 109.6 cm
- Number of consumer packagings: 1
- Width: 14.1 cm
- Gross weight: 5 kg
- Height: 19.2 cm
- Nett weight: 3.8 kg
- Tare weight: 1.2 kg

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC),

## Content Type

### Power

- Power consumption: 25 W
- Power supply: 110-240V, 50Hz
- Standby power consumption: <math>< 0.5\text{ W}</math>

### Packaging dimensions

- Height: 19.2 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 14.1 cm
- Depth: 109.6 cm
- Number of products included: 1
- EAN: 69 23410 72006 8
- Gross weight: 5 kg
- Nett weight: 3.8 kg
- Tare weight: 1.2 kg

### Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

### Design

- Wall mountable

### Dimensions

- Main Unit (W x H x D): 995 x 91 x 104 mm
- Weight incl. Packaging: 4 kg
- Main Unit Weight: 3.5 kg
- Packaging (W x H x D): 1094 x 180 x 135 mm

### Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

