

Philips
Mini Hi-Fi System

CD, MP3-CD

USB Direct
FM
120W

FWM210



Obsessed with sound

Experience uninterrupted enjoyment of your CD/MP3/WMA songs with 120W RMS output power. Extend your music pleasure by listening to your tunes at home from your USB mass storage device - with USB direct

Enrich your sound experience

- 120W RMS total output power
- MAX Sound for instant power boost
- Digital Sound Control for optimized music style settings

Enjoy your music from multiple sources

- MP3 Link for portable music playback
- USB Direct for MP3/WMA music playback
- Play MP3-CD, CD and CD-R/RW

Easy to use

- Digital tuning for station presets
- Clock, alarm and sleep timer
- Connection for TV or DVD player

PHILIPS

Highlights

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.


Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls

you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

120W RMS

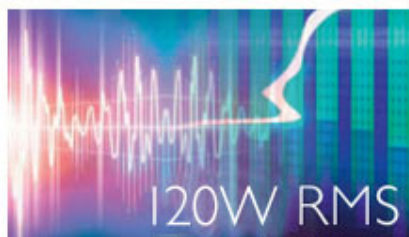

This system has 120W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.



Specifications

Sound

- Output power (RMS): 2 x 60W
- Sound Enhancement: Dynamic Bass Boost, Digital Sound Control, MAX Sound
- Total Sound Power (RMS): 120 W

Loudspeakers

- Main Speaker: 2" tweeter, 2 way, Bass Reflex Speaker System, 5.25" woofer
- Number of Loudspeakers: 2

Audio Playback

- Number of Discs: 1
- Loader Type: Tray
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Disc Playback Modes: Repeat/one/disk/program, Shuffle Play, Fast Forward/Backward, Next/Previous Track Search, Repeat Play, 20-Track Programmable
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle, Stop

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, MW
- Auto digital tuning
- Station presets: 40

Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Display Type: LCD

Connectivity

- Audio Connections: RCA Aux in, 3.5mm stereo line in -MP3 link

Accessories

- Remote control: 36-key
- Cables: MP3 Line-in cable
- Included accessories: User Manual, Quick start guide, Guarantee booklet, *Flat pin adaptor

Dimensions

- Set dimensions (W x H x D): 220 x 313 x 258 mm
- Speaker Width: 195 mm
- Speaker Height: 313 mm
- Speaker Depth: 210 mm
- Packaging dimensions (W x H x D): 705 x 372 x 292 mm
- Weight incl. Packaging: 9.52 kg

Power

- Power supply: 110-240V



Issue date 2014-06-12

Version: 1.0.4

12 NC: 8670 000 74966
EAN: 87 12581 59686 6

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Avoid extensive use of the set in a volume higher than 85 decibel
because this may damage your hearing.