

Philips  
DVD home theatre system

HTS3377



## Spectacular surround sound with deep powerful bass

High definition pictures and surround sound delivered by this system provide amazing home entertainment. Enjoy crisp pictures with 1080p HDMI upscaling, and playback from USB drives, portable media players and virtually any sort of disc.

### **Brings audio and video to life**

- Clear Voice for more audible vocals in movies and music
- FullSound™ to bring your MP3 music to life
- DoubleBASS for an extended, deep bass experience
- HDMI 1080p upscales to high definition for sharper pictures
- DTS, Dolby Digital and Pro Logic II surround sound
- Advanced Class D Amplifier for compact, powerful sound
- Karaoke scoring for fun and exciting song contests at home

### **Connect and enjoy multiple sources**

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

### **Plays all your movies and music**

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

**PHILIPS**  
sense and simplicity


# Highlights

## HDMI 1080p




HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

## Hi-Speed USB 2.0 Link

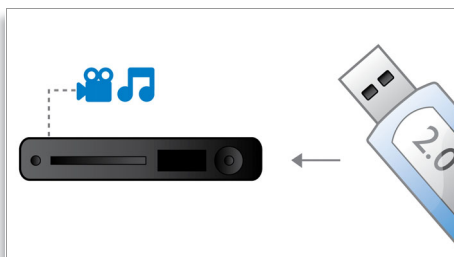


The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## DTS, DolbyDigital, ProLogic II

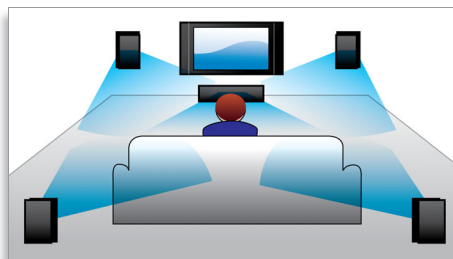


A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## Karaoke scoring

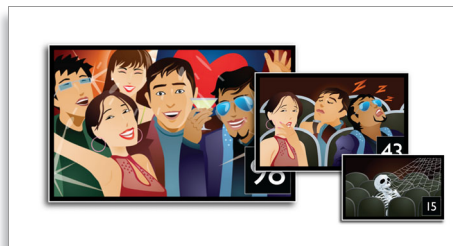

Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.


## Plays it all

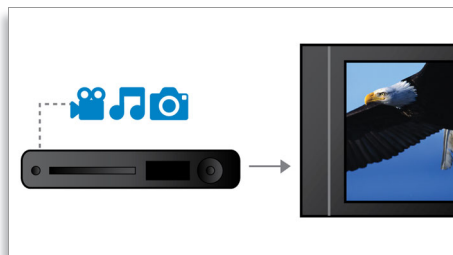

Play virtually any media format you want - whether they are WMV, DivX, MP3s or JPEGs.

Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

## Plays it all

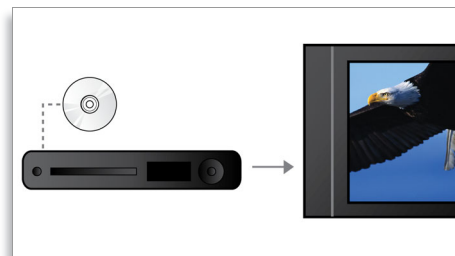

Play virtually any disc you want - whether they are CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.

## DivX Ultra Certified



With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra merges DivX playback with great features including integrated subtitles, multiple audio languages, multiple pictures and menus into one convenient file format.



# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling (720p, 1080i/p)

## Sound

- Output power (RMS): 6 x 167 W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 40-20,000 Hz
- Signal to noise ratio: >60 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Rock, Action, Classic, Concert, Drama, Lounge, Gaming, Sports

## Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV, MPEG4
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

## Tuner/Reception/Transmission

- Tuner Bands: FM
- No. of pre-set Audio Channels: 40

## Connectivity

- Front/Side connections: Hi-Speed USB, Microphone input 3.5 mm jack, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output,

Digital coaxial in 2 x, AUX in, FM Antenna, Easy-Fit speaker connectors, Digital optical in 2 x

## Power

- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 180 W

## Loudspeakers

- Satellite Speaker: 2 Floor standing pillars
- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre speaker drivers: 3" full-range woofer
- Centre speaker impedance: 4 ohm
- Centre freq range: 150-20,000 Hz
- Subwoofer driver: 6.5" high-efficiency woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer type: Passive

## Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, Power cord, Quick start guide, User Manual, World Wide Warranty leaflet

## Dimensions

- Set dimensions (W x H x D): 360 x 58 x 332 mm
- Set weight: 2.8 kg
- Front Speaker Width: 103 mm
- Front Speaker Height: 203 mm
- Front Speaker Depth: 71 mm
- Front Speaker Weight: 0.54 kg
- Rear Speaker Width: 262 mm
- Rear Speaker Height: 1199 mm
- Rear Speaker Depth: 264 mm
- Rear Speaker Weight: 3.376 kg
- Center speaker dimensions (W x H x D): 244 x 100 x 74 mm
- Centre Speaker Weight: 0.791 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 4.703 kg
- Packaging dimensions (W x H x D): 962 x 440 x 409 mm
- Weight incl. Packaging: 20.7 kg



Issue date 2010-03-12

Version: 1.1.10

12 NC: 8670 000 48799  
EAN: 87 12581 45952 9

© 2010 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)