Philips
DVD player/recorder



### **DVDR3390**



# Recording made easy

DVD recorder with Dual media, DivX, and i.Link

#### Plays and records what you want

- Dual Media conveniently records on both DVD+R/RW & DVD-R/RW
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, JPEG, DivX

#### Simplicity in recording and playback

- VCR Plus+ for quick and easy programming
- i.LINK digital input for perfect digital camcorder copies
- SmartAlgo ensures recording quality and compatibility
- Easy to use graphic user interface



#### DVDR3390/37

## Specifications

#### Picture/Display

• D/A converter: 10 bit, 54 MHz • A/D converter: 10 bit, 27 MHz • Picture enhancement: Progressive Scan

• D/A converter: 29 bit, 192 kHz • A/D converter: 24 bit, 96 kHz

#### **Video Recording**

- Recording Media: DVD+R/+RW, DVD-R/-RW
- Recording system: NTSC, PAL
- · Recording Modes: High Quality (HQ), Standard Play (SP), Extended Play (EP), Super Long Play (SLP)
- · Recording enhancements: Auto Chapter Marking, Manual Chapter Marking, Selectable Index Pictures
- · Audio compression: Dolby Digital, PCM

#### Video Playback

- Playback Media: CD-R/CD-RW, Video CD/SVCD. DVD+R/+RW, DVD-R/-RW, DVD+R DL
- Compression formats: MPEG2, MPEG1, DivX 3.11, DivX 6.0, DivX 4.x, DivX 5.x

#### **Audio Playback**

- Playback Media: DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/RW, Audio CD
- · Compression format: MP3, AAC, Dolby Digital, MPEG2 Multichannel

### Still Picture Playback

• Playback Media: DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/RW

- Picture compression format: JPEG
- · Picture enhancement: Slideshow, Rotate, Zoom, Slideshow with MP3 playback

#### Tuner/Reception/Transmission

• TV system: NTSC

#### **Connectivity**

- · Front / Side connections: Audio L/R in, CVBS in, i.LINK DV in (IEEE1394, 4-pin)
- Rear Connections: Composite video (CVBS) input, Composite video (CVBS) output, Digital coaxial out, S-Video out, Analog audio Left/Right in 2x, RF antenna in / TV out, Component Video output

#### Convenience

- Programming/Timer Enhancements: Daily/Weekly Repeat Program, VCR Plus+, VPS/PDC recording control, Manual Timer, One Touch Recording
- Programmable Events: 20

#### **Power**

- Power supply: 120V, 60Hz
- Power consumption: 27 W (Typical) W
- Standby power consumption: < 3 W

#### Accessories

• Remote Control 12NC: 3139 248 72281

#### **Dimensions**

- Set dimensions (W  $\times$  H  $\times$  D): 435  $\times$  43  $\times$  322 mm
- Set weight: 3 kg
- Packaging dimensions (W x H x D): 571 x 124 x 413 mm













## Highlights

#### **Dual Media**

Philips DVD Recorders support 'dual media' recording - the ability to create recordings on DVD+R/RW and DVD-R/RW discs. Now you can buy any disc and your Philips recorder will always create fully compatible recordings, which can be played on any DVD player.


#### Plays MP3, JPEG, DivX Plays MP3, JPEG, DivX

#### **VCR Plus+**



With the VCR Plus+ system, all you need to do to program your video recorder is to enter the 'Pluscode' - a single code of up to nine digits (but usually less) that is printed next to each TV program in most TV guides.

#### i.LINK digital input

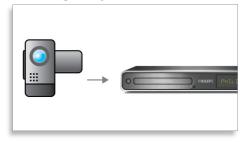

Also known as IEEE 1394 and FireWire, i.Link carries all audio and video signals via a single cable digitally, with no loss in picture and sound quality. With i.Link digital video input, you can copy your home videos in their original digital picture quality.

SmartAlgo
SmartAlgo™ ensures quality recordings, regardless of disc format or quality. Its patented self-learning adaptive technology chooses the optimal write strategy for the particular disc that is being used. By doing this, it significantly improves the reliability of the recording, ensuring zero failures when recording and guaranteeing playback compatibility.

#### Easy to use user interface

From a simple timer recording to more advanced editing features, explore all these functions with the greatest ease. With this easy-to-use graphic interface anyone can operate this recorder. The on-screenmenus are logically arrranged and easy to understand. Additionally, guiding text is provided where needed.



Issue date 2009-05-22

Version: 3.0.11

© 2009 Koninklijke Philips Electronics N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

12 NC: 8622 810 13427 UPC: 6 09585 11170 7

www.philips.com