

Philips  
Zenit cinema speakers

5.1 CH wireless rear and sub  
Bluetooth® and NFC  
HDMI 4K-2K

CSS5530B



# Embrace the look and feel of Zen

Free from wires and clutter

Embrace pure simplicity with Philips Zenit cinema speakers and enjoy natural, balanced sound from a design featuring modern, authentic materials. Smart cable management and wireless rear speakers ensure an uncluttered, sublime experience.

## Great listening experience

- Dolby Digital and Pro Logic II surround sound
- MTM speakers allow loud and truly reproduced sound
- Subwoofer base reflector radiates sound smoothly

## Designed to enhance your living space

- Smart cable management for organized cables across your room
- Wireless rear speakers and subwoofer for hassle free set-up

## Simply enjoy all your entertainment

- Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI 4K2K pass-through for ultra HD content enjoyment
- HDMI ARC to access all the sound from your TV

# PHILIPS

# Highlights

## Wireless rear speakers and sub

Wireless rear speakers and subwoofer for hassle free set-up


## Smart cable management

Smart cable management for organized cables across your room

## MTM speakers

Midwoofer-tweeter-midwoofer (MTM) configuration in all main and satellite speakers allow loud and truly reproduced sound regardless of listening position. You can always enjoy crystal clear sound without distortion no matter when you are sitting.

## HDMI 4K2K

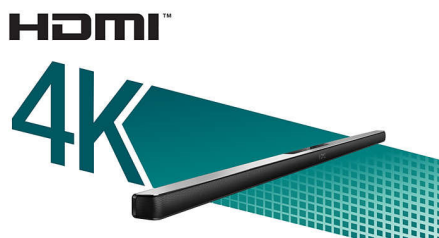


HDMI 4K2K incorporates the HDMI 1.4 standard. This adds support for ultra-high definition (UHD) video content. Presently this refers to 4K, which at its largest is 4096 pixels wide by 2160 pixels high or four times the size of a standard 1080p HD display. The term covers a slightly lower 4K resolution of 3840 pixels wide by 2160 pixels high. Both formats are supported through HDMI 1.4. 4K displays put high-end home theater systems in the same sphere used in many commercial movie

theaters. To make the speakers future resistant, this standard has been integrated for the growth of 4K TV.

## Subwoofer base reflector

Dome shaped base reflector enhances a stronger and deeper base by radiating sound smoothly in 360 degree direction. The design also prevents damping effect when the subwoofer is being placed on carpet.

## Bluetooth wireless streaming

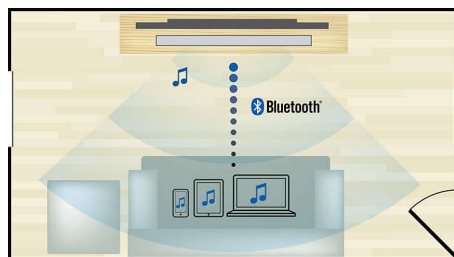

Bluetooth wireless music streaming from your music devices


## NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled

smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

## Dolby Digital and Pro Logic II

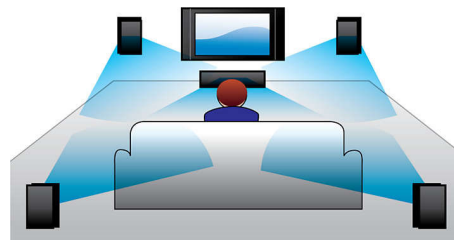

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## HDMI ARC

HDMI ARC to access all the sound from your TV

# Specifications

## Sound

- Sound Enhancement: Crystal Clear sound, Dolby Digital 5.1, Dolby Digital Prologic II
- Sound System: Dolby Digital 5.1, Dolby pro-logic 2
- Subwoofer output power: 220 W
- Center speaker output power: 40 W
- Satellite speaker output power: 40 W
- Total Power RMS @ 10% THD: 420 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers, 1 x Subwoofer
- Satellite speaker freq range: 120Hz - 18k Hz
- Drivers per Center speaker: 2 racetrack full range woofers, 1 x 1" tweeter
- Satellite speaker impedance: 5 ohm
- Subwoofer freq range: 45 - 150 Hz
- Center speaker impedance: 4 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Center speaker freq range: 80Hz – 18k Hz
- Drivers per Satellite speaker: 2 x 2.5" full range woofers, 1 x 1" tweeter
- Subwoofer impedance: 3 ohm
- System: 5.1 system

## Connectivity

- Rear Connections: Digital optical in, Audio in 3.5 mm jack, Easy-Fit Speaker Jacks, HDMI in (x1), HDMI out (4K passthrough, ARC), USB audio (5V, 500mA DC)
- Wireless connection: Bluetooth 4.1, NFC, Wireless rear speakers, Wireless subwoofer

## Outer Carton

- Length: 79.5 cm
- Number of consumer packagings: 1
- Width: 28 cm
- Gross weight: 14.916 kg
- Height: 41.5 cm
- Nett weight: 13.071 kg
- Tare weight: 1.845 kg
- UPC: 8 89446 00490 8

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough
- HDMI Features: Support 4K passthrough (30fps),

Audio Return Channel (ARC), Content Type

## Power

- Standby power consumption: <0.5 W
- Subwoofer Power supply: 110-127V AC, 50/60Hz
- Centre speaker Power supply: 100-240V AC, 50/60Hz, Via power adaptor
- Wireless box Power supply: 110-240V AC, 50/60Hz

## Packaging dimensions

- Height: 41.5 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 79.5 cm
- Depth: 28 cm
- Number of products included: 1
- Gross weight: 14.916 kg
- Nett weight: 13.071 kg
- Tare weight: 1.845 kg
- UPC: 8 89446 00490 8

## Product dimensions

- Height: 5.35 cm
- Width: 58 cm
- Depth: 9.8 cm
- Weight: 1.25 kg

## Accessories

- Included accessories: Remote Control, Wireless rear audio receiver, AAA Battery (x1), Power adapter, AC power cord (x3), Wall mount brackets (x4), Screws (x8), User Manual, World Wide Warranty leaflet, Safety & Legal Leaflet, Trademarks Sheet

## Dimensions

- Center Speaker (W x H x D): 580 x 52 x 98 mm
- Center Speaker Weight: 1.3 kg
- Subwoofer (W x H x D): 228 x 406 x 265 mm
- Subwoofer Weight: 5.7 kg
- Satellite Speaker (W x H x D): 110 x 301 x 110 mm
- Satellite Speaker Cable length: 5 m
- Satellite Speaker Weight: 1.2 kg

## Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2024-05-02

Version: 4.2.4

UPC: 8 89446 00490 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)