



Philips  
5.1 3D Blu-ray Home  
theater

3D Blu-ray  
1000W

HTB3510

## Powerful cinematic surround sound with deep bass

Pump up your home entertainment experience with the Philips home theater system HTB3510. Exposed speakers drivers offering powerful 1000W with double basepipes and immersive 3D Blu-ray Disc playback.

### Great listening experience

- Powerful speakers with double basspipes for great sound
- 1000W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound

### Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Turn your Smartphone into a remote for Philips AV products
- SimplyShare to connect & stream all entertainment wirelessly
- EasyLink to control all HDMI CEC devices via a single remote
- DivX Plus HD Certified for high definition DivX playback
- HDMI for high definition movies and picture quality
- Audio in to enjoy music from iPod/iPhone/MP3 player

### Designed to enhance your cinema at home

- Modern design to complement your home environment

# PHILIPS

5.1 3D Blu-ray Home theater  
3D Blu-ray 1000W

# Highlights

## Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## 1000W RMS power



1000W RMS power delivers great sound for movies and music

## Dolby TrueHD and DTS-HD

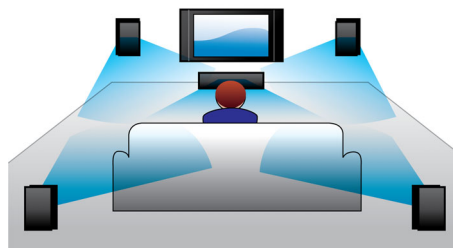

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## Double Bass Sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital

HTB3510/40

multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

## Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; and MySound to customize your listening preferences.

## SimplyShare



Philips SimplyShare lets you share your music, movies & photos from tablet, smartphone & PCs to your home theater & Blu-ray player. You can stream all entertainment directly from your DLNA-enabled devices or use remote control to access & stream media files from your PC. For the best wireless experience, install the SimplyShare app on your tablet/smartphone. You are now ready to enjoy all your entertainment effortlessly.



# Specifications

## Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, HDMI cable, User Manual, FM antenna

## Audio Playback

- Compression format: AAC, FLAC, MP3, Ogg Vorbis, WAV, WMA, Dolby Digital, DTS
- MP3 bit rates: 32 - 320kbps

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, H.264, ISO, WMV 9

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv

## Connectivity

- Rear Connections: Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Jacks, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna, USB (For VOD/BD-LIVE only), AUX in
- Front Connections: Audio in, Hi-Speed USB

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 160 W
- Standby power consumption: < 0.5 W
- Power supply: 220-240V

## Sound

- Total Power RMS @ 30% THD: 1000 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Auto Volume Leveller, Double Bass Sound, Treble and Bass Control
- Sound System: Dolby Digital Plus, Dolby True HD, DTS-HD Master Audio Essential
- Center speaker output power: 166W
- Satellite speaker output power: 4X166W
- Subwoofer output power: 166W

## Tuner/Reception/Transmission

- Number of Preset Channels: 40
- Tuner Bands: FM
- RDS: Station Name

## Outer Carton

- EAN: 87 12581 68745 8
- Gross weight: 11.22 kg
- Outer carton (L x W x H): 59.6 x 39.4 x 32.7 cm
- Nett weight: 9.9 kg
- Number of consumer packagings: 1
- Tare weight: 1.32 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 39.4 x 59.6 x 32.7 cm
- EAN: 87 12581 68745 8
- Gross weight: 11.22 kg
- Nett weight: 9.9 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.32 kg
- Type of shelf placement: Laying

## Dimensions

- Center Speaker (W x H x D): 223 x 100 x 80 mm
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 90 x 185 x 82 mm
- Front Speaker cable length: 3 m
- Main Unit (W x H x D): 435X56.3X286.5 mm
- Rear Speaker (W x H x D): 90 x 185 x 82 mm
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 178 x 300 x 343 mm
- Subwoofer cable length: 3 m
- Center Speaker Weight: 0.65 kg
- Front Speaker Weight: 0.53 kg
- Rear Speaker Weight: 0.53 kg
- Subwoofer Weight: 3.66 kg
- Main Unit Weight: 2.66 kg

## Product dimensions

- Product dimensions (W x H x D):

- 43.5 x 5.8 x 28 cm
- Weight: 2.64 kg



Issue date 2015-11-25

Version: 6.0.4

12 NC: 8670 001 02886  
EAN: 87 12581 68745 8

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To check whether Video on Demand is available in your country,  
please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).  
\* DivX, DivX Certified, and associated logos are trademarks of  
DivXNetworks, Inc. and are used under license.  
\* Dolby and the double-D symbol are registered trademarks of Dolby  
Laboratories Inc.