




Philips  
True Wireless  
Headphones

Detailed, natural sound

Noise Canceling Pro  
Clearer calls on the go  
Reliable in-ear fit

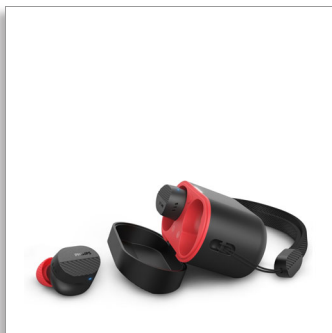

TAA5508BK

## Your workout essential

Gym to street, these noise canceling true wireless sports headphones will motivate your moves! Music and podcasts sound great, and you'll be heard clearly if you stop to take a call. A reliable in-ear fit keeps the earbuds nicely in place.

### Detailed, energizing sound

- Warm, detailed, natural. Philips sound signature
- 8 mm graphene-coated drivers
- Immerse freely. Noise Canceling Pro
- Clearer calls on the go. They'll hear you, not the noise

### For your kind of active life

- Better connectivity and sound. Next-generation Bluetooth\*
- Get out there. IPX5 water resistant
- Reliable in-ear fit. Move it, don't lose it
- Textured silicone ear-tips and reflective earbuds

### Seamlessly brilliant

- Philips Headphones app. Control noise canceling and more
- No worries. Up to 28 hours play time with the case
- Quick charge for 5 minutes and get an extra hour
- Multipoint, earbud touch controls, and voice assistants


# PHILIPS

## True Wireless Headphones

Detailed, natural sound Noise Canceling Pro, Clearer calls on the go, Reliable in-ear fit


# Highlights

### Noise Canceling Pro

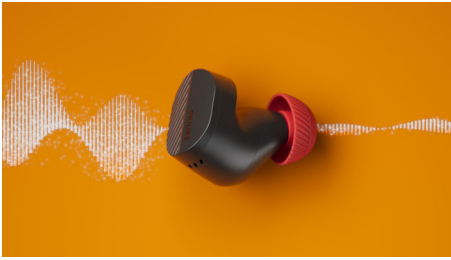


Busy gym? Windy park? Adaptive noise cancellation quickly reacts to your surroundings to suppress external noise, including wind, in real time. If your run takes you near busy roads, you can tap an earbud to activate Awareness Mode and let outside sounds in.

### Clearer calls on the go

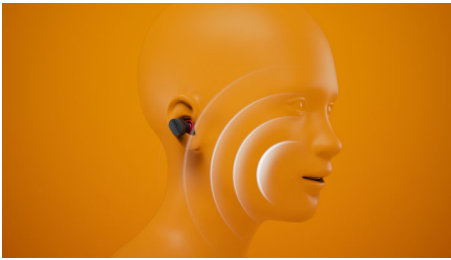

When you're on a call, a dedicated mic picks up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the traffic or the chatter of people standing next to you!

### Reliable in-ear fit

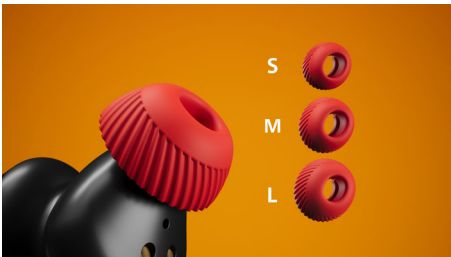

Doesn't matter how you move, these buds stay put. The silicone ear-tips feature a textured


grip pattern, which helps the earbuds stay in your ears and makes them easy to hold with sweaty hands. The surface of the earbuds is reflective, which can help with visibility at night.

### Next-generation Bluetooth



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec to give you a steadier connection and noticeably better sound. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.\*

### IPX5 water protection

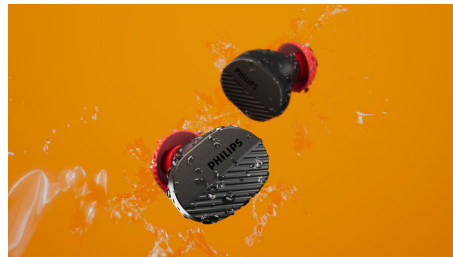

An IPX5 rating means these headphones don't mind a drop of rain or a downpour, so they'll never give you an excuse to stay on the couch! If you get a sweat on in the gym, the headphones won't mind that either.

TAA5508BK/00

### 28 hours play time with case



Don't want to worry about daily charging? You get 7 hours play time and an extra 21 hours from the small charging case. Pop the earbuds back in and they'll recharge fully in 2 hours: if you need a quick boost, just 5 minutes gives you an extra hour. The case can be charged via USB-C.

### Philips sound signature

Go big on the tunes that get you going! You get detailed, energizing sound with rich bass as the graphene-coated drivers reproduce every sparkling high and weighty low. Android or iOS, you'll enjoy all the immersion you need to keep your energy up.

### Philips Headphones app

You can use the Philips Headphones app to customize noise canceling, turn auto wind noise reduction off, and adjust the level of transparency when using Awareness Mode. An equalizer lets you fine-tune your sounds, and you can keep your headphone's software up to date via the app too.

### Multipoint connectivity

Bluetooth multipoint lets you connect to two devices at once: great if you're streaming from a phone and getting training alerts from your smartwatch. Touch controls on the earbuds cover calls, music playback, and more. Siri and the Google Assistant are both supported.

# Specifications

## Sound

- Impedance: 16 Ohm
- Speaker diameter: 8 mm
- Sensitivity: 110 dB (1K Hz)
- Frequency range: 20 - 20,000 Hz
- Maximum power input: 5 mW
- Driver type: Graphene coated

## ANC features

- ANC (Active Noise Canceling)
- ANC technology: Hybrid, ANC Pro
- Awareness mode
- Adaptive ANC
- Auto wind noise cancelation

## Telecommunication

- Microphone for call: 2 AI mics

## Connectivity

- Bluetooth version: 5.3
- Supported codec: AAC, SBC, LC3
- Maximum range: Up to 10 m
- Bluetooth profiles: A2DP, AVRCP, HFP
- Multipoint connection
- Type of wireless transmission: Bluetooth
- Wireless

## Convenience

- Google fast pair
- Philips Headphones app support
- Firmware updates possible
- Water resistance: IPX5
- Type of controls: Touch
- Mono mode for TWS

## Design

- Color: Black
- Ear fitting: In-ear
- Ear coupling material: Silicone
- In-ear fitting type: Silicone ear tip

## Power

- Music play time (ANC on): 7 + 21 hr
- Music play time (ANC off): 8 + 23 hr
- Battery type(Earbud): Lithium Polymer (Built-in)
- Battery capacity(Earbud): 53 mAh
- Battery type(Charging case): Lithium Polymer (Built-in)
- Battery capacity(Case): 600 mAh
- Battery life standby time: 200 hr
- Charging time: 2 hr

- Fast charging time: 5 mins for 1 hr
- Number of batteries: 3 pcs
- Battery weight (Total): 10.1 g

## Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support

## Accessories

- Eartips: 3 pairs(S/M/L)
- Charging cable: USB-C cable, 200 mm
- Others: 1 pcs lanyard
- Quick Start Guide

## Dimensions

- Earbud dimension(WxDxH): 2.00 x 2.57 x 2.14 cm
- Charging case dimension(WxDxH): 5.49 x 2.90 x 4.15 cm
- Total weight: 0.045 kg

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Hanging
- Packaging dimensions (W x H x D): 11.4 x 13.02 x 5.37 cm
- Gross weight: 0.132 kg
- Nett weight: 0.075 kg
- Tare weight: 0.057 kg
- EAN: 48 95229 13147 7

## Outer Carton

- Number of consumer packagings: 24
- Outer carton (L x W x H): 34.3 x 29.8 x 30.6 cm
- Gross weight: 4.544 kg
- Nett weight: 1.8 kg
- Tare weight: 2.744 kg
- GTIN: 1 48 95229 13147 4

## Inner Carton

- Number of consumer packagings: 3
- Inner carton (L x W x H): 16.2 x 14 x 13.8 cm
- Gross weight: 0.49 kg
- Nett weight: 0.225 kg
- Tare weight: 0.265 kg
- GTIN: 2 48 95229 13147 1

## UPC

- UPC: 8 40063 20307 5



Issue date 2023-08-23

Version: 5.0.1

12 NC: 8670 001 87822  
EAN: 48 95229 13147 7

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Requires a software update. The Philips Headphones app will notify you when the latest software version is available.