



Philips
Soundbar speaker

2.1 CH wired subwoofer

Bluetooth®
HDMI ARC
120W

HTL2161B



Powerful sound for any TV

with subwoofer

Fill your home with superb Bluetooth wireless music. In addition to TV & home theater, this Philips soundbar also boosts your gaming console and MP3 player. So start enjoying top-quality Virtual Surround Sound movies and music now.

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Enjoy MP3 music directly from your portable USB devices

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- External subwoofer adds thrill to the action


PHILIPS

Soundbar speaker
2.1 CH wired subwoofer Bluetooth®, HDMI ARC, 120W

HTL2161B/F7


Highlights

Virtual Surround Sound

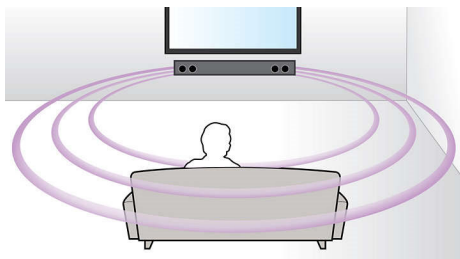

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital

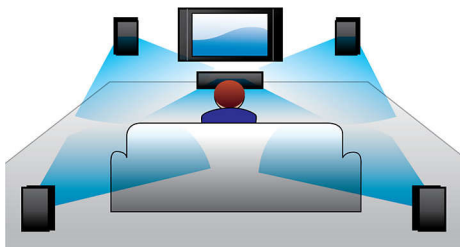

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Low-rise profile



Low-rise profile for the perfect fit in front of your TV

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It


uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

External subwoofer



External subwoofer adds thrill to the action

Flexible placement

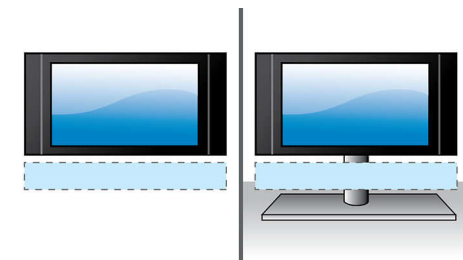

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

Twin tweeters (HC 1012)

Twin tweeters for optimum clarity performance



Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Virtual Surround Sound, Night Mode
- Sound System: Dolby Digital
- Subwoofer output power: 60W
- Speaker output power: 2 x 30 W
- Total Power RMS @ 10% THD: 120 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45-200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Subwoofer impedance: 3.6 ohm
- Speaker Drivers per side: 1 Mylar tweeter, 1 woofer
- Speaker Impedance: 8 ohm
- Tweeter Impedance: 16 ohm

Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC), Subwoofer out
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Top connections: Audio In (3.5mm), USB 2.0

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

Power

- Power consumption: 30 W
- Power supply: 50/60 Hz, 110-240V
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AC Adapter

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 843 x 52 x 60 mm
- Weight incl. Packaging: 6.3 kg
- Main Unit Weight: 1.4 kg
- Packaging (W x H x D): 790 x 225 x 300 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.5 kg
- Subwoofer cable length: 3 m

File Format

- Audio: mp3

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2024-04-13

Version: 1.0.2

UPC: 8 89446 00027 6

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com