

Philips
Car infotainment system

Designed for KIA Forte
17.8 cm (7")

CID3290



Super clear display for video and navigation

with a high resolution LCD

Drive in style with the Philips Car entertainment system CID3290. Featuring a 17.8 cm/ 7" full color display with touch panel, built-in navigation system & Bluetooth® for calls & music streaming. The long road ahead just got more enjoyable.

Enrich your AV entertainment experience

- 17.8 cm (7") high density (800x480 pixels) LCD display
- Play DVD, DVD+/-R, DVD+/-RW, (S)VCD, DivX® and MPEG4 movies
- USB Direct and SDHC card slots for music and video playback
- AV-IN for portable video and music playback

Guide you to your destinations with ease

- Built-in navigation system with preinstalled map of China
- Rich POIs for quick destination search

Superb performance with full features

- Built-in 50W x 4 amplifiers for excellent sound quality
- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- Built-in Bluetooth receiver for call and music streaming
- Rear-view camera mode for backing up safety
- Dual video outputs for entertainment in rear seats

PHILIPS

Highlights

Built-in 50W x 4 amplifiers

Built-in 50W x 4 amplifiers for excellent sound quality

DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

DVD, DVD+/-R, DVD+/-RW, (S)VCD




The Philips player is compatible with most DVD and CD discs available in the market. DVD+/-R can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types. The quality of a SVCD (Super VideoCD) plays much more sharpen picture than a VCD

because of the higher resolution. MPEG4 is designed to deliver DVD-quality video (MPEG-2) at lower data rates and smaller file sizes. The DivX codec is an advanced MPEG4-based video compression technology to shrink digital video to sizes while maintaining high picture quality.

Super anti-shock protection


Super anti-shock protection for smooth music enjoyment

USB Direct and SDHC card slots

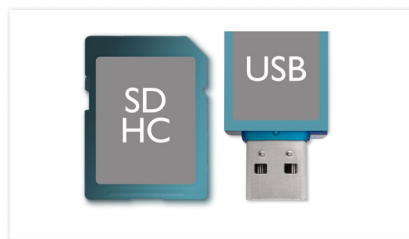

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more music, videos and photos via the built-in USB Direct and SDHC card slots.

AV-IN

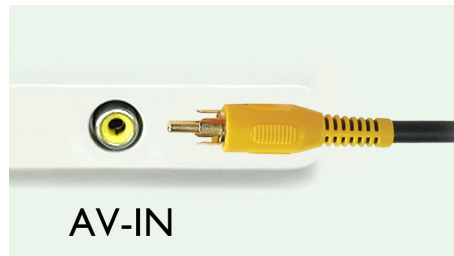

AV-IN for portable video and music playback

Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving and you don't have to miss any important calls. With the built-in Bluetooth® receiver, you can also conveniently stream your music files from your phone to your car entertainment system.

Rear-view camera mode



Rear-view camera mode for backing up safety

Dual video outputs

Dual video outputs for entertainment in rear seats



Specifications

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 7"
- Resolution: 800x480 pixels
- Aspect ratio: Widescreen
- Brightness: 350 cd/m²
- Contrast ratio (typical): 500
- Key illumination: Blue/Red

Video Playback

- Playback Media: DVD, DVD-R/-RW, DVD+R/+RW, DVD+RW, Video CD, SVCD, Picture CD, USB flash drive
- Disc Playback Modes: A-B Repeat, Angle, Chapter repeat, Disc Menu, Fast Backward, Fast Forward, OSD, PBC, Repeat, Resume Playback from Stop, Search forward/reverse, Slow Backward, Slow Forward, Still Picture, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: DivX 4.x, DivX 5.x, DivX 6.0, MPEG4

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA, WMA-CD, USB flash drive, SD Card
- Compression format: Dolby Digital, MP3, WMA, WMA9
- Disc Playback Modes: Fast Forward/Backward, Introscan, Next/Previous Album Search, Next/Previous Track Search
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320kbps and variable bit rate
- USB Direct / SD Modes: Play/Pause, Fast Backward/Fast Forward, Previous/Next, Repeat, Shuffle

Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning

- Tuner Enhancements: Auto search and store
- No. of preset stations: 18(FM), 12(AM)

Sound

- Equalizer: 3-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: Dynamic Bass Boost
- Output power (MAX): 50Wx4 Channels
- Output power (RMS): 24Wx4 channels (4 ohms, 10% T.H.D.)

Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- Microphone: Built-in microphone
- Video Output - Analog: Composite video out
- Preamp output: 2 pairs RCA(L/R)
- Sub-woofer preamp output: With gain control
- AV input: Composite (CVBS) x 2
- Bluetooth profiles: A2DP, AVRCP, Handsfree
- Bluetooth version: 2.0
- Parking camera input: Yes (Switched on automatically in car reverse)

Security/Anti-theft

- Display blackout: 10/20 sec selectable

Accessories

- User Manual: Simplified Chinese, Traditional Chinese
- Quick start guide: Simplified Chinese

Power

- Power supply: 12V DC

Dimensions

- Product dimensions (W x H x D):
293.5 x 145.9 x 187.7 mm



Issue date 2013-12-02

Version: 2.0.2

12 NC: 8670 000 65119
EAN: 69 23410 70268 2

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com