



Philips Fidelio
Soundbar 7.1.2 with
wireless subwoofer

888W max. Wireless subwoofer

Detachable surround speakers
Dolby Atmos. IMAX Enhanced
DTS Play-Fi compatible



B97

True surround sound on demand

Immerse in the drama. Feel the emotion. This Fidelio soundbar with detachable satellite speakers and Dolby Atmos will surround you with incredibly detailed, realistic sound. Deep bass adds palpable impact to effects and music.

A seamless experience

- 4K pass-through. Dual HDMI inputs
- Easily connect to your favorite sources
- Connects to your favorite voice assistant-enabled devices

Immerse in movies and music

- Dolby Atmos and Dolby Surround. Heighten the excitement
- HDMI eARC. Enjoy Dolby Atmos and DTS:X audio formats
- IMAX Enhanced. Immersive, heart-pounding audio
- Play-Fi. High-quality multi-room audio
- Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in

The surround-sound maestro

- Effortless immersion. From movie night to music
- 7.1.2 channels. 888 W max. 450 W RMS (1%THD)
- Philips Fidelio. Feel the drama
- Detachable satellite speakers. Surround sound on demand

PHILIPS

Soundbar 7.1.2 with wireless subwoofer
888W max. Wireless subwoofer Detachable surround speakers, Dolby Atmos. IMAX Enhanced, DTS Play-Fi compatible

Highlights

Effortless connection




With a Philips Fidelio soundbar, nothing comes between you and the moment. Whether it's the removable rear speakers, which can be clicked on or off in seconds on movie night. The seamless way you can switch between all your favorite sources. Or the low profile for easy placement. Just unbox, plug in, and relax.

Feel the drama



This soundbar creates an unforgettably immersive experience. 7.1.2 channels fill any room with rich, deep soundtracks, thunderous effects, and sparkling dialogue. The wireless subwoofer adds impact to every explosion and every beat.


Surround sound on demand

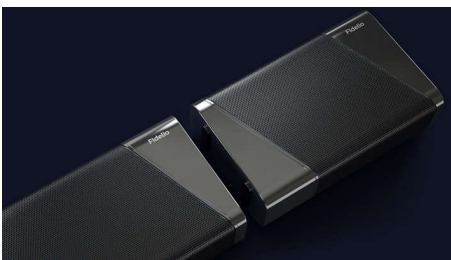

Want to fully immerse on movie night? Simply remove the detachable speakers from the ends of the soundbar and place them behind you to create a true surround-sound setup. The


dedicated center channel ensures you'll hear every word—from blockbusters to podcasts.

Dolby Atmos and Dolby Surround

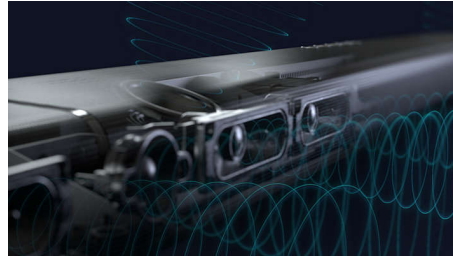


Get the full Dolby Atmos experience from this soundbar's up-firing speakers. Your favorite movies and shows will sound breathtakingly realistic as sound flows above and around you. If you're watching non-Atmos content, the soundbar switches to Dolby Surround.

IMAX Enhanced

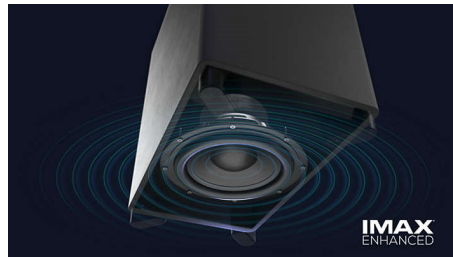

This powerful soundbar is certified IMAX Enhanced, which means it's capable of delivering an audio experience that truly takes you to another world. The 240 W subwoofer looks great freestanding, and the soundbar itself has a low profile for simple placement.

Play-Fi. Multi-room and more

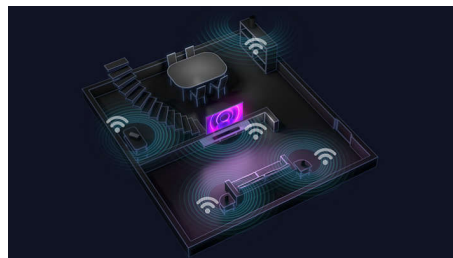

DTS Play-Fi compatibility makes this premium Fidelio soundbar a powerful component in a multi-room audio setup. You can easily sync

B97/37

and group Play-Fi-compatible speakers, and stream playlists to every room in high-quality audio without dropping a beat.

All your favorite sources

For music, Spotify Connect lets you stream Spotify's best-quality signal over Wi-Fi. You can also stream hi-res playlists from your mobile device via Apple AirPlay 2 or Bluetooth. For movies and gaming, 4K pass-through lets you connect 4K HDR video sources with no loss of resolution.

Connect with voice assistants



Ask Alexa-enabled devices, or any speaker that works with the Google Assistant, to play music through the soundbar. Prefer Siri? This soundbar works with Apple AirPlay 2, so you can ask her too. Turn the music up. Skip tracks. All completely hands-free.

4K pass-through. Dual HDMI-in

4K pass-through. Dual HDMI inputs

7.1.2 channels. 888 W max

7.1.2 channels. 888 W max. 450 W RMS (1%THD)

HDMI eARC

Lose nothing from the mix when you're immersed in the drama. This soundbar is compatible with HDMI eARC, a high-speed connection that lets you experience the full effect of advanced audio formats like Dolby Atmos and DTS:X. The soundbar also has dual HDMI inputs.

Spotify Connect. Bluetooth.

Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in



Soundbar 7.1.2 with wireless subwoofer

888W max. Wireless subwoofer Detachable surround speakers, Dolby Atmos. IMAX Enhanced, DTS Play-Fi compatible

Specifications

Sound

- Sound Enhancement: Movie, Music, Voice, Sport, Custom
- Sound System: Dolby Atmos, DTS:X, IMAX Enhanced
- Total harmonic distortion: 1%
- Speaker system output power: 888W MAX / 450W RMS (1%THD)

Loudspeakers


- Subwoofer freq range: 35 - 150 Hz
- Subwoofer type: Active, Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Number of sound channels: 7.1.2
- Number of woofers: 1
- Woofer diameter: 8"
- Soundbar freq range: 150 - 20k Hz
- Detachable rear drivers: 2 full range (L+R), 2 tweeters (L+R)

B97/37

- Center drivers: 2 full range (L+R)
- Front drivers: 4 full range (L+R), 2 tweeters (L+R)
- Side-firing drivers: 2 tweeters (L+R)
- Up-firing drivers: 2 full range (L+R)
- External subwoofer enclosure: Bass reflex

Connectivity

- Bluetooth: Receiver
- Bluetooth version: 4.2
- EasyLink (HDMI-CEC)

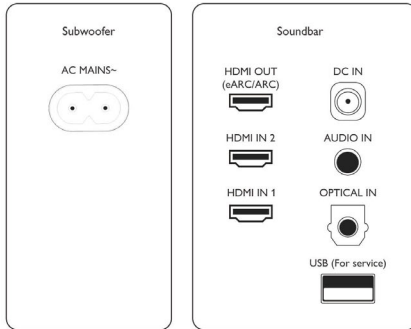

Soundbar 7.1.2 with wireless subwoofer

888W max. Wireless subwoofer Detachable surround speakers, Dolby Atmos. IMAX Enhanced, DTS Play-Fi compatible

Specifications

- Aux in: 3.5mm
- Optical input x 1
- HDMI content protection: HDCP 1.4/2.3
- HDMI IN x 2
- HDMI Out (eARC/ARC) x 1
- WiFi: 2.4GHz/5GHz, IEEE 802.11 a/b/g/n/ac
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker technology: DTS Play-Fi Multi-room
- Smart Home: Built-in Chromecast, Spotify Connect, Works with Alexa, Works with Apple AirPlay 2, Works with OK Google
- Wireless speaker connection: Satellite speakers, Subwoofer

Supported Audio Formats

- HDMI ARC/eARC: Dolby Atmos, Dolby Digital, Dolby Digital EX, Dolby Digital plus, Dolby TrueHD, DTS, DTS 96/24, DTS Digital Surround (5.1-ch), DTS:X, DTS-ES, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Play-Fi: AIFF, FLAC, MP3, WAV, MPEG4 AAC, MPEG4 M4A
- Bluetooth: SBC
- HDMI IN1/IN2: Dolby Atmos, Dolby Digital, Dolby Digital plus, Dolby TrueHD, Dolby Digital EX, DTS, DTS 96/24, DTS Digital Surround (5.1-ch), DTS:X, DTS-ES, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Optical: Dolby Digital, LPCM 2ch

Outer Carton

- Length: 116.5 cm
- Number of consumer packagings: 2
- Length: 45.9 inch
- Width: 53.5 cm
- Gross weight: 44.1 kg
- Height: 48 cm
- GTIN: 1 08 40063 20168 9
- Width: 21.1 inch
- Height: 18.9 inch
- Nett weight: 31.6 kg
- Gross weight: 97.223 lb
- Nett weight: 69.665 lb
- Tare weight: 12.5 kg
- Tare weight: 27.558 lb

Convenience

- Remote Control
- Night mode: No

Compatibility

- Smartphone/tablet APP control

Power

- Subwoofer Power supply: 100-120V AC, 60 Hz
- Main unit power supply: 100-240V AC, 50/60 Hz
- Subwoofer standby power: < 0.5 W
- Main unit standby power: < 0.5 W
- Auto standby

Packaging dimensions

- Height: 45.8 cm
- Packaging type: Box
- Width: 115 cm
- Depth: 40.5 cm
- Height: 18.0 inch
- Number of products included: 1
- Width: 45.3 inch
- Gross weight: 20.69 kg
- Depth: 15.9 inch
- Nett weight: 15.8 kg
- Gross weight: 45.613 lb
- Nett weight: 34.833 lb
- Tare weight: 4.89 kg
- Tare weight: 10.780 lb
- UPC: 8 40063 20168 2

Accessories

- Included accessories: Remote Control (with battery), Power cord, Quick start guide, World Wide Warranty leaflet

Design

- Color: Black
- Wall mountable

Dimensions

- Main Unit (W x H x D): 1312 x 55.6 x 120 mm
- Main Unit Weight: 5.97 kg
- Subwoofer (W x H x D): 230 x 400 x 407 mm
- Subwoofer Weight: 9.6 kg
- Satellite Speaker (W x H x D): 183 x 55.6 x 120 mm
- Satellite Speaker Weight: 0.786 kg

Video

- 3D pass-through
- Video Enhancement: 4K Video Pass-through, Dolby Vision, HDR10, HDR10+, HLG



Issue date 2024-03-08

Version: 9.0.1

UPC: 8 40063 20168 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

