


Philips
Micro Theatre

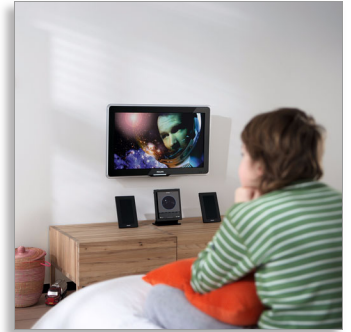

MCD289

Super-sleek wall-mountable theatre

with wireless subwoofer

Enhance movie and music playback with the MCD289 and experience easy and clutter-free installation via a digital wireless subwoofer. It plays DVD, DivX and USB direct playback. Comes with tabletop and wall-mount options.

Enrich your movie experience

- Play DVD, DivX®, (S)VCD, MP3-CD, WMA-CD, CD(RW) and Picture CD
- Dolby Digital for ultimate movie experience
- 12-bit/108 MHz video processing for sharp and natural images

Enrich your sound experience

- Digital wireless subwoofer for powerful bass
- Class 'D' digital amplifier for quality sound performance
- USB Direct for music and photo playback
- Digital Sound Control for optimised music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Loudness for bass and treble enhancement
- Total 100 W RMS

Design that blends into your interior

- Stylish slim design with table-stand and wall-mount options

PHILIPS

Highlights

Dolby Digital

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

USB Direct

Simply plug your USB device into the system and share your stored digital music and photos with your family and friends.

Digital Sound Control

Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically

adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost

Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Loudness

In the sound spectrum, high and low frequencies are relatively less audible to human ears - especially at low volumes. With the Loudness feature activated, the bass and treble will be amplified so you can savour a more balanced sound perception overall.

12-bit/108 MHz video processing

12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.



Specifications

Sound

- Output Power: 2 x 20 W RMS+ 60 W
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost, Loudness, Class "D" Digital Amplifier
- Sound System: Dolby Digital
- Output power (RMS): Total 100 W RMS

Loudspeakers

- Main Speaker: Bass Reflex Speaker System, 3" woofer
- Subwoofer type: Active

Video Playback

- Playback Media: DivX, DVD-Video, Video CD/ SVCD, Picture CD, DVD+R/+RW, DVD-R/-RW
- Disc Playback Modes: A-B Repeat, Angle, PBC, Zoom, Parental control, Disc Menu, Fast Reverse, Fast Forward, OSD, Resume Playback from Stop, Slow Motion
- DVD Region.: 2
- Loader Type: Slot

Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow with MP3 playback
- Playback Media: Picture CD, CD-R/RW, DVD+R/+RW

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Repeat/one/all/programme, Shuffle Play, 20-Track Programmable, Fast Forward/Reverse, Next/Previous Track Search
- ID3-tag support
- Loader Type: Slot
- USB Direct Modes: Fast Reverse/Fast Forward, Play/Pause, Previous/Next, Programme Play, Repeat, Shuffle, Stop

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning

- RDS: Station Name, RDS Clock Set, Programme Type, Radio Text
- Station presets: 20
- Tuner Enhancements: Auto Store

Connectivity

- Aux in: Line-in, 3.5 mm
- Headphones: 3.5 mm
- Other connections: FM Antenna, Digital audio coaxial out, AV out
- Video Output - Analogue: S-Video (on Hosiden)
- USB: USB host

Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Display Type: VFD display
- OSD Languages: English, Portuguese, Spanish, Dutch, French, German, Italian, Swedish, Turkish
- Indications: DIM mode
- Wall mountable/Ceiling Throw: Wall Mountable
- Eco Power Standby: 1 watt

Accessories

- Included accessories: FM antenna, AC Power Cord, Audio/Video cable, Scart adapter, World Wide Warranty leaflet
- Remote control: 47-key with 2 x AAA batteries
- User Manual: English
- Quick start guide: English

Dimensions

- Set dimensions (W x H x D): 200 x 250 x 110 mm
- Main speaker dimensions (W x H x D): 140 x 220 x 33 mm
- Packaging dimensions (W x H x D): 486 x 368 x 224 mm
- Subwoofer dimensions (W x H x D): 170 x 197 x 302 mm
- Weight incl. Packaging: 7.5 kg

Power

- Power supply: 50 Hz, 110-240V



Issue date 2013-05-10

Version: 2.0.5

12 NC: 8670 000 39591
EAN: 87 12581 42143 4

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com