# Always there to help you

Register your product and get support at www.philips.com/support



HTD5510 HTD5540 HTD5570

# User manual



产品中有害物质的名称及含量 Names and Contents of Hazardous Substances

	有害物质 Hazardous Substance					
部件名称 Name of the parts	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	0	0	0	0	0	0
DVD loader DVD 光盒	×	0	0	0	0	0
Subwoofer 超重低音箱	Х	0	0	0	0	0
Loudspeakers 喇叭单元	0	0	0	0	0	0
PWBs 电路板组件	×	0	0	0	0	0
Accessories (Remote control & cables) 附件(遥控器, 电源线,连接线)	×	0	0	0	0	0
Batteries in Remote Control (ZnC) 遥控器电池	Х	0	0	0	0	0

本表格依据 SI/T 11364 的规定编制。

The table is formulated according to SJ/T 11364.

- O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
- O: Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.
- ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。
- ×: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.



此标识指期限(十年),电子电气产品中的有害物质在正常使用的条件下不会发生外泄或突变, 用户使用该电子电气产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical products will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

# Contents

1	Important	4
	Safety	4 5
	Care for your product Care of the environment	5
	Cale of the environment	J
2	Your home theater	6
	Main unit	6
	Remote control	6
	Connectors	7
3	Connect and set up	9
	Connect speakers	9
	Connect to TV	10
	Connect audio from TV and other	
	devices	11
	Set up speakers	12
	Set up EasyLink (HDMI-CEC control)	12
4	Use your home theater	14
	Access the home menu	14
	Access the home menu Discs	14 14
	Discs	14
	Discs Data files	14 15 15 16
	Discs Data files USB storage devices Audio, video, and picture options Radio	14 15 15 16 17
	Discs Data files USB storage devices Audio, video, and picture options	14 15 15 16 17 17
	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke	14 15 15 16 17
	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player	14 15 15 16 17 17
5	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke	14 15 15 16 17 17 18
5	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke Choose sound Change settings	14 15 15 16 17 17 18 18
5	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke Choose sound Change settings Language settings	14 15 15 16 17 17 18 18 18
5	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke Choose sound Change settings	14 15 15 16 17 17 18 18 18 19
5	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke Choose sound Change settings Language settings Picture and video settings	14 15 15 16 17 17 17 18 18 18 19 19
5	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke Choose sound Change settings Language settings Picture and video settings Audio settings	14 15 15 16 17 17 18 18 18 19 19 19 20
5	Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke Choose sound Change settings Language settings Picture and video settings Audio settings Parental control settings	14 15 15 16 17 17 18 18 18 19 19 19 20 20

6	<b>Update software</b> Check software version	22 22
	Update software through USB	22
7	Product specifications	23
8	Troubleshooting	25
9	<b>Notice</b> Copyright Trademarks	27 27 27
10	Language code	28

# 1 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

# Safety

#### Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

#### Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

#### Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

#### Risk of overheating!

• Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

#### Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

#### Risk of swallowing batteries!

- The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

г	-		-		٦.
	г		-	1	L
	L			L	L
	•	-	-	۰.	н

This is CLASS II apparatus with double insulation, and no protective earth provided.

### Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

### Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.


Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

# 2 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

### Main unit



- Disc compartment
- 2 Display panel
- ③ ▲ (Open/Close)

Open or close the disc compartment, or eject the disc.

(4) ► II (Play/Pause)

Start, pause or resume play.

5 SOURCE

Select an audio or video source for the home theater.

#### (6) ⊕ (Standby-On)


Switch the home theater on or to standby.

Front panel display	Indication
НОППЕ	Home
Г Я J I D	Radio
d ISC	Disc
RUH I	Aux In
OPE I	Optical In
RUJ 10	Audio In
OPEN	Open
CLOSE	Close
LORJ	Load

Front panel display	Indication
госия	Browse
PRUSE	Pause
	Mute

### Remote control

This section includes an overview of the remote control.

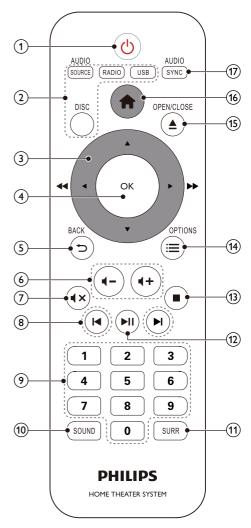

#### (1) (Standby-On)

- Switch the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

#### (2) Source buttons

- DISC: Switch to disc source. Access or exit the disc menu when you play a disc.
- AUDIO SOURCE: Select an audio input source.
- RADIO: Switch to FM radio.
- **USB**: Switch to USB storage device.

#### (3) Navigation buttons

- Navigate menus.
- In video mode, press left or right to fast backward or fast forward; press up or down to slow forward or slow backward (for DVD video only).
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.

#### (4) OK

Confirm an entry.

#### (5) **→** BACK

Return to a previous menu screen.

▲ +/-

Increase or decrease volume.

(7) **◀×** (Mute)

Mute or restore volume.

#### (8) I / ►I (Previous/Next)

- Skip to the previous or next track, chapter or file.
- In radio mode, select a preset radio station.
- 9 Numeric buttons

Select an item to play.

(10) SOUND

Select a sound mode.

(11) SURR

Select surround sound or stereo sound.

#### (12) ► II (Play/Pause)

Start, pause or resume play.

#### (13) (Stop)

Stop play.

#### (14) ≡ OPTIONS

Access more play options while playing a disc or a USB storage device.

#### (15) ▲ (Open/Close)

Open or close the disc compartment.

#### (16) (Home)

Access or exit the home menu

#### (17) AUDIO SYNC


- Select an audio language or channel.
  - Press and hold to access audio delay setting, then press Navigation buttons (left/right) to delay the audio to match the video.

# Connectors

This section includes an overview of the connectors available on your home theater.

#### Front

#### Front connectors



#### (1) • (USB)

Audio, video or picture input from a USB storage device.


#### (2) MIC

Audio input from a microphone.

#### (3) AUDIO IN

Audio input from an MP3 player (3.5mm jack).

#### Back connectors



#### 1 AC MAINS

Fixed AC power cable.

#### 2 SPEAKERS

Connect to the supplied speakers and subwoofer.

#### 3 VIDEO OUT

Connect to the composite video input on the TV.

#### (4) AUDIO IN-AUX

Connect to an analog audio output on the TV or an analog device.

#### 5 DIGITAL IN-OPTICAL

Connect to an optical audio output on the TV or a digital device.

#### 6 HDMI OUT (ARC)

Connect to the HDMI input on the TV.

#### 7 FM ANTENNA

Connect the supplied antenna for radio reception.

# 3 Connect and set up

This section helps you connect your home theater to a TV and other devices, and then set it up.

For information about the basic connections of your home theater and accessories, see the quick start guide.




- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

# **Connect speakers**

The speaker cables are color-coded for easy connection. To connect a speaker to your home theater, match the color on the speaker cable to the color on the connector

Speaker position plays a critical role in setting up a surround sound effect. For best effect. position all the speakers towards the seating position and place them close to your ear level (seated).

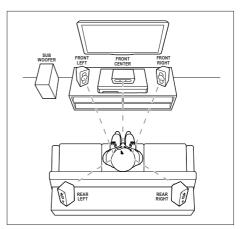

\* The actual speaker shapes may vary from the illustration above.



#### Note

Surround sound depends on factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics. Experiment with the speaker positions to find the optimum setting for you.

Follow these general guidelines for speakers placement.

- 1 Seating position: This is the center of your listening area.
- 2 FRONT CENTER (front center) speaker: Place the center speaker directly in front of the seating position, either above or below yourTV.
- 3 FRONT LEFT (front left) and FRONT **RIGHT** (front right) speakers: Place the left and right speakers in the front, and at equal distance from the center speaker. Make sure that the left, right, and the center speakers are at equal distance from your seating position.
- REAR LEFT (rear left) and REAR RIGHT (rear right) speakers:

Place the rear surround speakers to the left and right side of your seating position, either in line with it or slightly behind it.

5 SUBWOOFER (subwoofer): Place the subwoofer at least one meter to the left or right of the TV. Leave about 10-centimeter clearance from the wall.

# Connect to TV


Connect your home theater to a TV to watch videos. You can listen to the TV audio through your home theater speakers.

Use the best quality connection available on your home theater and TV.

# Option 1: Connect to TV through HDMI (ARC)

#### Best quality video

Your home theater supports HDMI version with Audio Return Channel (ARC). If yourTV is HDMI ARC compliant, you can hear the TV audio through your home theater by using a single HDMI cable.

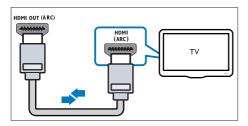

- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.
  - The HDMI ARC connector on the TV might be labeled differently. For details, see the TV user manual.
- On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
  - HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control,


such as volume control for both the TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 10)

3 If you cannot hear the TV audio through your home theater, set up the audio manually. (see 'Set up the audio' on page 11)

# Option 2: Connect to TV through standard HDMI

#### Best quality video

If your TV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

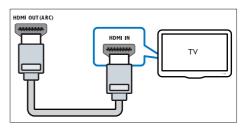

- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 9).
- On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
  - HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control, such as volume control for both the TV and the home theater: (see 'Set up EasyLink (HDMI-CEC control)' on page 10)

4 If you cannot hear the TV audio through your home theater, set up the audio manually. (see 'Set up the audio' on page (11)


#### Note

 If your TV has a DVI connector, you can use an HDMI/ DVI adapter to connect to TV. However, some of the features may not be available.

#### Option 3: Connect to the TV through composite video

#### Basic quality video

If your TV does not have HDMI connectors, use a composite video connection. A composite connection does not support high-definition video



- 1 Using a composite video cable, connect the VIDEO OUT connector on your home theater to the VIDEO IN connector on the TV
  - The composite video connector might be labeled AV IN, COMPOSITE, or BASEBAND
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 9).
- 3 When you watch TV programs, press **SOURCE** on your home theater repeatedly to select the correct audio input.
- 4 When you watch videos, switch your TV to the correct video input. For details, see the TV user manual

## Connect audio from TV and other devices

Play audio from TV or other devices through your home theater speakers.

Use the best quality connection available on your TV, home theater, and other devices.




#### Note

When your home theater and TV are connected through HDMI ARC, an audio connection is not required (see 'Option 1: Connect to TV through HDMI (ARC)' on page 8).

#### Option 1: Connect audio through a digital optical cable


Best quality audio



- 1 Using an optical cable, connect the **OPTICAL** connector on your home theater to the **OPTICAL OUT** connector on the TV or other device
  - The digital optical connector might be labeled SPDIF or SPDIF OUT

# Option 2: Connect audio through analog audio cables

Basic quality audio

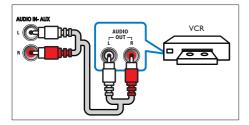

 Using an analog cable, connect the AUX connectors on your home theater to the AUDIO OUT connectors on the TV or other device.

# Set up speakers

Set up the speakers manually to experience customized surround sound.

#### Before you start

Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [Speaker Setup].
- **4** Press the Navigation buttons and OK to select and change:
  - [Speakers Volume]: Set the volume level of each speaker.
  - [Speakers Delay]: Set the delay time for speakers which are placed closer to the seating position in order to obtain equal audio transmission from all the speakers.

# Set up EasyLink (HDMI-CEC control)

This home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLinkcompliant devices that are connected through HDMI can be controlled by a single remote control.

## - Note

- Depending on the manufacturer, HDMI-CEC is known by many names. For information on your device, see the user manual of the device.
- Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

#### Before you start

- Connect your home theater to the HDMI-CEC compliant device through HDMI connection.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

#### Enable EasyLink

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video], and then press OK.
- 4 Select [HDMI Setup] > [EasyLink Setup] > [EasyLink] > [On].
- 5 On your TV and other connected devices, turn on HDMI-CEC control. For details, see the user manual of the TV or other devices.
  - On your TV, set the audio output to 'Amplifier' (instead of TV speakers). For details, see the TV user manual.

#### EasyLink controls

With EasyLink, you can control your home theater, TV, and other connected HDMI-CEC compliant devices with a single remote control.

- [One Touch Play] (One-touch play): If one-touch play is enabled, press & (Standby-On) on the remote control of your home theater to wake up the TV from standby.
- [One Touch Standby] (One-touch standby): If one-touch standby is enabled, your home theater can switch to standby with the remote control of the TV or other HDMI-CEC devices.
- [Sys Audio Control] (System audio control): If system audio control is enabled, the audio of the connected device is output through your home theater speakers automatically when you play the device.
- [Audio Mapping] (Audio input mapping):If system audio control does not work, map the connected device to the correct audio input connector on your home theater: (see 'Set up the audio' on page 11)

#### Note

To change the EasyLink control settings, press ↑
 (Home), select [Setup] > [Video] > [HDMI Setup] >
 [EasyLink Setup] > [EasyLink].

#### Set up the audio

If you cannot hear the audio output of a connected device through your home theater speakers, do the following:

- Check that you have enabled EasyLink on all the devices, (see 'Set up EasyLink (HDMI-CEC control)' on page 10) and
- on your TV, set the audio output to "Amplifier" (instead of TV speakers). For details, see the TV user manual, and
- setup the EasyLink audio control.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video], and then press OK.

#### \$ Select [HDMI Setup] > [EasyLink Setup] > [Sys Audio Control] > [On].

- To play the audio from the TV speakers, select **[Off]**, and skip the following steps.
- 5 Select [HDMI Setup] > [EasyLink Setup] > [Audio Mapping].

6 Follow the onscreen instructions to map the connected device to the audio inputs on your home theater.

 If you connect your home theater to the TV through an HDMI ARC connection, make sure that the TV audio is mapped to the ARC input on your home theater.

# 4 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

#### Before you start

- Make the necessary connections described in the Quick start guide and the user manual.
- Switch the TV to the correct source for the home theater:

# Access the home menu

The home menu provides easy access to connected devices, setup and other useful features in your home theater.

- Press ♠ (Home).
   → The home menu is displayed.
- 2 Press the Navigation buttons and OK to select the following:
  - [DISC]: Start disc play.
  - [USB]: Access the USB content browser.
  - [Karaoke]: Access Karaoke.
  - [Setup]: Access menus to change video, audio and other settings.
- 3 Press ♠ (Home) to exit.

### Discs

Your home theater can play DVDs, VCDs, and CDs. It can also play discs that you've made at home, such as CD-R discs of photos and music.

- 1 Insert a disc into the home theater.
- 2 If the disc does not play automatically, press DISC or select [DISC] from the home menu.
- **3** Press the play buttons to control play (see 'Play buttons' on page 12).

#### Play buttons

Button	Action
Navigation	Navigate menus.
buttons	
ОК	Confirm an entry.
► II (Play/	Start, pause or resume play.
Pause)	
	Stop play.
<b>I</b> ◀ / ▶I	Skip to the previous or next
	track, chapter or file.
<b>~</b> / <b>&gt;</b>	Fast backwards or fast forwards.
	Press repeatedly to change the
	search speed.
Navigation	Rotate the picture clockwise or
buttons	counter-clockwise.
(left/right)	
Navigation	Flip the picture vertically or
buttons	horizontally.
(up/down)	
DISC	Access or exit the disc menu.
AUDIO	Select an audio language or
SYNC	channel.
≣	Access more options when you
OPTIONS	play your audio, video, or media
	files. (see 'Audio, video, and
	picture options' on page 14)

#### Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 While playing video, press and hold AUDIO SYNC.
  - → Audio sync menu is displayed.
- 2 Press the Navigation buttons (left/right) to synchronize the audio with the video, and then press OK.

, Note

#### Display menu for VCD and SVCD

Display the content menu on VCD and SVCD discs.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preferences] > [PBC].
  - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

### Data files

Your home theater can play pictures, audio and video files contained in a disc or a USB storage device. Before you play a file, check that the file format is supported by your home theater (see 'File formats' on page 21).

- 1 Play the files from a disc or USB storage device.
- 2 To stop play, press ■.
  - To resume the video from where you stopped, press ► (Play).
  - To play the video from the start, press OK.
  - Note

• To play DivX DRM protected files, connect your home theater to a TV through an HDMI cable.

#### Subtitles

If your video has subtitles in multiple languages, select a subtitle language.



#### Note

- Make sure that the subtitle file has the exact same name as the video file. For example, if the video file is named 'movie.avi', name the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater supports the following file formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. If the subtitles do not appear correctly, change the character set.
- 1 Press **I OPTIONS**, and select a subtitle language under **SUBTITLE** option.
- 2 For DivX videos, if the subtitles do not appear correctly, continue the following steps to change the character set.
- 3 Press ♠ (Home).
- 4 Select [Setup], and then press OK.
- 5 Select [Preferences] > [DivX Subtitle].
- 6 Select a character set that supports the subtitle.

Character Set	Language
[Chinese]	Simplified Chinese

#### VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [General] > [DivX(R) VOD Code].
  - → The DivX VOD registration code for your home theater is displayed.

## USB storage devices

Enjoy pictures, audio, and video stored on a USB storage device such as an MP4 player.

#### What you need

- A USB storage device that is formatted for FAT or NTFS file system, and complies with the Mass Storage Class.
- A media file in one of the supported file formats. (see 'File formats' on page 21)

#### - Note

• If you use a USB extension cable, USB HUB or USB multi-reader, the USB storage device may not be recognized.

- Connect a USB storage device to the ++++
   (USB) connector on your home theater.
- 2 Press USB.
  - → A content browser is displayed.
- **3** Select a file and then press **OK**.
- 4 Use the play buttons to control play.

# Audio, video, and picture options

Use advanced features when you play audio, video, or media files from a disc or a USB storage device.

#### Audio options

1 While playing audio, press **≔ OPTIONS** repeatedly to select a repeat mode.

#### Video options

- 1 While viewing video, press ≡ OPTIONS.
  - The video options menu is displayed.
     Depending on the video source, some options are not available.
- 2 Press the Navigation buttons buttons and OK to select and change:
  - [Info]: Display the play information.
  - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

- [Aspect ratio]: Select a display ratio of picture that matches your TV screen.
- **[Repeat]**: Select a repeat play mode.
- [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
- [Subtitle]: Select subtitle language for video.
- [Angle]: Select video scenes recorded in different camera angels.
- [Microphone]: Turn the microphone on or off.
- [Karaoke setup]: Access the Karaoke setup menu.
- [Vocal]: Select a Karaoke audio mode, or turn off original vocals.

#### Picture options

- 1 While viewing pictures, press :≡ OPTIONS.
- 2 Press the Navigation buttons and OK to select and change:
  - **[Color]**: Turn on or off the color mode.
  - [Photo preview]: Display the thumbnail of photos.
  - [Repeat]: Select a repeat mode for slideshow.
  - **[Zoom]**: Zoom into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.
- 3 Press I < / ►I to go to previous or next preview page.
- 4 Press the Navigation buttons and OK to select a picture.

#### Musical slideshow

If the picture and audio files are from the same disc or USB storage device, you can create a musical slideshow.

- 1 Select an audio track and then press OK.
- 2 Press → BACK and then go to the picture folder.

- **3** Select a picture and then press **OK** to start the slideshow.
- 4 Press to stop slideshow.
- 5 Press again to stop music.

# Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.



- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- 1 Connect the FM antenna to the FM ANTENNA on your home theater.
  - For the best reception, place the antenna away from your TV or other sources of radiation.
- 2 Press RADIO to switch to radio source.
  - ➡ If you have already installed the radio stations, the last channel that you listened to is played.
  - → If you have not installed any radio stations, the message AUTO INSTALL...PRESS PLAY appears on the display panel. Press ► (Play) to install radio stations.
- **3** Use the remote control to listen or to change radio stations.

#### Play buttons

Action
Select a preset radio station.
Left/Right: Search for a radio
station.
Up/Down: Fine tune a radio
frequency.

	•
Button	Action
	Press to stop the installation
	of radio stations.
	Press and hold to erase the
	preset radio station.
RADIO	Manual:
	1) In radio mode, press
	RADIO.
	2) When a radio frequency
	blinks, press <b>OK</b> to store
	the radio station.
	3) Repeat step 1 and 2 to
	store other stations.
	Automatic:
	In radio mode, press and
	hold <b>RADIO</b> for three
	seconds to reinstall all the
	available radio station.

#### Tuning grid

In some countries, you can toggle the FM tuning grid between 50 kHz and 100 kHz.

- 1 Press RADIO to switch to radio source.
- 2 Press
- 3 Press and hold ► (Play) to toggle between 50 kHz or 100 kHz.

# MP3 player

Connect a MP3 player to play audio files.

#### What you need

- An MP3 player.
- A 3.5mm stereo audio cable.
- 1 Using the 3.5mm stereo audio cable, connect the MP3 player to the **AUDIO IN** connector on your home theater.
  - If you use 6.5mm stereo audio cable, connect the MP3 player to your home theater using a 3.5mm - 6.5mm converter jack.

- 2 Press AUDIO SOURCE repeatedly until AUDIO IN appears on the display panel.
- **3** Press the buttons on the MP3 player to select and play audio files.

## Karaoke

Play a Karaoke disc on your home theater and sing along with the music.

#### What you need

- A Karaoke microphone.
- Karaoke discs.



 To prevent loud feedback or unexpected noise, turn the microphone volume to the minimum before you connect the microphone to your home theater.

#### Play karaoke music

- 1 While playing a karaoke disc, press ♠ (Home).
  - → The home menu is displayed.
- 2 Select [Karaoke], and then press OK.
   → The karaoke setup menu is displayed.
- **3** Press the Navigation buttons (up/down) and OK to change the following settings:
  - [Microphone]: Turn the microphone on or off.
  - [Mic Volume]: Change the microphone volume.
  - [Echo Level]: Change the echo level.
  - [Karaoke Scoring]: Select a difficulty level to score your singing. After a song ends, a score is given.
  - [Karaoke Idol]: Have a Karaoke contest with your friends. Follow the on-screen instructions to start the contest.
  - [Key Shift]: Change the pitch to match your voice.
  - [Vocal]: Select a Karaoke audio mode, or turn off original vocals.

## Choose sound

This section helps you choose the ideal sound for your video or music.

#### Sound mode

Select predefined sound modes to suit your video or music.

- Press **SOUND** repeatedly to select a sound mode.
  - [Movie Mode]: Enjoy a cinematic audio experience, specially enhanced for movies.
  - [Music Mode]: Recreate the original recording environment of your music, in the studio or at a concert.
  - [Original]: Experience the original sound of your movies and music, without added sound effects.
  - [News]: Hear every word with optimized speech and clear vocals.
  - [Gaming]: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.

#### Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Press SURR repeatedly to select a surround mode.
  - [Multi Channel]:Traditional 5.1 channel for a more relaxing cinematic experience.
  - [Stereo]:Two-channel stereo sound. Ideal for listening to music.

#### Note

 If the audio source is a 2.1 channel. multi-channel mode will output 5-channel stereo sound.

#### 5 Change settings

The home theater settings are already configured for optimal performance. Unless you have a reason to change a setting, we recommend that you keep the default setting.



- You cannot change a setting that is grayed out.
- To return to the previous menu, press SACK. To exit the menu, press **f** (Home).

# Language settings

#### Onscreen display language

- 1 Press **†** (Home).
- 2 Select [Setup] and then press OK.
- Select [General] and then press OK.
  - [OSD Language]: Select a display language for menu.

#### Disc language

- 1 Press **†** (Home).
- Select [Setup] and then press OK.
- Select [Preferences] and then press OK.
  - [Audio]: Select an audio language for discs.
  - [Subtitle]: Select a subtitle language for discs.
  - [Disc Menu]: Select a menu language for discs.



#### Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 26).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

# Picture and video settings

- 1 Press **†** (Home).
- 2 Select [Setup] and then press OK. 3
  - Select [Video] and then press OK.
    - [TV System]: Select a video format supported by the TV.
    - [TV Display]: Select a picture format to fit the TV screen.
    - [Picture Setting]: Select animation for the slide show.
    - [HD JPEG]: Enable this feature to view high-definition JPEG pictures through HDMI connection
    - [HDMI Setup]: Access the following setup through HDMI connection.
      - \* [Resolution]: Select a resolution for high definition videos.
      - \* [HDMI Deep Color]: Recreate the natural world on your TV screen by displaying vivid images using billion colors. Your home theater must be connected to a Deep Color enabled TV through an HDMI cable.
      - \* [Wide Screen]: Select a display format for wide screen videos.
      - \* [EasyLink Setup]: Set up EasyLink control (see 'Set up EasyLink (HDMI-CEC control)' on page 10).



 If you change a setting, make sure that the TV supports the new setting.

## Audio settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Audio] and then press OK.
  - [HDMI Audio]: Set the HDMI audio output from your TV, or disable HDMI audio output from the TV.
  - [Audio Sync]: Set audio delay if audio and video cannot be matched.
  - [Speaker Setup]: Set up speakers for best surround sound experience.
  - [Sound Mode]: Select a predefined sound mode to suit your video and music.
  - [Treble/Bass]: Set the high frequency (treble) and low frequency (bass) settings of the home theater.
  - [Night Mode]: Select quiet or full dynamic sound. Night mode decreases the volume of loud sounds and increases volume of sounds such as speech. Applicable to Dolby Digital encoded DVD discs only.

# Parental control settings

#### Password and Ratings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] and then press OK.
  - [Password]: Set or change your password for parental control access. If you do not have a password or have forgotten your password, enter 000000.
  - [Parental Control]: Enable maturitybased restricted access for playback of DVD-video that are recorded with ratings. To play discs irrespective of the rating, select [8 Adult].

## Lock disc

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [General] and then press OK.
  - [Disc Lock]: Lock the disc to restrict play. You can lock up to 20 discs on your home theater.

#### Note

• To play a locked disc, follow the onscreen instructions to enter the password, and then press **OK**.

# Display settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] and then press OK.
  - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

# Energy saving settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [General] and then press OK.
  - [Display Dim]: Set the brightness of the home theater front panel display.
  - [Sleep Timer]: Switch the home theater to standby mode after the elapsed time.
  - [Auto Standby]: Switch the home theater to standby mode after 25 minutes of no activity when in disc or USB mode.

# Restore default settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
  3 Select [Preferences] > [Default], a
- 3 Select [Preferences] > [Default], and then press OK.
- 4 Follow the onscreen message to restore default setting.
  - → Your home theater is reset to its default settings, except for password, parental control and disc lock settings.

# 6 Update software

Philips continually tries to improve its products. To get the best features and support, update your home theater with the latest software.

Compare the version of your current software with the latest version on www.philips.com/ support. If the current version is lower than the latest version available on the Philips support website, upgrade your home theater with the latest software.

#### Caution

 Do not install a lower version of software than the current version installed on your product. Philips is not liable for problems caused due to software downgrade.

### Check software version

Check the version of the current software installed on your home theater.

- 1 Press **†** (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] > [Version Info]. → The software version is displayed.

# Update software through USB

#### What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 75MB of memory. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format.

#### Step 1: Download the latest software

- 1 Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips. com/support.
- 3 At the Philips Support website, find your product and locate the Software and drivers.
  - → The software update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory.
- 6 Disconnect the USB flash drive from your computer.

#### Step 2: Update the software

#### Caution

- Do not switch off the home theater or remove the USB flash drive during the update.
- 1 Connect the USB flash drive containing the downloaded file to your home theater.
  - Make sure that the disc compartment is closed and there is no disc inside.
- 2 Switch your TV to the correct source for your home theater.
- **3** Follow the onscreen instructions to confirm the update.
  - → Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.

# 7 Product specifications

#### - Note

• Specifications and design are subject to change without notice.

#### Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD
Europe, United Kingdom	
Asia Pacific, Taiwan, Korea	
Latin America	
Australia, New Zealand	
Russia, India	
China	

#### Media formats

 DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX media, USB storage device

#### File formats

- Audio: .mp3, .wma
- Video: .avi, .divx, .mpg, .mpeg,
- Picture: .jpg, .jpeg

#### Amplifier

- Total output power: 1000W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX:2V
  - AUDIO IN: 1 V

#### Video

- Signal system: PAL / NTSC/Multi
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p

#### Audio

- S/PDIF Digital audio input:
  - Optical:TOSLINK
  - Sampling frequency:
    - MP3: 32 kHz, 44.1 kHz, 48 kHz
    - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 32 kbps 320 kbps
  - WMA: 64 kbps 192 kbps

#### Radio

- Tuning range:
  - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
  - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response:
   FM 200 Hz-12.5 kHz / ±6 dB

#### USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class
   (MSC)
- File system: FAT16, FAT32, NTFS
- USB port: 5V ===, 500mA

#### Main unit

- Power supply:
  - Europe/China/Russia/India: 220-240V~, 50 Hz
  - Latin America/Asia Pacific: 110-127 V/220-240 V~, 50-60 Hz
- Power consumption: 140 W
- Standby power consumption: ≤ 0.5 W
- Dimensions (WxHxD): 360 x 58 x 325 mm
- Weight: 2.3 kg

#### Subwoofer

- Output power: 166 W RMS (30% THD)
- Impedance: 4 ohm
- Speaker drivers: 203 mm (8") woofer
- Dimensions (W x H x D): 233 x 365 x 310 mm
- Weight: 4.82 kg
- Cable length: 3.3 m

#### **Speakers**

#### Center speaker:

- Output power: 166 W RMS (30% THD)
- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 78 mm (3") full range
- Dimensions (W x H x D): 223 x 100 x 80 mm
- Weight: 0.65 kg
- Cable length: 2.25 m

#### Front/Rear speaker:

- Output power: 4 x 166 W RMS (30% THD)
- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 78 mm (3") full range
- Dimensions (W x H x D):
  - HTD5510: 90 × 185 × 82 mm (front/rear)
    - HTD5540: 90 × 185 × 82 mm (front); 247 × 1090 × 242 mm (rear)
  - HTD5570: 247 × 1090 × 242 mm (front/rear)

- Weight (front):
  - HTD5510: 0.53 kg/each
  - HTD5540: 0.53 kg/each
  - HTD5570: 2.66 kg/each
- Weight (rear):
  - HTD5510: 0.56 kg/each
  - HTD5540/HTD5570: 2.72 kg/each
- Cable length (front): 3.25 m
- Cable length (rear): 10.25 m

#### Remote control batteries

• 1 × AAA-R03-1.5 V

#### Laser

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 650-662 nm (DVD), 785-795 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

# 8 Troubleshooting

#### Warning

• Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www.philips.com/support.

#### Main unit

# The buttons on the home theater do not work.

• Disconnect the home theater from the power supply for a few minutes, then reconnect.

#### Picture

#### No picture.

• Make sure that the TV is switched to the correct source for the home theater.

#### No picture on a TV connected through HDMI.

- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- Wait for 10 seconds for auto recovery, or change the HDMI video setting (see 'Picture and video settings' on page 17).

#### Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

#### Sound

#### No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices. However, you do not need a separate audio connection when the home theater and TV are connected through an HDMI ARC connection.
- Set up the audio for the connected device (see 'Set up the audio' on page 11).
- Reset your home theater to its factory settings (see 'Restore default settings' on page 19), and then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

#### Distorted sound or echo.

• If you play audio from the TV through the home theater, make sure that the TV is muted.

#### Audio and video are not synchronized.

- 1) Press and hold AUDIO SYNC.
  - 2) Press the **Navigation buttons** (left/right) within five seconds to synchronize the audio with the video.

#### Play

#### Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 21).
- Make sure that the home theater supports the region code of the disc.
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

#### Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

#### DivX subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 13).
- Select the correct character set (see 'Subtitles' on page 13).

# Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater.

#### 'input invalid' or 'x' sign appears on the TV.

• The operation is not possible.

#### EasyLink does not work.

- Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is turned on (see 'Set up EasyLink (HDMI-CEC control)' on page 10).
- For TVs from different manufacturers, the HDMI CEC could be called differently. Check theTV user manual on how to enable it.

# When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

# 9 Notice

This section contains the legal and trademark notices.

# Copyright

#### Be responsible Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

# Trademarks

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DivX °, DivX Ultra °, DivX Certified ° and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Ultra <sup>®</sup> Certified to play DivX <sup>®</sup> video with advanced features and premium content. ABOUT DIVX VIDEO: DivX <sup>®</sup> is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified <sup>®</sup> device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified <sup>®</sup> device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

# 

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



# 10 Language code

Abkhazian	6566
Afar	6565
Afrikaans	6570
Amharic	6577
Arabic	6582
Armenian	7289
	6583
Assamese	
Avestan	6569
Aymara	6589
Azerhaijani	6590
Bahasa Melayu	7783
Bashkir	6665
Belarusian	6669
Bengali	6678
Bihari	6672
Bislama	6673
Bokmål, Norwegian	7866
Bosanski	6683
Brezhoneg	6682
Bulgarian	6671
Burmese	7789
Castellano, Español	6983
Catalán	6765
Chamorro	6772
Chechen	6769
Chewa; Chichewa; Nyanj	a <b>7889</b>
中文	9072
Chuang; Zhuang	9065
Church Slavic; Slavonic	6785
Chuvash	6786
Corsican	6779
Česky	6783
Dansk	6865
Deutsch	6869
Dzongkha	6890
English	6978
Esperanto	6979
Estonian	6984
Euskara	6985
Ελληνικά	6976
Faroese	7079
Français	7082
Frysk	7089
Fijian	7074
Gaelic; Scottish Gaelic	7168
Gallegan	7176
Georgian	7565
Gikuyu; Kikuyu	7573
Guarani	7178
Gujarati	7185
Hausa	7265
Herero	7290
Hindi	7273
Hiri Motu	7279
Hrwatski	6779
Ido	7379
Interlingua (Internationa	7365
Interlingue Inuktitut	7365
mukutut	/ 385

Inupiaq	7375
Irish	7165
Islenska	7383
Italiano	7384
lvrit	7269 7465
Japanese Javanese	7465
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	7589
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574 7585
Kurdish Lao	7585
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburgan; Limburger	7673
Lingala	7678
Lithuanian	7684
Luxembourgish;	7666
Macedonian	7775
Malagasy	7771
Magyar	7285
Malayalam	7776
Maltese	7784
Manx Maori	7186 7773
Marathi	7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369 7868
North Ndebele	7878
Norwegian Nynorsk; Occitan; Provencal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian	7065
Polski	8076
Português	8084

Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian	8376
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese Suomi	8385
Swahili	7073 8387
	8383
Swati Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765
Welsh	6789
Wolof Xhosa	8779 8872
Yiddish	8872 8973
Yoruba	8979
Zulu	9085
Luiu	2005

# 11 Index

# A

amplifier audio	21
predefined modes	16
specifications	21
audio options	14

# С

care	
product	3
connectors	
front connectors	5
control	
disc play	12
main unit	4

#### D discs

discs	
audio options	14
control buttons	12
options	14
play	12
synchronize picture and sound	12
time search	14
titles	14
display	
VCD/SVCD menu	13
display panel	4

## F

FM antenna

6

16

#### H HDMI

#### **K** karaoke

### L

language	9
----------	---

language code	26
---------------	----

# Μ

main unit	
overview	4
specifications	22
troubleshooting	23
media formats	21
MP3	
connector	5

### 0

options	
picture	14
overview	
main unit	4
remote control	4

#### Ρ

picture options troubleshooting	14 23
picture options	14
play	
discs	12
radio	21
troubleshooting	23
product specifications	21

### R

radio	
FM antenna	6
specifications	21
tuning grid	15
region codes	21
remote control	
batteries	22
overview	4
repeat	14

# S safety

salety	
use of the product	2
sound	
predefined sound mode	16
surround sound	16
synchronize picture and sound	12
troubleshooting	23
sound mode	16
speakers	
specifications	22
surround sound	16
subwoofer	
specifications	22
synchronize picture and sound	12

### Т

•	
time search	14
titles	14
trademarks	25
troubleshooting	
connection	23
main unit	23
picture	23
play	23
sound	23
tuning grid	15

# U

USB	
format	21
USB storage device	
options	14
specifications	21

# 

VIDEO	
synchronize picture and sound	12
video formats	21
video options	14



Specifications are subject to change without notice © 2014 Koninklijke Philips N.V. All rights reserved. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.



HTD5510/5540/5570\_93\_UM\_V2.0