

Philips 2000 series
DVD player

USB 2.0

DivX Ultra
5.1 channel audio output



DVP2856

Enjoy it all - from DVD or USB

5.1 Ch. Surround Sound

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience with 5.1 Ch. Surround Sound

Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time
- Smart Picture provides personalized image settings

Easy to use

- EasyLink to control all HDMI CEC devices via a single remote
- One-touch MP3 creation directly from CDs onto USB sticks

Play all your movies and music

- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- ProReader Drive for smooth playback on virtually any disc

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives


PHILIPS

DVD player
USB 2.0 DivX Ultra, 5.1 channel audio output

DVP2856/94

Highlights

12-bit/108MHz video processing

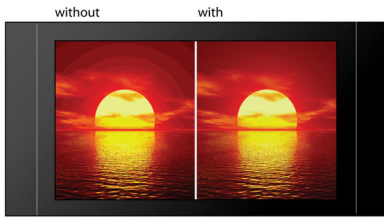

12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

Screen Fit



Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply

press the Screen Fit button, choose the format and enjoy your movie in full-screen

One-touch MP3 creation



Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

USB Media Link



The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.



Specifications

File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mpeg, mpg

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

Audio Playback

- Compression format: Dolby Digital, MP3, PCM, WMA
- MP3 bit rates: 8 - 320 kbps
- WMA bit rates: 32 - 192 kbps

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analog audio Left/Right out, Analog audio Multi-channel out, Composite video (CVBS) output, Digital coaxial out

Convenience

- Child Protection: Child Lock, Parental Control

Power

- Power consumption: < 10 W
- Power supply: 220-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Sound

- Crosstalk (1kHz): > 100 dB
- D/A converter: 24 bit, 192 kHz
- Distortion and Noise (1kHz): > 85 dB
- Dynamic Range (1kHz): > 90 dB
- Frequency response: 30-20000 Hz
- Signal to noise ratio: > 100 dB
- Sound System: Dolby Digital

Accessories

- Included accessories: AAA Battery (x1), Audio/Video cable, Remote Control, User Manual, Warranty Leaflet, World Wide Warranty leaflet

Dimensions

- Product (W x H x D): 270 x 37.5 x 201 mm
- Product weight: 1 kg
- Packaging (W x H x D): 316 x 77 x 280 mm
- Weight incl. Packaging: 1.38 kg

Product dimensions

- Product dimensions (W x H x D): 27 x 3.3 x 21 cm
- Weight: 0.89 kg

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 28 x 31.6 x 7.7 cm
- Gross weight: 1.3 kg
- Nett weight: 1 kg
- Tare weight: 0.3 kg
- EAN: 48 95185 61194 5

Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 31.6 x 28 x 7.7 cm
- Gross weight: 1.3 kg
- Nett weight: 1 kg
- Tare weight: 0.3 kg
- EAN: 48 95185 61194 5



Issue date 2017-04-04

Version: 2.1.2

12 NC: 8670 001 27351
EAN: 04 89518 56119 45

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com