



Philips
Headphones

8.6 mm drivers/closed-back
In-ear

SHE3850SL

Bright beats, punchy bass

High quality vacuum metallised matt finishing

Stylish Philips MyJam Chromz in-ear headphones deliver punchy bass, comfort and good looks. Multiple vacuum metallised, matt coating colour options match the iPhone 6S.

Lasting comfort

- Oval sound tube insert provides ergonomic comfort fit
- 3 interchangeable rubber ear caps for an optimal fit
- Vacuum metallised, stylish matt coat offers extra protection

Revel in quality sound

- Powerful drivers reproduce clear sound with big bass
- Perfect in-ear seal blocks out external noise


Enhanced durability

- Reinforced cable relief enhances durability and connectivity

PHILIPS

Highlights

3 sizes of ear caps

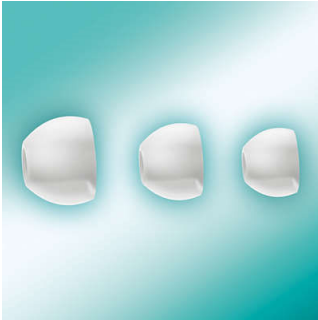


Ear caps come in a choice of 3 sizes - small, medium and large - for a personalised and perfect fit.

metallised matt coating



A high quality vacuum metallised matt coating offers extra surface protection and matches the iPhone 6S perfectly.

Oval sound tube

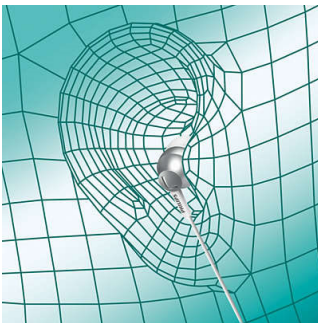

An oval sound tube insert provides ergonomic comfort to fit the true shape of the ear.

Perfect in-ear fit



Ultra small earphones fit perfectly inside the ear, creating a seal that blocks out external noise.

Powerful drivers



Philips Chromz in-ear headphones house powerful speakers in a compact design to ensure a perfect fit with clear sound with big bass.

Reinforced cable relief

To extend the life of your headphones, a soft rubber relief between them and the cable protects the connection from damage through repeated bending.

Specifications

Sound

- Acoustic system: Closed
- Frequency response: 12–22,000 Hz
- Diaphragm: PET
- Voice coil: CCAW
- Speaker diameter: 8.6 mm
- Sensitivity: 107 dB
- Maximum power input: 20 mW
- Impedance: 28 ohm

Connectivity

- Type of cable: Copper
- Cable Connection: symmetrical
- Finishing of connector: chrome-plated
- Cable length: 1.2 m
- Connector: 3.5 mm

Outer Carton

- Length: 38 cm
- Number of consumer packages: 24
- Width: 21 cm
- Gross weight: 1.347 kg
- Height: 15 cm
- GTIN: 1 69 25970 70915 3
- Net weight: 0.288 kg
- Tare weight: 1.059 kg

Inner Carton

- Length: 17.9 cm
- Number of consumer packages: 3
- Width: 9.5 cm
- Height: 6 cm
- Net weight: 0.036 kg
- Gross weight: 0.135 kg
- Tare weight: 0.099 kg
- GTIN: 2 69 25970 70915 0

Packaging dimensions

- Height: 17.2 cm
- Packaging type: Blister
- Type of shelf placement: Both
- Width: 5 cm
- Depth: 3 cm
- Number of products included: 1
- EAN: 69 25970 70915 6
- Gross weight: 0.036 kg
- Net weight: 0.012 kg
- Tare weight: 0.024 kg

Accessories

- Eartips: 3 sizes S, M, L

Design

- Colour: Silver



Issue date 2024-03-12

Version: 3.0.5

EAN: 69 25970 70915 6

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com