


Philips
Portable DVD Player



PET831

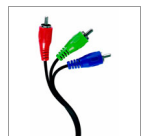

Slim design with slot-in DVD

with Smart Car Mount and SD card slot

The magic of movies and music comes to life on the tablet-style Philips PET831 Portable DVD Player with 8.5" LCD display. Plus Zero Bright Dot™ ensures optimal screen quality. Comes with SD card slot and Component Video output.

Immerse yourself in AV entertainment on the go

- Play DVD, DVD+/-R and DVD+/-RW, (S)VCD, DivX® & MPEG4 movies
- Play MP3/WMA-CD, CD and CD-RW
- Share JPEG image files with Picture CD
- SD/MMC card slot for added multimedia support

Optimised viewing anywhere

- Zero Bright Dot™ screen for optimal screen quality
- 8.5" TFT colour LCD display for high-quality viewing
- Watch movies in 16:9 widescreen format
- Built-in quality stereo speaker

For ultimate convenience

- Up to 4-hour playback with rechargeable battery*
- Smart Car Mount for ease of use
- Protective pouch included

PHILIPS
sense and simplicity

Specifications

Picture/Display

- **Display screen type:** LCD TFT
- **LCD panel type:** Anti-glare polariser
- **Diagonal screen size (inch):** 8.5 inch
- **Resolution:** 480(w) x 234(H) x 3(RGB)
- **Brightness:** 200 cd/m²
- **Contrast ratio (typical):** 250:1
- **Effective viewing area:** 187.2x105.3
- **Pixel pitch:** 0.13 (W) x 0.45 (H)
- **Response time (typical):** 30 ms

Sound

- **Output Power:** 250 mW RMS (built-in speakers)
- **Output power (RMS):** 10 mW RMS (earphone)
- **Signal to noise ratio:** >80 dB (Line out), >76 dB (earphone), >70 dB (speaker)

Video Playback

- **Playback Media:** DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, WMA, DVD+R/+RW, CD
- **Disc Playback Modes:** A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Slow Reverse, Slow Forward, Zoom
- **Video disc playback system:** NTSC, PAL
- **Compression formats:** MPEG4, Divx

Audio Playback

- **Compression format:** Dolby Digital, MP3, WMA
- **Playback Media:** CD, CD-R, CD-RW, MP3-CD, WMA-CD
- **File systems supported:** ISO-9660, Joliet
- **MP3 bit rates:** 32 - 320 kbps
- **WMA bit rates:** 32 - 192 kbps

Connectivity

- **AV output:** Composite (CVBS) x1
- **DC in:** 9 V
- **Headphone jack:** 3.5 mm Stereo Headphone x 2
- **Other connections:** Component Video out Interlaced
- **SD/MMC card slot:** SD card slot

Convenience

- Battery charging indication
- Shock proof

Accessories

- **AC/DC adapter:** AY4129/00 (110-240 v, 50/60 Hz)
- **Cables:** 1 x AV Cable, 1 x Component Cable
- **Car kit:** cigarette outlet adapter, 12VDC
- **Remote control:** AY5507 slim remote
- **User manual:** 16 languages
- **Smart car mount:** 1 pcs
- **Pouch:** Protective pouch

Power

- **Battery Type:** Built-in battery

Dimensions

- **Master carton dimensions:** 458 x 236 x 333 mm
- **Master carton quantity:** 3
- **Master carton weight:** 7.28 kg
- **Packaging type:** D-box
- **Packaging dimensions (W x H x D):** 316 x 205 x 145 mm
- **Product dimensions (W x H x D):** 255 x 170 x 31 mm
- **Product weight:** 0.97 kg

Product highlights

Play DVD/DivX® & MPEG4

With DivX® support, you are able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX® CDs can be played back on selected DVD players, DVD Recorders and Home Theatre Systems.

SD/MMC card slot

View and share your video clips, photos and music — easily and instantly. For ultra convenience, the player features a built-in card slot for SD/MMC memory cards. Simply insert the memory card into the slot located on the side of the player to access your multimedia files stored on the card.

Zero Bright Dot™ screen

Enjoy highest-quality images that are free from annoying blank spots on the LCD screen. LCD displays commonly have imperfections, termed 'bright dots' by the LCD industry. A limited number of bright dots was once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used for our Portable DVD Players, our LCD displays are produced with zero tolerance for bright dots. Select Portable DVD Players come with Philips Zero Bright Dot™ Policy to guarantee optimal screen quality.

Smart Car Mount

To enjoy entertainment on the go, why not take your portable DVD player from home on the road with you? A unique Car Mount system ensures safety and ease of use, with a quick-release arm that facilitates easy removal of the player when not in use. You can take the portable DVD player with you, leaving just the Mount behind in the car.



Issue date 2009-02-16

Version: 1.0.3

12 NC: 8670 000 37401
EAN: 87 12581 39861 3

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com