

Philips 5000 series
Blu-ray Disc/ DVD player

Smart TV Plus

Skype Ready RMVB



BDP5500

Blu-ray 3D and the best of Internet on your TV

Be amazed by the new dimension 3D Blu-ray brings to your movie experience at home. Enjoy the best of Internet on your TV with Smart TV Plus, hassle-free with the speedy built-in WiFi-n. And playback more than ever before with DivX Plus HD.

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- Smart TV Plus to enjoy online services & multimedia on TV
- Instant 2D to 3D conversion for a lifelike movie experience
- RealMedia Video for movie playback from your PC

Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound

Engage more

- Built-in WiFi-n for faster, wider wireless performance
- SimplyShare to connect & stream all entertainment wirelessly
- USB 2.0 plays video/music from USB flash/hard disk drive
- Turn your Smartphone into a remote for Philips AV products
- USB keyboard connectivity for easy Smart TV and Web Browsing
- Skype™ ready to make high quality video call easily



PHILIPS
sense and simplicity


Highlights

Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

Dolby TrueHD and DTS-HD MA

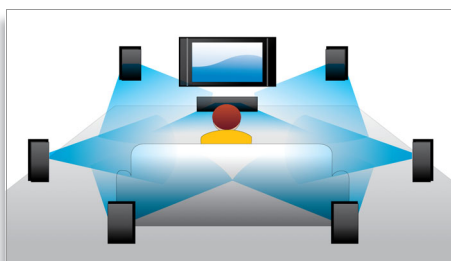

DTS-HD Master Audio and Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX

technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Smart TV Plus



Philips home theater & Blu-ray player with Smart TV Plus offer you an array of enhanced features, including Net TV, SimplyShare & MyRemote. Net TV brings a wide range of online information & entertainment to your TV for services like video-on-demand. With SimplyShare, you can access photos, music & movies stored on your PC from the comfort of your couch. You can also use your smartphone/tablet to control your home theater via Philips MyRemote app.

Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

Skype™ ready

Add a new dimension to your calls and contact your friends and relatives as if you are there. Simply plug in a selected* Skype™ camera to your home theater or Blu-ray player and enjoy HD video and excellent sound quality from the comfort of your couch. Use your familiar list of Skype™ contacts from your current Skype™ account and start calling! Skype™ camera is sold separately.

SimplyShare



Philips SimplyShare lets you share your music, movies & photos from tablet, smartphone & PCs to your home theater & Blu-ray player. You can stream all entertainment directly from your DLNA-enabled devices or use remote control to access & stream media files from your PC. For the best wireless experience, install the SimplyShare app on your tablet/ smartphone. You are now ready to enjoy all your entertainment effortlessly.

RealMedia Video

RealMedia Video for movie playback from your PC

Specifications

Accessories

- Included accessories: 2 x AAA Batteries, CD-R (User Manual), Power cord, Product Registration Card, Quick start guide, Remote Control
- Optional accessories: QWERTY keyboard, Selected Skype camera*

Audio Playback

- Compression format: AAC, MP3, Ogg Vorbis, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- BD Region Code: A
- DVD Region Code: 3
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, RMVB, WMV 9, XviD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color

File Format

- Audio: aac, mka, mp3, ra, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, flv, m2ts, mkv, mov, mp4, mpeg, mpg, wmv

Multimedia Applications

- Playback Formats: RMVB (RealMedia var. bitrat)
- Video Playback Formats: RealMedia (.rm, .rmvb, RV8-10)

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0
- Network connections: 802.11 b/g/n, Built-in WiFi
- Rear Connections: Analog audio Left/Right out,

Composite video (CVBS) output, Digital coaxial out, Ethernet, HDMI output, USB 2.0, SD/SDHC Card slot

- PC network link: DLNA 1.5 certified
- Smart TV Plus: MyRemote App, Net TV, SimplyShare

Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- Ease of Use: Fast wake up, MyRemote app
- EasyLink (HDMI-CEC): One touch play, One touch standby, 21:9 format subtitle support, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: Bahasa Melayu, English, Thai, Traditional Chinese
- Skype ready

Dimensions

- Product (W x H x D): 435 x 38 x 213 mm
- Product weight: 1.82 kg
- Packaging (W x H x D): 495 x 87 x 300 mm
- Weight incl. Packaging: 2.26 kg

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- D/A converter: 12Bit/148MHz
- Blu-ray 3D: 2D to 3D conversion, Full HD 1080p
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Power

- Power consumption: 20 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: 0.3 W

Sound

- D/A converter: 24 bit, 192 kHz
- Dynamic Range (1kHz): =90 dB
- Frequency response: (20kHz): = |0.2|dB (Max./Min. 2ch, DVD) Hz Hz
- Signal to noise ratio: = 100 dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD Master Audio, DTS-HD High Resolution Audio



Issue date 2013-03-21

Version: 5.2.6

12 NC: 8670 000 83754
EAN: 87 12581 62480 4

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Designated FreeTalk Skype camera <TALK-7191>, for details, please visit www.freetalk.me/philips