




Philips  
Universal Remote Control

4in1 UK SAT

SRU5040

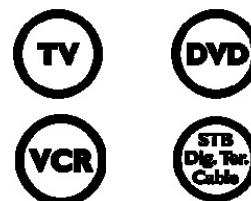

## Full function replacement

Operates more than 1000 brands

A stylish chrome universal remote control that gives you complete control over most brands of TV, DVD player/recorder, VCR satellite receiver or cable set-top box. It has dedicated satellite keys and learns codes from your old remote.

### Ideal replacement for your old remote

- 4-in-1 remote for your TV, VCR, STB and DVD player/recorder.
- Convenient IR learning from another remote
- Ready for use with Philips equipment

### Great convenience

- Dedicated SKY keys for easy Digital SAT box control
- Eye-catching chrome finish
- Drop it, splash it and just keep on using it!
- Battery low indication shows when to refresh batteries

### Quick and easy set-up

- Automatically searches for your equipment brand
- Batteries are included for unwrap-and-zap
- For questions and assistance call our URC service line
- URC support service via dedicated website

**PHILIPS**  
sense and simplicity

## Specifications

### Convenience

- **Universal IR database:** TV, VCR, DVD, SAT, CABLE
- **TV functions:** Program up/down, Volume up/down, mute, Power/standby, Digit keys, AV selection, external, Menu control, Colour/Brightness control, Teletext keys, Fast text keys, Previous program, Sleep/timer, 16:9, Guide, info
- **Teletext enhancements:** Fast text
- **DVD functions:** Transport keys, System menu control, Disc menu control, Digit keys
- **VCR functions:** Transport keys (6), Showview, VCR plus, Menu control
- **SAT/CBL functions:** Digit keys, Menu control, Guide, info, Favourites, Text functions, Unique SAT provider functions
- **Ease of Installation:** Autosearch
- **Installation steps:** 2
- **Copy key function**
- **Language support:** GB
- **Number of keys:** 40
- Pre-programmed for Philips
- **Regulatory Approvals:** CE Mark
- Splash proof

### Accessories

- **Battery:** Yes, 1.5V Battery R03/AAA

### Infrared Capabilities

- **Operating distance:** 33 ft (10 m)
- **Transmitting LEDs:** 1
- Universal IR code database
- **Number of brands in database:** Over 1100
- **Carrier frequency range:** 24 - 55 kHz
- **Transmission angle:** 90 degree
- Learning IR codes
- **Learning frequency range:** 20 kHz to 70 kHz and 455 kHz

### Power

- **Battery lifetime:** 12 Months
- **Number of batteries:** 2
- **Battery type:** AAA

### Outer Carton

- **Quantity:** 6
- **EAN/UPC/GTIN:** 87 10895 93599 9
- **Height:** 172 mm
- **Length:** 312 mm
- **Width:** 151 mm

### Packaging Data

- **I2NC:** 908210006482
- **EAN/UPC/GTIN:** 87 10895 93598 2
- **Height:** 33 mm
- **Length:** 304 mm
- **Width:** 157 mm

## Product highlights

### 4in1 remote control

Replace a table full of remote controls with one robust unit that'll operate your TV, VCR, satellite receiver (or cable STB set-top box) and DVD, regardless of the brand or model.

### Learning functionality

Learning functionality refers to the process through which a remote control captures and stores infrared signals from other remotes for later use. When device codes are not included in the on-board database, they can always be learned from the original remote, simply by pointing to it.

### Pre-programmed for Philips

If you have Philips equipment, you can use your universal remote control without programming it because all keys are pre-set for Philips.

### Dedicated SKY keys

Specially labelled function keys on the remote control make operating your SKY digital set-top box easier than ever before.

### Chrome finish

Stylish chrome finish that looks good and complements the latest equipment design.

### Splash and shock resistant

The tough housing can withstand splashes and spilled drinks, and is able to withstand a drop of at least one meter onto a hard floor.

### Battery-low indication

To know in time when the batteries need to be recharged or replaced.

### Auto brand search

Getting your new remote control working is simply a case of having your remote automatically search for the most suitable code for your equipment.



Issue date 2008-10-14

Version: 1.0.5

I2 NC: 9082 100 06482  
EAN: 87 10895 93598 2

© 2008 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)