



Philips
Cordless phone

25 min answering machine
1.6" display/ amber backlight
Speakerphone
2 handsets



D2052B



Talk Handsfree

Great sound reproduction, without having to hold the phone to your ear – so you can talk completely handsfree. A true plug & play device with a user-friendly menu and an inbuilt answering machine, a great chat has never been easier.

Nice and simple

- Freestanding handset with a speaker for easy handsfree calls
- Up to 25 minutes message on your answering machine
- Textured back cover for non-slip grip
- Easy to read 4.1cm (1.6") graphical display with backlight
- Menu in multiple local languages
- Up to 16 hours talk time on a single charge
- Programmable hot keys for quick dial
- Caller ID – so you always know who is calling*

Crystal clear sound

- Parametric Equalizer delivers pure and clear sound
- Optimized antenna layout for great reception in any room
- Advanced sound testing & tuning for superb voice quality

Eco-conscious product

- Low radiation and power consumption

PHILIPS

Cordless phone

25 min answering machine 1.6" display/ amber backlight, Speakerphone, 2 handsets

D2052B/BR

Highlights

Advanced sound testing



We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction for both handset and handsfree modes.

Parametric Equalizer



Our telephones use parametric equalization in the digital sound processing to fine-tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

Optimized antenna layout



Our optimized antenna layout ensures strong and stable reception – even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in

the house, and enjoy a long, uninterrupted conversation even as you walk around.

4.1cm (1.6") graphical display

Easy to read 4.1 cm (1.6") graphical display with backlight

Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Menu in local languages



Enjoy easy set-up, navigation and control with intuitive menu available in local languages.


Programmable hot keys



Now calling the people you care about most is easier than ever. With simple one-touch dialing, you will never have to search for their

number again. You can program up to 2 keys for instant calling.

Non-slip grip

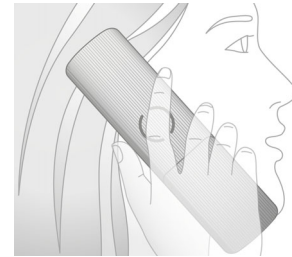

The rear of the handset is treated with a special texture for added comfort and better grip.

Up to 25 min. recording



Up to 25 minutes message on your answering machine

Caller ID*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

Cordless phone

25 min answering machine 1.6" display/ amber backlight, Speakerphone, 2 handsets

Specifications

Picture/Display

- Display size: 4.1cm / 1.6"
- Backlight: Yes
- Backlight color: Amber
- Display type: 1-line dot matrix + 2 line icons

Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: 10 last numbers
- Call log entries: 20 entries
- Phonebook store in the base

Answering Machine

- Recording time capacity: up to 25 minutes
- Pre-recorded OGM
- Message counter on base: LED (Soft Amber)
- Loud speaker on base
- Answering Machine control: from base and handset

Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic

Convenience

- Menu structure in the handset: List Menu
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 3- bar battery icon
- Date / Time display
- Base Station keys: Paging key
- Battery charge indication
- Charge time: 8 hours
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls
- Key tone on/off
- Auto hang up
- Multi base capability: 1
- Multi handset capability: Up to 4
- Speakerphone - talk handsfree
- Range: Open field <300m; indoor <50m

- Up to 16 hrs talk time
- Line cord length: 1.8m
- Power cord length: 1.8m
- Non-slip grip: Circular texture
- Up to 180 hrs standby time
- Keypad lock

Power

- Battery capacity: 550 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz

Security

- Transmission encryption : Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- Eco+
- Full ECO Mode (NEMO)

Packaging dimensions

- EAN: 87 12581 66530 2
- Type of shelf placement: Laying
- Number of products included: 1
- Packaging type: Carton
- Packaging dimensions (W x H x D): 7.3 x 5.4 x 4.1 inch
- Packaging dimensions (W x H x D): 18.5 x 13.6 x 10.5 cm
- Gross weight: 1.481 lb
- Gross weight: 0.672 kg
- Nett weight: 1.193 lb
- Nett weight: 0.541 kg
- Tare weight: 0.288 lb
- Tare weight: 0.131 kg



Issue date 2015-01-23

Version: 3.0.3

12 NC: 8670 000 97005
EAN: 87 12581 66530 2

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com