



Philips BeNear
Cordless phone

6000-series
Black



CD6801B

Bringing people closer

through superior sound

The 6000 series provides you superior sound to bring you closer to your loved ones even when you cannot be together. With Philips, using cordless phones has never been so easy!

Experience superior sound quality

- MySound: Personal Sound Profiles
- Handset speakerphone allows you to talk handsfree

Benefit from pure convenience

- 6.1 cm (2.4") High Resolution TFT color display
- Icon menu structure
- Caller ID- see who is calling
- 200-name phonebook
- Up to 22 hours talk time

Never miss a message

- Direct access answering machine on base and via handset
- Up to 60 minutes recording time

Save Energy

- Low power consumption: < 0.50 W in stand-by mode
- EcoMode: reduced transmission power between handset and base

PHILIPS

Highlights

MySound



Sound perception is subjective and everyone has their individual listening preference, therefore MySound provides you with three distinctly different profiles in your choice of sound to give you the ultimate listening experience: Clear - for making the voices very crisp and clear Soft - for a more friendly and soft voice Warm - for making the voice sound welcoming and warm.

Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.


Low power consumption: < 0.50 W



Philips phones are energy efficient and are designed to be respectful to the environment.

Now the power consumed in stand-by mode is less than < 0.50 W.

6.1cm (2.4") TFT color display

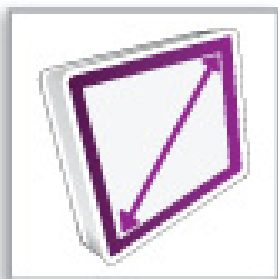

Bigger, clearer and much sharper resolution displays allow you to effortlessly read the characters on larger screens. This telephone has a 6 cm (2.4") TFT high-resolution display with an icon menu

Caller ID- see who is calling



Caller ID- see who is calling

Icon menu structure

Icon menu structure

Up to 22 hours talk time



Up to 22 hours talk time

200-name phonebook



Always have the phone numbers of your loved ones available: Save up to 200 names in your phonebook.

EcoMode: reduced transmission



Since the base station recognizes when the handset is docked on its base, an intelligent embedded system ensures transmitted power is permanently controlled and optimised according to the distance between handset and base unit. It means power emission is automatically reduced by up to 93% when the handset is near its base. When used in Eco Mode, you'll also enjoy a 60% manual reduction of emitted power.

Answering machine

Access all your messages directly from the base and the handset.

Specifications

Sound

- Sound Profile: MySound
- Noise reduction
- Volume control on handset
- Ringtones on handset: 10 polyphonic HQ + 5 standard
- Speakerphone

Picture/Display

- Display size: 2.4"
- Display Type: TFT Color
- Backlight: Yes
- Backlight color: White

Convenience

- Room monitoring
- Date / Time display
- Alarm Clock
- Up to 22 hrs talk time
- Up to 300 hrs standby time
- Event light on the handset
- Base Station keys: Paging key
- Battery charge indication
- Charge time: 8 hours
- Signal strength indication
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls
- Illuminated keypad
- Key tone on/off
- Auto Registration

- Multi base capability: 1
- Multi handset capability: Up to 5
- Speakerphone - talk handsfree

Memory Capacity

- Phonebook: 200 names and numbers
- Redial List Capacity: 20
- VIP Caller Identification

Power

- Battery capacity: 750 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V~50/60Hz
- Power Consumption: < 0.5 W

Security

- Transmission encryption : Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: < 0.1 W/kg

Eco Design

- EcoMode: automatic and manual

Dimensions

- Base dimensions: TBD (H x D x W)
- Handset dimensions: TBD (H x D x W)



Issue date 2015-02-03

Version: 4.16.4

12 NC: 8670 000 69634
EAN: 87 12581 57150 4

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com