




Philips  
HiFi Stereo Headphones

**Over-ear**  
Black

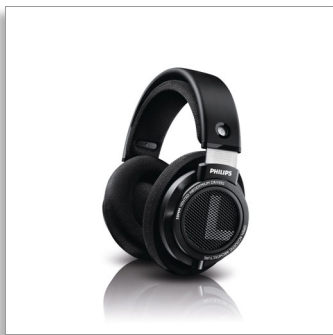

**SHP9500**

## High precision sound

Enjoy an authentic listening experience in style. Created to offer outstanding performance through open back architecture and high-precision 50mm speaker drivers.

### **Supreme listening experience**

- Exquisite open-back, over the ear design for authentic sound
- 50mm neodymium drivers deliver the full spectrum of sound
- Angled drivers align perfectly with your ear

### **Comfortable for long wearing**

- Breathable ear cushion for longer wearing comfort.
- Steel headband for strength and durability
- Comfortable double layered headband cushion

### **Convenience**

- 1.5m cable gives you freedom of movement for indoor use

# PHILIPS

# Highlights

## 50mm neodymium speaker drivers



50mm neodymium speaker drivers deliver superior Hi-Fi sound.

## Breathable ear cushions



Deluxe breathable ear-pads improve breathability and dissipate pressure and heat for longer wearing comfort.

## Comfortable headband cushion



Comfortable double layered headband cushion

## Durable steel headband



Steel headband for strength and durability

## Open-back, over-ear headphones

An acoustic open-back architecture eliminates air pressure build-up behind the driver, giving the diaphragm greater freedom of movement. This greatly enhances sound transparency and smoothens extended high frequencies.

## Precisely angled drivers

Engineered to fit the ear's natural geometry, the ear-shells offer precise and accurate sound. Audio signals are directly channeled into the ears, creating a dynamic and authentic listening experience.

## 1.5m cable for freedom

1.5m cable gives you freedom of movement for indoor use

# Specifications

## Sound

- Acoustic system: Open
- Magnet type: Neodymium
- Impedance: 32 ohm
- Maximum power input: 200 mW
- Sensitivity: 101 dB
- Speaker diameter: 50 mm
- Frequency response: 12 - 35 000 Hz

## Connectivity

- Cable Connection: one-sided
- Finishing of connector: gold-plated
- Cable length: Detachable 3.0 m cable included

## Accessories

- Adaptor plug: gold-plated 3.5 - 6.3 mm

## Product dimensions

- Product dimensions (W x H x D): 6.7 x 7.9 x 3.9 inch
- Product dimensions (W x H x D): 17 x 20 x 10 cm
- Weight: 0.32 kg
- Weight: 0.705 lb

## Outer Carton

- Gross weight: 5.004 lb
- Gross weight: 2.27 kg
- GTIN: 1 87 12581 69144 5
- Outer carton (L x W x H): 37.5 x 21 x 23.5 cm
- Outer carton (L x W x H): 14.8 x 8.3 x 9.3 inch
- Nett weight: 2.183 lb
- Nett weight: 0.99 kg
- Number of consumer packagings: 3
- Tare weight: 2.822 lb
- Tare weight: 1.28 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 7.7 x 8.9 x 4.7 inch
- Packaging dimensions (W x H x D): 19.5 x 22.5 x 12 cm
- EAN: 87 12581 69144 8
- Gross weight: 1.455 lb
- Gross weight: 0.66 kg
- Nett weight: 0.728 lb
- Nett weight: 0.33 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.728 lb
- Tare weight: 0.33 kg
- Type of shelf placement: Both



Issue date 2022-05-12

Version: 4.0.6

12 NC: 8670 001 03939  
EAN: 69 51613 98152 8

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

