



Philips  
SoundSphere mini  
speakers

**Aluminium**  
50 W



**DS6800W**

## Feel the emotions of a live performance

### Obsessed with sound

Bring life back into your music with deeper and more natural sound delivered through SoundSphere speaker technology. Connect these elegant speakers directly to your PC to enjoy the stunning sound of your multimedia content.

#### Peerless sound quality

- SoundSphere for a natural, deeper and wider sound impression
- FullSound enhances sound detail for rich and powerful sound
- Bass-reflex design for deep, tight bass reproduction
- 2 x 25 W RMS total output power

#### Exquisite design and finishing

- Sophisticated design with high-quality aluminium finish

#### Advanced versatility

- AUX-in for easy connection to almost any electronic device
- USB port for charging other devices

#### Intuitive control

- Remote control complements speaker design and finishing

# PHILIPS


# Highlights

## SoundSphere



Bask in the glory and energy of music as SoundSphere gives you each note as the artist intended. Delivering clear and natural audio, SoundSphere creates a sound impression that is deeper and wider. The result is life-like audio that will make you believe the artists are performing in front of you. Each SoundSphere speaker features a tweeter that hangs above the speaker box. The tweeter is able to emit sound more clearly and in all directions. Precise audio crossover engineering and careful positioning of the woofer to embrace the tweeter ensures minimised interference and even more natural sound.

## FullSound™

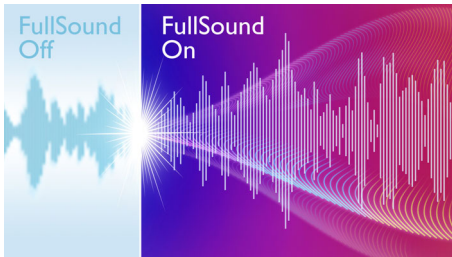

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully



enhance music rendering. Music content is dynamically analysed and optimised to let you experience music with great detail and warmth.

## Bass-reflex design



Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimising air turbulence that may cause distortion.

## Built-in USB port



This speaker comes with a USB port, allowing you to conveniently charge your device. Simply connect your device with its USB cable to the back of the speaker.

# Specifications

## Loudspeakers

- Speaker drivers: 2 x 3/4" / 20 mm tweeter, 2 x 3" / 8cm midwoofer
- Output power (RMS): 2 x 25 W

## Accessories

- Included accessories: Remote Control, 3.5 mm stereo line-in cable, AC Power Cord, Quick start guide, Warranty certificate, World Wide Warranty leaflet

## Connectivity

- Aux in

## Dimensions

- Product dimensions: [speakers] 145 (diameter) x 263 (height) mm
- Packaging dimensions (WxDxH): 577 x 249 x 217 mm
- Product weight: 3 kg
- Weight incl. Packaging: 4.2 kg

## Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2015-04-14

Version: 5.0.4

12 NC: 8670 000 81005  
EAN: 87 12581 61801 8

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)