

Philips  
DVD player with USB

DivX playback

DVP3166X



## Straight from USB to TV

With 5.1 channel audio output

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Brings audio and video to life

- 192kHz/24 bit audio DAC enhances analogue sound input
- 5.1 channel audio output for surround sound
- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp, natural images

### Plays all your movies and music

- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays DivX, MP3, WMA and JPEG digital camera photos
- DivX Certified for standard playback of DivX videos

### Easy to use

- USB Direct plays photos and music from USB flash drives


### Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

**PHILIPS**  
sense and simplicity


# Highlights

## 192kHz/24 bit audio DAC

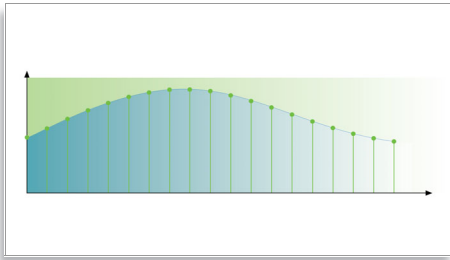


192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## 5.1 channel audio output

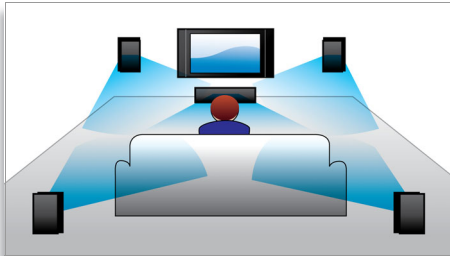


5.1 channel audio output for surround sound

## Plays it all

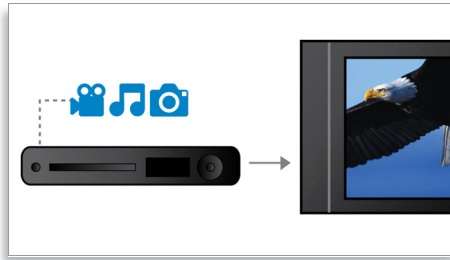

Play virtually any media format you want - whether they be DivX, MP3s, WMA or JPEGs. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system - in the comfort of your living room.

## Progressive Scan

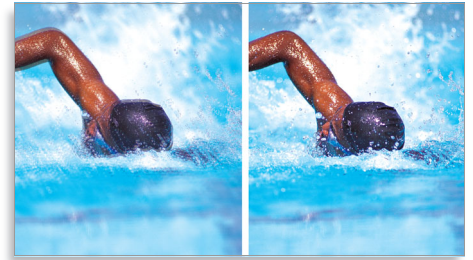

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## USB Direct

Simply plug your device into the USB port on your Philips DVD system. Your digital music and photos will be played directly from the device. Now you can share your favorite moments with family and friends.



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 65 dB
- Crosstalk (1kHz): 70 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3

## Connectivity

- Rear Connections: Digital coaxial out, Composite video (CVBS) output, ComponentVideo out Progressive, Analog audio Multi-channel out

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English

## Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 0.8 W

## Accessories

- Included Accessories: Audio/Video cable, 2 x AAA Batteries, Remote Control, World Wide Warranty leaflet, User Manual

## Dimensions

- Set dimensions (W x H x D): 360 x 37 x 210 mm
- Packaging dimensions (W x H x D): 415 x 82 x 282 mm



Issue date 2009-11-06

Version: 1.0.6

12 NC: 8670 000 31289  
EAN: 87 12581 34389 7

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)