


Philips  
DVD player

DivX

DVP3040

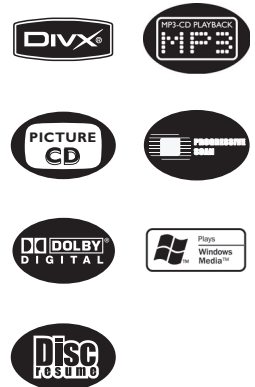

# Turn up your experience

With DivX playback

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

## Fits everywhere, goes anywhere

- Compact design
- Ultra-slim design

## Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD, DivX
- Photos: Picture CD (JPEG)
- Music: CD, MP3-CD, CD-R/RW & Windows Media™ Audio

## Great audio and video performance

- RGB on Scart single connection for high-quality video
- 192kHz/24 bit audio DAC enhances analogue sound input
- Progressive Scan component video for optimised image quality



**PHILIPS**  
sense and simplicity

## Specifications

### Picture/Display

- **D/A converter:** 12 bit, 108 MHz
- **Picture enhancement:** Progressive Scan, Video upsampling

### Sound

- **Crosstalk (1kHz):** 70 dB
- **D/A converter:** 24 bit, 192 kHz
- **Distortion and Noise (1kHz):** 65 dB
- **Dynamic Range (1kHz):** 80 dB
- **Frequency response:** 30-20000 Hz
- **Signal to noise ratio:** 90
- **Sound System:** Dolby Digital

### Video Playback

- **Compression formats:** DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, MPEG1, MPEG2
- **Playback Media:** CD, CD-R/CD-RW, DivX, DVD, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD
- **Video disc playback system:** NTSC, PAL

### Audio Playback

- **Compression format:** Dolby Digital, MP3, PCM, WMA
- **Playback Media:** CD, CD-R/RW, MP3-CD, MP3-DVD, WMA-CD
- **MP3 bit rates:** 32 - 256 kbps

### Still Picture Playback

- **Playback Media:** CD-R/RW, DVD+R/+RW, DVD-

R/-RW, Kodak Picture CD, Picture CD

- **Picture compression format:** JPEG
- **Picture enhancement:** Flip photos, Rotate, Slideshow, Zoom

### Connectivity

- **Rear Connections:** Analogue audio Left/Right out, ComponentVideo out Progressive, Composite video (CVBS) output, Digital coaxial out, Scart

### Convenience

- **Child Protection:** Child Lock, Parental Control
- **On-Screen Display languages:** English

### Accessories

- **Included Accessories:** 2 x AAA Batteries, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

### Power

- **Power consumption:** < 10 W
- **Power supply:** 240V, 50Hz
- **Standby power consumption:** < 0.8 W

### Dimensions

- **Packaging dimensions (W x H x D):** 415 x 82 x 320 mm
- **Set dimensions (W x H x D):** 360 x 37 x 235 mm

## Product highlights

### Multi-format Movies with DivX

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

### RGB on Scart connectivity

RGB on Scart is a cable connection that provides easy connectivity for high quality video output.

### Picture CD (JPEG)

Multi format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

### 192kHz/24 bit audio DAC

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

### Ultra-slim design

The attractive enclosure has a very low profile.

### Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

### Music: Windows Media™ Audio

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.



Issue date 2007-11-22

Version: 1.0

12 NC: 8670 000 24907  
EAN: 87 10895 99807 9

© 2007 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)