

Philips  
Car audio system

Bluetooth

CE150



## Seamless music enjoyment on the road

with MP3 and WMA music playback

Enjoy multiple source music in your car with the Philips CE150. Stay connected to your music on your mobile & important calls, thanks to the built-in Bluetooth® receiver. Also features anti-theft detachable front panels for security.

### Enjoy your digital music in car

- USB Direct and SD card slots for MP3/WMA playback
- MP3 Link for portable music playback

### Superb performance with full features

- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- Built-in Bluetooth receiver for call and music streaming
- 2-band parametric equalizer with 8 presets
- Built-in 50W x 4 amplifiers for excellent sound quality

### Design that blends into your car

- High contrast LCD for perfect viewing
- Browse by folder or song for instant search or quick access
- Detachable front panel and blackout for anti-theft security
- Intuitive interface for easy navigation
- User friendly remote control for quick song access

# PHILIPS

# Highlights

## DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

## Browse by folder or song



This function allows you to find a track or album much faster by letting you browse through songs and folders, which are the usual contents of USB/SDHC devices. With the dedicated folder/song button, only three simple steps are needed to make a search – press folder/song, rotate the volume knob and push to select. This simple process lets you search through your music quickly and easily, letting you to focus on your driving.


## Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving and you don't have to miss any important calls. With the built-in

Bluetooth® receiver, you can also conveniently stream your music files from your phone to your car entertainment system.

## USB Direct and SD card slots

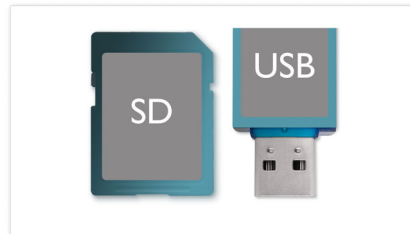

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct and SD card slots.

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Detachable front panel



Detachable front panel and blackout for anti-theft security

# Specifications

## Display

- Type: High contrast B/W LCD (8 characters)
- Key illumination: Red

## Audio Playback

- Playback Media: USB flash drive, SD Card
- Compression format: MP3, WMA
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320kbps and variable bit rate
- USB Direct / SD Modes: Play/Pause, Fast Backward/Fast Forward, Previous/Next, Repeat, Shuffle

## Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto search and store
- No. of preset stations: 18(FM), 12(AM)

## Sound

- Equalizer: 2-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: MAX Sound, Dynamic Bass Boost
- Output power (MAX): 50Wx4 channels
- Output power (RMS): 22Wx4 channels (4 ohms, 10% T.H.D.)

## Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- MP3-Link: For portable MP3 music playback
- Microphone: Built-in microphone
- Preamp output: 2 pairs RCA(L/R)
- Bluetooth profiles: A2DP, AVRCP, Handsfree
- Bluetooth version: 2.0+EDR

## Security/Anti-theft

- Front panel: Detachable
- Display blackout: 10/20 sec selectable

## Accessories

- Remote control: Slim remote with battery
- User Manual: English, Spanish
- Quick start guide: English, Latam Spanish

## Power

- Power supply: 12V DC

## Dimensions

- Product dimensions (W x H x D): 188 x 58 x 140 mm
- Chassis: 1 Din



Issue date 2014-02-13

Version: 2.0.2

12 NC: 8670 000 59484  
EAN: 87 12581 52182 0

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)