




Philips
Soundbar speaker

3.1 CH wireless subwoofer

Bluetooth® and NFC
HDMI ARC
200 W

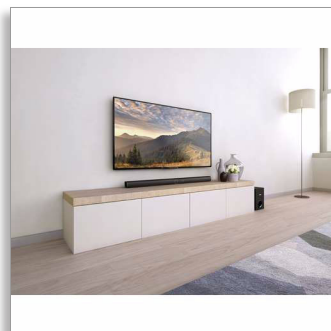

HTL3160B

Unmatched voice clarity from 3.1 Ch

with wireless subwoofer

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience, plus wireless music streaming with one-touch NFC pairing.

Connect and enjoy all your entertainment

- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Wireless music streaming via Bluetooth
- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3 music directly from your portable USB devices
- Audio-in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control

Richer sound for watching TV and movies

- Dedicated centre-channel speaker for superior voice clarity
- Dolby Digital and Pro Logic II surround sound
- Virtual Surround Sound for a realistic movie experience
- Wireless subwoofer adds thrill to the action


PHILIPS

Highlights

Centre-channel speaker

A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

Virtual Surround Sound

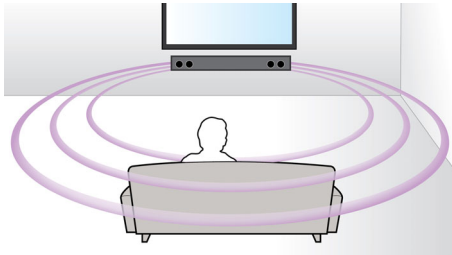

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase

extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital and Pro Logic II

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

One-touch with NFC

Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

EasyLink

EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc.

with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

USB playback



Simply plug in your device to the USB port on your Philips Soundbar speaker. Your digital music will be played directly from the device. Now you can share your favourite moments with family and friends.

Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Virtual Surround Sound, Audio sync, Movie, Music, Voice
- Sound System: Dolby Digital, Dolby pro-logic 2
- Speaker output power: 32W x 3
- Subwoofer output power: 105 W
- Total Power RMS @ 10% THD: 200 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer type: Wireless subwoofer
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 2 ohm
- Speaker Impedance: 4 ohm
- Drivers per Soundbar: 3 x race track woofers, 3 x tweeters
- Tweeter Impedance: 4 ohm

Connectivity

- Integrated Connections: Bluetooth, NFC
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- Top connections: Audio In (3.5 mm), USB 2.0

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby,

Remote Control-Passthrough, System standby, Audio Return Channel

Design

- Wall mountable

Power

- Main unit power supply: 100-240 V AC, 50/60 Hz
- Main unit standby power: < 0.5 W
- Subwoofer Power supply: 100-240 V~; 50-60 Hz
- Subwoofer standby power: <0.5 W
- Subwoofer power consumption: 30 W

Dimensions

- Main Unit (W x H x D): 950 x 51 x 69 mm
- Main Unit Weight: 1.7 kg
- Subwoofer (W x H x D): 180 x 303 x 330 mm
- Packaging (W x H x D): 400 x 418 x 372 mm
- Weight incl. Packaging: 9 kg
- Subwoofer Weight: 4.5 kg

Accessories

- Included accessories: Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, AAA Battery (x1), AC Adapter, 2 x Power cords, Screws (x6), Optical audio cable

Audio Playback

- Compression format: MP3



Issue date 2017-10-28

Version: 6.5.9

12 NC: 8670 001 26455
EAN: 48 95185 61033 7

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com