



Philips Fidelio
True Wireless
Headphones

Natural Fidelio sound
Noise Canceling Pro+
Wind-noise reduction
Premium universal fit



T1WT

Crafted for life on the go.

Let your music move you. The spacious, detailed sound of these premium true wireless headphones puts you right in the heart of the mix. Our best noise cancellation and a secure, comfortable fit keep you immersed-wherever you are.

Seamless in every way

- Superb sound for streaming-on any phone
- IR sensor. Music pauses when you take an earbud out
- Philips Headphones app. Customize your experience
- Touch controls and easy connections

Fidelio sound signature. Natural and rich.

- Philips Fidelio. Rich, natural sound
- 2-way design. Balanced-armature and dynamic drivers
- More music. 48 hours play time with the charging case
- Immerse anywhere. Noise Canceling Pro+

Quality in every detail

- Universal fit. Comply foam and silicone ear-tip covers
- Crafted for listening. Premium Fidelio design
- IPX4 Splash and sweat resistant, whatever the weather
- Crystal-clear calls. Wind noise reduction.


PHILIPS

True Wireless Headphones

Natural Fidelio sound Noise Canceling Pro+, Wind-noise reduction, Premium universal fit


Highlights

Philips Fidelio. Natural sound

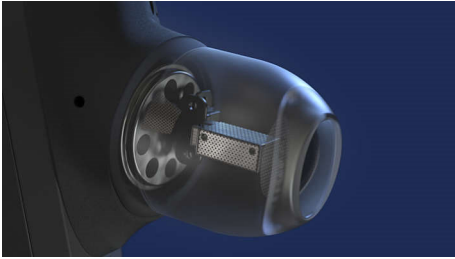

EDM or rock, classical or hip-hop-these audiophile-grade headphones let you hear it all as though you were right there in the studio. Balanced-armature drivers reveal the scintillating trebles and richly natural vocals. Dynamic drivers produce deep, precise bass and lush instrumental textures.

Noise Canceling Pro+

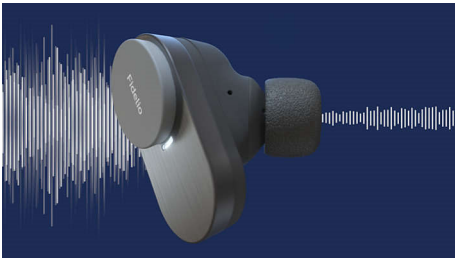

No matter where you are, these true wireless headphones create the perfect space to listen. Hybrid noise cancellation uses state-of-the-art hardware and advanced audio processing to block unwanted sounds. Noise-damping Comply foam ear-tip covers add to the immersion with a secure, comfortable fit.

Premium design



Sink into a style as unique as your music. The round, polished-metal detailing on these striking

earbuds is a pure Fidelio design. The embossed Muirhead leather trim adds a soft, sophisticated touch to the curved metal charging case.

Crystal-clear calls



Multiple mics and a dedicated algorithm focus on the sound of your voice as well as reducing noise from the world around you. Even wind noise is filtered out, so you can be heard clearly when on a call outside.

Philips Headphones app



The Philips Headphones app lets you adjust the level of noise cancellation by switching between preset modes, and you can use the app to activate wind-noise cancellation. An equalizer lets you fine-tune frequency response to suit your personal taste.

T1WT/00

Easy connections and pairing



Touch controls keep things simple, and Bluetooth multipoint lets you connect to a phone (iOS or Android) and laptop at the same time. Google Fast Pair lets you pair to a compatible Android device with a single tap.

Superb sound for streaming

Whichever streaming service you use, these true wireless headphones will unlock the best possible sound. The codec that works best with your phone or tablet is selected automatically. Whether you use iOS or Android devices, you'll enjoy a superbly detailed listening experience.

48 hours play time with case

With these earbuds fully charged-and a fully charged case-you can travel with more than a day of play time in your pocket. Plus, the music pauses if you take an earbud out so you never need to miss a beat. The case can be charged wirelessly.

IR sensor

IR sensor. Music pauses when you take an earbud out

Universal fit

Universal fit. Comply foam and silicone ear-tip covers

IPX4 Splash/sweat resistant

IPX4 Splash and sweat resistant, whatever the weather

2-way design

2-way design. Balanced-armature and dynamic drivers

Specifications

Sound

- Frequency range: 7 - 40 000 Hz
- Speaker diameter: 10 mm + BA
- Impedance: 16 Ohm
- Maximum power input: 5 mW
- Sensitivity: 103 dB (1K Hz)
- Driver type: Hybrid, Balanced Armature
- Hi-Res Audio

Connectivity

- Bluetooth version: 5.2
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: LDAC, AAC, SBC
- Type of wireless transmission: Bluetooth

Outer Carton

- Length: 40 cm
- Number of consumer packagings: 24
- Width: 22.2 cm
- Gross weight: 9.2 kg
- Height: 39.8 cm
- GTIN: 1 48 95229 11865 9
- Nett weight: 3.168 kg
- Tare weight: 6.032 kg

Convenience

- Automatic power off: 60 minutes
- Water resistance: IPX4
- Philips Headphones app support
- Google fast pair
- Mono mode for TWS
- Auto pause (IR sensor)
- Firmware updates possible
- Type of controls: Touch

Inner Carton

- Length: 19.2 cm
- Number of consumer packagings: 3
- Width: 10.2 cm
- Height: 18.5 cm
- Nett weight: 0.396 kg
- Gross weight: 1.13 kg
- Tare weight: 0.734 kg
- GTIN: 2 48 95229 11865 6

Power

- Rechargeable
- Number of batteries: 3 pcs
- Talk time: 13 hr
- Charging time: 2 hour(s)
- Wireless charging
- Music play time (ANC on): 9 + 25 hour(s)
- Music play time (ANC off): 13 + 35 hour(s)
- Fast charging time: 15 mins for 1 hr
- Battery type(Charging case): Lithium Polymer (built-

in)

- Battery type(Earbud): Lithium Polymer (built-in)
- Battery weight (Total): 14 g
- Battery capacity(Case): 650 mAh
- Battery capacity(Earbud): 60 mAh
- Battery life standby time: 200 hr

Packaging dimensions

- Height: 17.3 cm
- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 9.6 cm
- Depth: 6.2 cm
- Number of products included: 1
- EAN: 48 95229 11865 2
- Gross weight: 0.342 kg
- Nett weight: 0.132 kg
- Tare weight: 0.21 kg

Product dimensions

- Height: 5.15 cm
- Width: 8.49 cm
- Depth: 3.24 cm
- Weight: 0.109 kg

Accessories

- Quick Start Guide
- Eartips: 6 pairs
- Charging case
- Comply foam: 3 pairs (S/M/L)
- Charging cable: USB-C cable, 500 mm

Design

- Color: White
- Ear coupling material: Comply foam, Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear tip

Telecommunication

- Microphone for call: 3 mic
- ENC microphone
- Wind noise reduction

UPC

- UPC: 8 40063 20173 6

ANC features

- ANC technology: Hybrid, ANC Pro+
- Awareness mode
- Adaptive ANC
- Microphone for ANC: 4 mic
- ANC (Active Noise Canceling)

Voice assistant

- Voice assistant compatible: Google Assistant, Apple Siri
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-03-25

Version: 9.2.4

EAN: 48 95229 11865 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com