

Philips  
2.1 Home theater

3D Blu-ray  
iPod/iPhone ready

HTS3261



## Great clarity for movies and music

### Obsessed with sound

Start enjoying every sound detail in your favorite movies and music with this compact 3D Blu-ray home theatre. Mineral based speaker cones built into its speakers deliver great clarity of every sound detail.

#### Great listening experience

- Mineral based speaker cones for extra clarity
- Class D amplifier for a truly dynamic and clear sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 400W RMS power delivers great sound for movies and music

#### Designed to enhance your cinema at home

- Touch panel for intuitive playback and volume control
- Compact design that fits with your flat TV

#### Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Smart TV to enjoy online services & access multimedia on TV
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- EasyLink to control all HDMI CEC devices via a single remote
- Optional WiFi accessory to wirelessly connect to internet

# PHILIPS




# Highlights

## Mineral based speaker cones




Mineral based speaker cones for extra clarity

## Class D amplifier

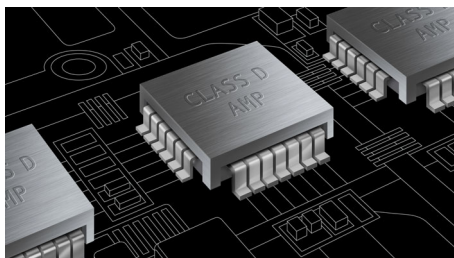

Class D Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

## Dolby TrueHD and DTS-HD

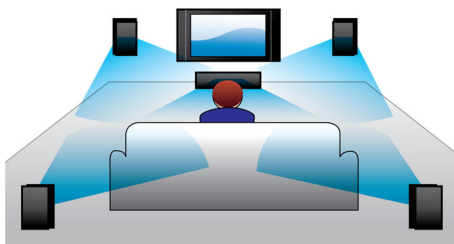


Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## 400W RMS power



400W RMS power delivers great sound for movies and music

## Touch panel for playback

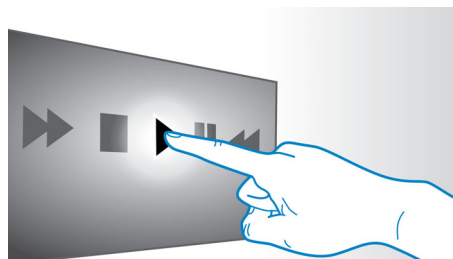

Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Smart TV



Philips home theater systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and to start browsing for services like, video-on-demand stores\* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your couch. Can't find the remote control? Simply use your smart phone or tablet PC to control your home theater via the Philips MyRemote app.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## Optional WiFi accessory

Optional WiFi accessory to wirelessly connect to internet



# Specifications

## Accessories

- Compatible accessories: WUB1110 Wi-Fi USB Adaptor, DCK3060 Dock for iPod/iPhone
- Included accessories: Batteries for remote control, CVBS video cable, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, World Wide Warranty leaflet, Music iLINK Cable

## Audio Playback

- Compression format: MP3, WAV, WMA, AAC
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB, WMV HD, WMV SD

## Optical Playback Media

- Playable Discs: BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD, AVCHD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv

## Connectivity

- Smart TV: DLNA, MyRemote, Net TV
- Front / Side connections: Music iLINK, USB
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Connectors, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot, Wi-Fi USB slot

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 315 mm
- Main Unit Weight: 2.6 kg
- Satellite Speaker (W x H x D): 95 x 161 x 87 mm
- Satellite Speaker Weight: 0.55 kg
- Satellite Speaker Cable length: 4 m
- Subwoofer (W x H x D): 123 x 307 x 369 mm
- Subwoofer Weight: 3.8 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 550 x 393 x 275 mm
- Weight incl. Packaging: 9 kg

## Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 6 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 3 ohm

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 75 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5 W

## Sound

- Equalizer settings: News, Movie, Music, Original, Gaming
- Sound Enhancement: Dolby Virtual Speaker, Dolby Digital Prologic II, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Satellite speaker output power: 100 W x 2
- Subwoofer output power: 200 W
- Total Power RMS @ 30% THD: 400 W

## Sustainability

- Packaging: Electronic User Manual

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2015-08-10

Version: 3.3.5

12 NC: 8670 000 71826  
EAN: 87 12581 58162 6

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* For more information, visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray)