



Philips  
Original radio

FM/MW/LW  
Audio-in  
10W



OR7000



## The original radio

Go retro with this Philips Original radio. Designed to bring back the celebrated 50s appeal of Philips radio, it delivers the deep powerful bass of Bass Reflex Speaker System and features a large backlit LCD display.

### High fidelity radio experience

- High-quality stereo sound for better music enjoyment
- FM/MW/LW stereo tuner
- Bass Reflex Speaker System delivers a powerful, deeper bass

### Easy to use

- Large backlit LCD display for easy viewing in low light
- Built-in clock display
- Audio-in for easy portable music playback

### Contemporary retro design

- Contemporary reinterpretation of the iconic Philetta design

**PHILIPS**

Original radio  
FM/MW/LW Audio-in, 10W

# Specifications

## Tuner/Reception/Transmission

- Tuner bands: FM mono, MW, LW
- Station presets: 20
- Auto digital tuning
- Frequency range: (FM) 87.5-108 MHz

## Connectivity

- Audio in (3.5mm)
- Antenna: FM antenna (75 ohm)

## Convenience

- Display Type: LCD

## Sound

- Sound System: Stereo
- Volume control: rotary (digital)



## Loudspeakers

- Built-in speakers: 2

## Power

- Power type: AC Input

## Dimensions

- Product dimensions (WxDxH): 330 x 150 x 163 mm
- Packaging dimensions (WxDxH): 460 x 250 x 245 mm

## Accessories

- Included accessories: AC power cord (VDE & UK), User Manual, Warranty certificate

OR7000/12

# Highlights

## Bass Reflex Speaker System




Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## Large backlit LCD display

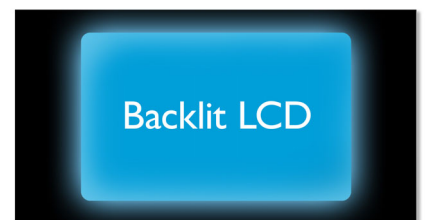

Backlit LCD display ensures easy viewing and operation in low light conditions, and provides clear information at a glance.



Issue date 2014-06-12

Version: 3.0.4

12 NC: 8670 000 93229  
EAN: 87 12581 65459 7

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)