

Philips 8000 series
Blu-ray Disc player

CinemaPerfect HD
3D playback
WiFi

BDP8000



Savor the web's best on TV, in your living room

Explore the best of the Internet in your living room with the Philips BDP8000 featuring Net TV. Easily access popular sites on your TV screen and share videos in the comfort of your couch. Or enjoy a HD cinematic experience with Blu-ray.

See more

- CinemaPerfect HD for clearer and sharper video playback
- Blu-ray 3D Disc playback for a full HD 3D experience at home
- Net TV for popular online services on your TV
- DLNA Network Link to enjoy photos and videos from your PC
- DivX Plus HD Certified for high definition DivX playback

Hear more

- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound
- 7.1 channel surround sound for the best cinematic experience

Engage more

- Built-in WiFi-n for faster, wider wireless performance
- Touch-sensitive controls for smooth and easy access
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- EasyLink to control all HDMI CEC devices via a single remote



asimpleswitch.com

PHILIPS

Highlights

CinemaPerfect HD



Philips' CinemaPerfect HD engine offers a new standard in clear and sharp video playback. This intelligent engine reduces noise and sharpens images to bring you higher quality video images than previously seen. Video noise reduction and super scaling work to reduce the noise that is produced when video is compressed into MPEG format. With improved color processing, the engine produces sharp, deep images on screen.

Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

DLNA Network Link




The DLNA Network link provides easy access to personal photos, music, videos or movies on your PC or Home Network. It uses the Ethernet (LAN) connection with DLNA protocol that assures that DLNA certified products will work together seamlessly. By connecting your Blu-ray Disc player to your home network, you will be able to access information from all DLNA certified devices. You can access your world of entertainment at a simple push of a button with the intuitive user interface, that is designed for easy browsing.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD and DTS-HD MA

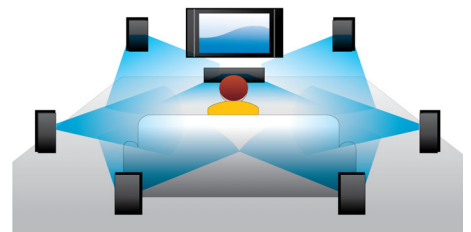

DTS-HD Master Audio and Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.



Specifications

Picture/Display

- Advanced video processing: CinemaPerfect HD
- Blu-ray 3D: Full HD 1080p
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling, Noise Reduction, 3/2 - 2/2 motion pull down, Color Enhancement, Dynamic contrast enhancement
- Aspect ratio: 21:9, 16:9, 4:3
- D/A converter: 12 bit / 150MHz

Video Playback

- Playback Media: BD Video, BD-ROM, BD-R/RE 2.0, DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD, CD-R/CD-RW, USB flash drive
- Compression formats: DivX Plus™ HD, H.264, MKV, VC-1, AVCHD, MPEG2, XviD, WMV
- Disc Playback Modes: Standard Play, Pause, Search forward/reverse, Slow Forward, Resume Playback from Stop, Skip, Disc Menu, Repeat, A-B Repeat, Zoom, Angle
- BD Region Code: A
- DVD Region Code: 4
- Video Enhancement: Deep Color, x.v. Color

Sound

- Sound System: Dolby True HD, Dolby Digital Plus, DTS-HD Master Audio, DTS
- D/A converter: 24 bit, 192 KHz

Audio Playback

- Playback Media: CD, CD-R/RW, MP3-CD, MP3-DVD, USB flash drive
- Compression format: Dolby Digital, DTS, AAC (multi-channels), MP3, WMA, PCM

Digital Photo Playback

- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, USB flash drive
- Picture Compression Format: JPEG
- Picture Enhancement: High Definition Resolution, Slideshow, Slideshow with MP3 playback, Rotate, Zoom

Connectivity

- Rear Connections: HDMI output, Component Video output, Digital optical out, Digital coaxial out, Composite video (CVBS) output, Analog audio 7.1 channel out, Analog audio Left/Right out, Ethernet
- Front / Side connections: USB 2.0
- Network connections: 802.11 b/g/n, Built-in WiFi
- PC network link: DLNA 1.5 certified

Convenience

- Online services: Net TV
- Firmware upgradeable: Online firmware upgrade, Firmware upgradeable via USB
- BD-Live (Profile 2.0): Internal 2GB memory
- Ease of Use: Touch control buttons
- EasyLink (HDMI-CEC): One touch play, One touch standby
- Child Protection: Parental Control
- On-Screen Display languages: English, Brazilian Portuguese, Mexican Spanish

Green Specifications

- Certified green product

Accessories

- Included accessories: User Manual, Quick start guide, Remote Control, 2 x AAA Batteries
- User Manual: English, Brazilian Portuguese, Mexican Spanish

Power

- Power supply: 220-240V, 50/60 Hz
- Power consumption: 21 W
- Standby power consumption: < 0.18 W

Dimensions

- Product dimensions (W x H x D): 435 x 65 x 260 mm
- Product weight: 2.8 kg
- Packaging dimensions (W x H x D): 515 x 340 x 145 mm
- Weight incl. Packaging: 4 kg



Issue date 2014-08-01

Version: 5.0.10

12 NC: 8670 000 67374
EAN: 87 12581 56167 3

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com