

Philips  
DVD home theatre system

Hi-Speed USB 2.0 Link

HTS3365X



## High definition video and surround sound

with powerful compact speakers

High definition pictures and surround sound delivered by this system provide amazing home entertainment. Enjoy crisp pictures with 1080p HDMI upscaling, and playback from USB drives, portable media players and virtually any sort of disc.

### Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

### Brings audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- Karaoke scoring for fun and exciting song contests at home
- DTS, Dolby Digital and Pro Logic II surround sound
- 12-bit/108 MHz video processing for sharp, natural images

### Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

### Easy to set up and use

- EasyLink controls all EasyLink products with a single remote
- HDMI cable included
- Floor standing speakers for freedom of placement

**PHILIPS**  
sense and simplicity


# Highlights

## HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

## Hi-Speed USB 2.0 Link

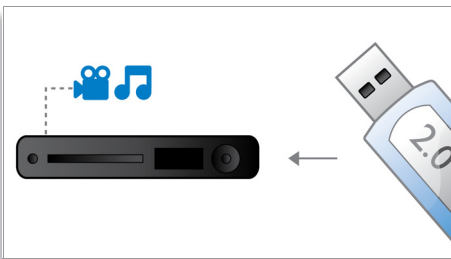

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra merges DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

## DTS, DolbyDigital, ProLogic II

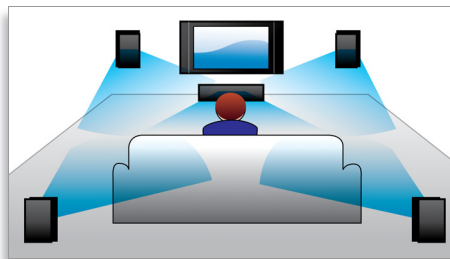

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by


processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Plays it all

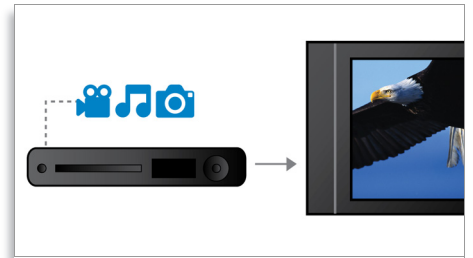

Play virtually any media format you want - whether they are WMV, DivX, MP3s or JPEGs. Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.



# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive Scan, Video Upscaling (720p, 1080i/p)

## Sound

- Output power (RMS): 4 x 75 W, 2 x 150 W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 150-18000 Hz
- Signal to noise ratio: >65 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Action, Rock, Classic, Concert, Drama, Lounge, Gaming, Sports

## Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV, MPEG4
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

## Tuner/Reception/Transmission

- No. of pre-set Audio Channels: 40
- Tuner Bands: FM, AM

## Connectivity

- Front/Side connections: Hi-Speed USB, MP3 Line-in, Microphone input 3.5 mm jack
- Rear Connections: HDMI output, Component Video output, S-Video out, Composite video (CVBS) output, AUX in, FM Antenna, AM/MW Antenna, Easy-Fit speaker connectors, Digital coaxial in

## Power

- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 100 W

## Loudspeakers

- Satellite Speaker: 2 Floor standing pillars

- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 3 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre Speaker: Magnetically shielded, 3-way
- Centre speaker drivers: 1 x 2" tweeter, 2 x 2.5" woofers
- Centre speaker impedance: 6 ohm
- Centre freq range: 150-20,000 Hz
- Subwoofer driver: 6.5" high-efficiency woofer
- Subwoofer impedance: 6 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer type: Passive

## Accessories

- Included Accessories: Remote Control, 2 x AAA Batteries, HDMI cable, CVBS video cable, FM antenna, AM antenna, Power cord, Quick start guide, User Manual, World Wide Warranty leaflet

## Dimensions

- Set dimensions (W x H x D): 435 x 58 x 360 mm
- Set weight: 4.04 kg
- Surround Speaker dimensions (W x H x D): 103 x 203 x 71 mm
- Surround Speaker Weight: 0.54 kg
- Center speaker dimensions (W x H x D): 440 x 105 x 75 mm
- Centre Speaker Weight: 1.39 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 5.08 kg
- Packaging dimensions (W x H x D): 555 x 310 x 515 mm
- Weight incl. Packaging: 14 kg

## Outer Carton

- Gross weight: 15.195 kg
- Outer carton (L x W x H): 55.5 x 51.5 x 31 cm
- Net weight: 13.09 kg
- Tare weight: 2.105 kg
- EAN: 87 12581 40484 0
- Number of consumer packages: 1

## Packaging dimensions

- Packaging dimensions (W x H x D): 55.5 x 31 x 51.5 cm
- Gross weight: 15.195 kg
- Net weight: 13.09 kg
- Tare weight: 2.105 kg
- EAN: 87 12581 40484 0
- Number of products included: 1
- Packaging type: Carton

## Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 kg



Issue date 2009-07-13

Version: 5.0.6

12 NC: 8670 000 38215  
EAN: 87 12581 40484 0

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set at a volume higher than 85 decibels because this may damage your hearing.