


Wall mounting instructions

Drill holes on wall at hole positions marked (no accessories provided with this template)

Use screws to mount the main unit on the wall

- Use this sheet as a template. Mark the position where you want to hang the unit on the wall (as shown) and then drill two 6mm diameter holes.
- Secure the dowels and screws in the holes respectively, leaving the screws 5mm proud of the wall.
- Hang the unit on the fastening screws.

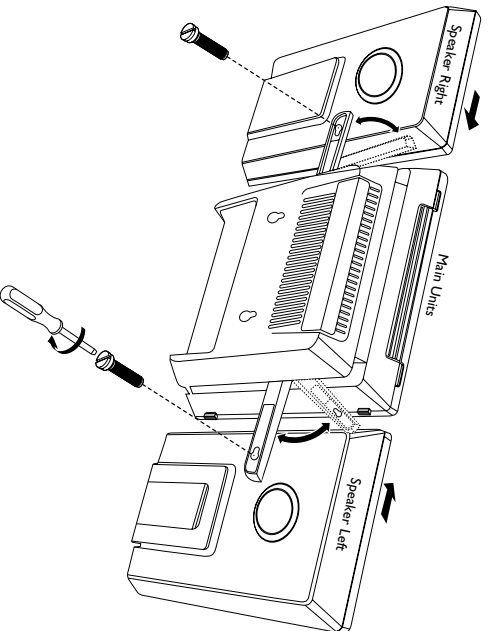

How to mount your system onto wall

IMPORTANT!

- The wall mounting instructions are for use by the qualified wall mounting person only!
- Ask a qualified person to help you with the wall mounting, which includes drilling holes on the wall and mounting the set onto wall.

What else you'll need


- Drilling tools (e.g. an electric drill)
- 2 x screws

Preparation

- 1 Find a suitable location for mounting and complete necessary rear connections (see **Installation** in the user manual).
- 2 Ask a qualified person to help you with the wall mounting, who should:
 - to avoid unexpected damage, learn about the piping, wiring and other relevant information inside your wall;
 - according to the drilling requirements, choose suitable drilling tools;
 - take other precautions necessary for the wall mounting work.


Mounting your system

- 1 Align the template in the chosen location on a wall. Use a pencil to mark the drilling positions (as shown).

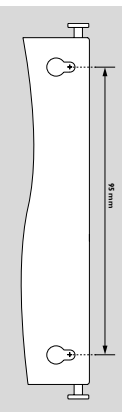


- 2 Drill two 6mm diameter holes as marked.


- 3 Secure the dowels and screws in the holes respectively, leaving the screws 5mm proud of the wall.

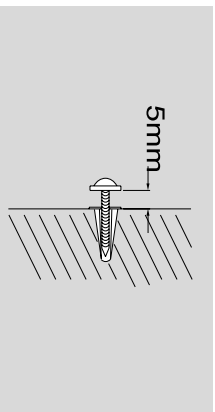

- 4 To detach the stand,
 - a. As shown, hold down **PRESS**.
 - b. Move out the stand to detach.

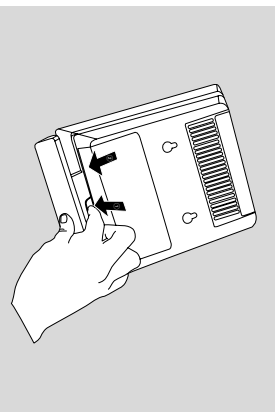

- 5 As shown, hook and mount the speakers in place.

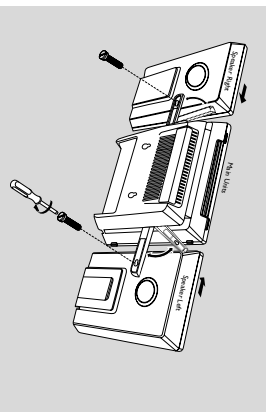

- 6 Hang the unit on the fastening screws.