

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

CEM1100



EN	User manual	3
ES-AR	Manual del usuario	23
PT-BR	Manual do Usuário	51
ZH-TW	使用手冊	77
ZH-CN	用户手册	97

**PHILIPS**

# Contents

<b>1</b>	<b>Important</b>	<b>4</b>
	Safety	4
	Notice	4

<b>2</b>	<b>Your car audio system</b>	<b>6</b>
	Introduction	6
	What's in the box	6
	Overview of the main unit	7
	Overview of the remote control	8

<b>3</b>	<b>Get started</b>	<b>9</b>
	Install the car audio	9
	Install remote control battery	12
	Turn on	13
	Set clock	13

<b>4</b>	<b>Listen to radio</b>	<b>14</b>
	Tune to a radio station	14
	Store radio stations in memory	14
	Tune to a preset station	14

<b>5</b>	<b>Play audio files</b>	<b>15</b>
	Play a disc	15
	Play options	15
	Connect external sound source	16

<b>6</b>	<b>Adjust sound</b>	<b>16</b>
	Adjust volume	16
	Mute	16
	Turn Dynamic Bass Boost (DBB) on/off	16
	Turn on/off MAX sound	16
	Select preset equalizer	16
	Switch music listening zone	17
	Other sound settings	17

<b>7</b>	<b>Adjust system settings</b>	<b>18</b>
	Turn beep sound on/off	18
	Select blackout setting	18
	Turn demo mode on/off	18
	Dimmer	18
	Dance	18
	Rear Aux	18
	Reset	19

<b>8</b>	<b>Additional information</b>	<b>19</b>
	Detach the front panel	19
	Replace fuse	19
	Remove the unit	20

<b>9</b>	<b>Product information</b>	<b>20</b>
----------	----------------------------	-----------

<b>10</b>	<b>Troubleshooting</b>	<b>21</b>
-----------	------------------------	-----------

# 1 Important

## Safety

- Read and understand all instructions before you use your apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- This apparatus is designed for negative ground (earth) 12 V DC operation only.
- To ensure safe driving, adjust the volume to a safe and comfortable level.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- Use only the supplied mounting hardware for a safe and secure installation.
- To avoid short circuit, do not expose the apparatus, remote control or remote control batteries to rain or water.
- Never insert objects into the ventilation slots or other openings on the apparatus.
- Clean the apparatus and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.
- Never place any objects other than discs into the apparatus.
- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.
- Visible and invisible laser radiation when open. Avoid exposure to beam.

- Risk of damage to the apparatus screen! Never touch, push, rub or strike the screen with any object.



### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- The apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

## Notice




**Be responsible  
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

**This apparatus includes this label:**

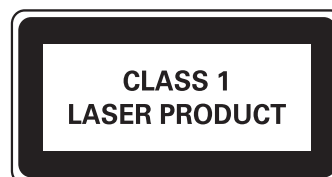

## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.



This product complies with the radio interference requirements of the European Community.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of

packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

2011 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

## 2 Your car audio system


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Introduction


With the in-car audio system, you can enjoy your drive while listening to:

- FM or AM (MW) radio
- Audio from CD or MP3 disc
- Audio from external devices

The unit supports the following media format:



- ⑤ Carrying case for front panel
- ⑥ ISO male connector
- ⑦ Rubber cushion
- ⑧ Screw x 1 pc
- ⑨ Disassembly tools x 2 pcs
- ⑩ User manual
- ⑪ Quick start guide

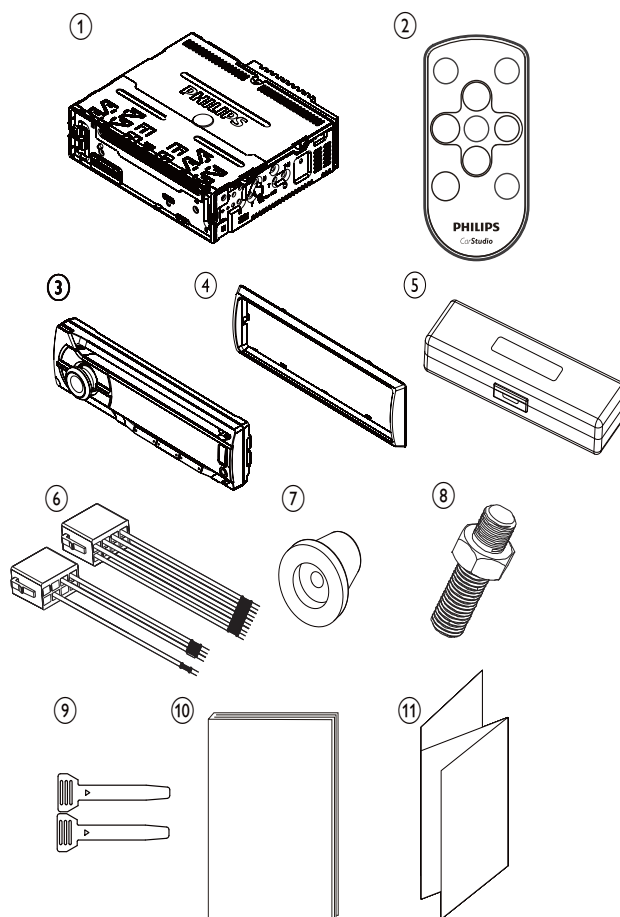


### What's in the box

Check and identify the contents of your package:

- ① Main unit (with a sleeve)
- ② Remote control
- ③ Front panel
- ④ Trim plate

## Overview of the main unit

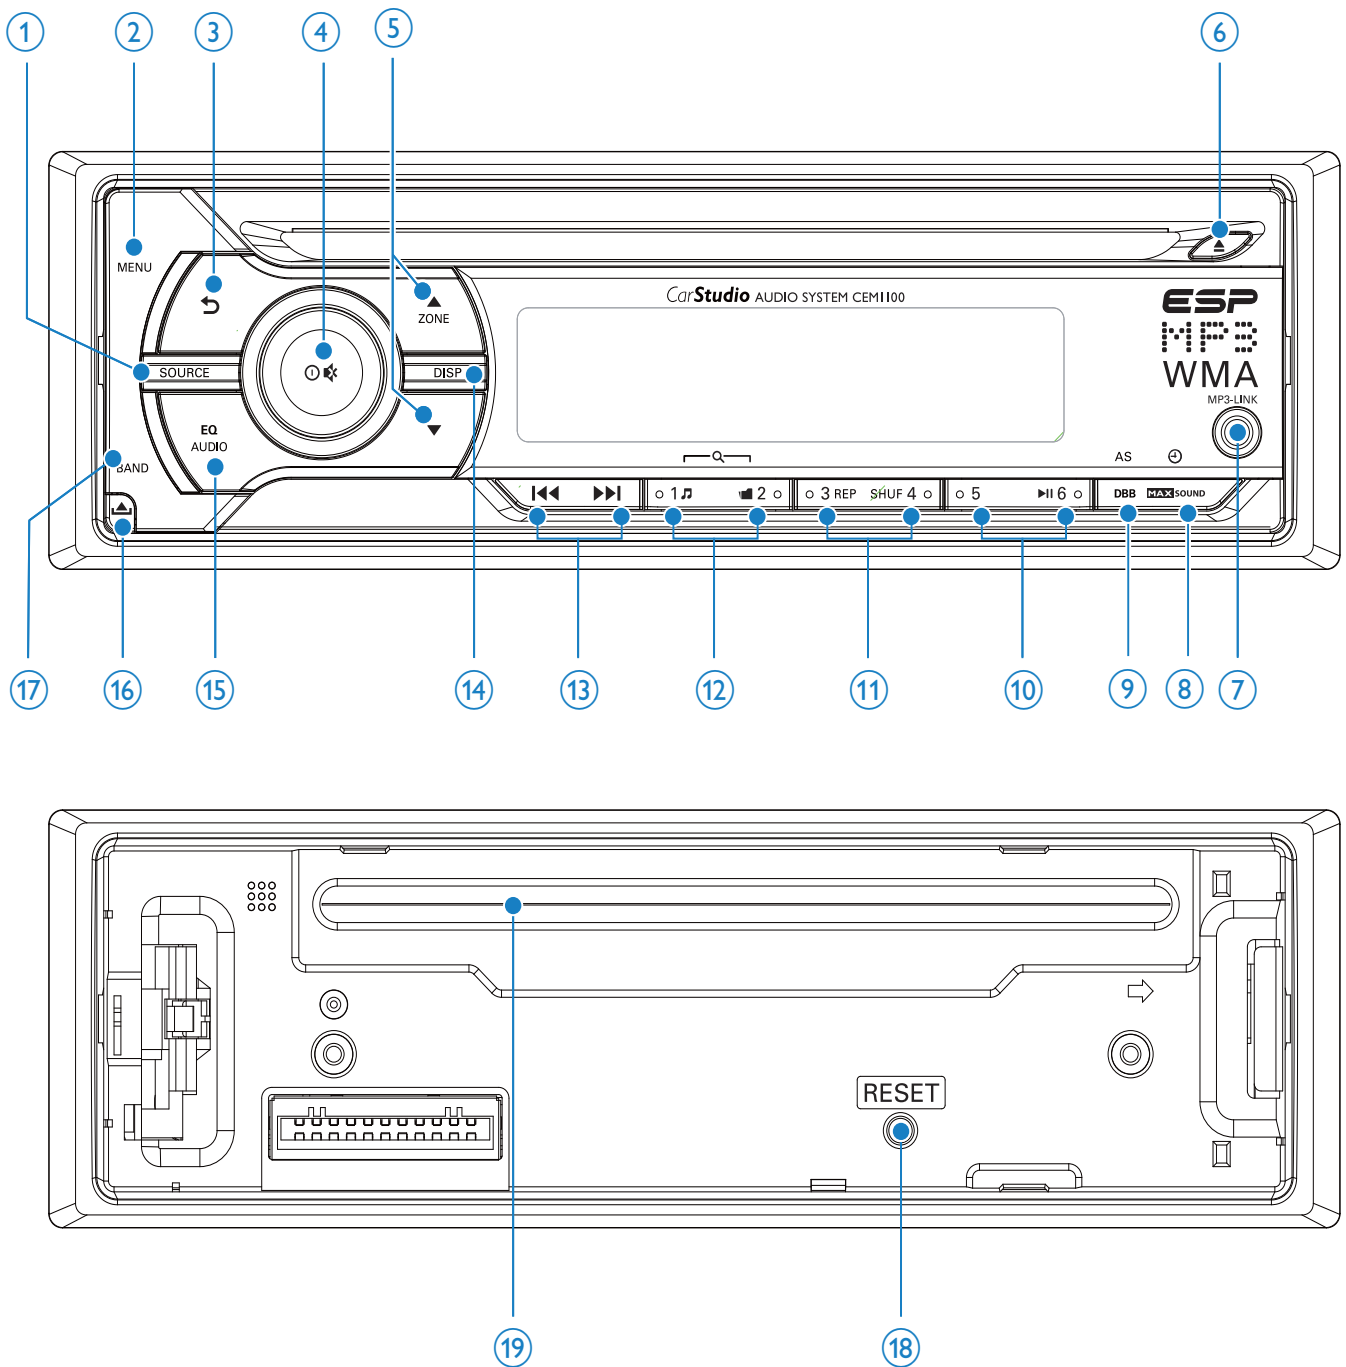

### ① SOURCE

- Select audio source.

### ② MENU

- Access system menu.

### ③ ↶

- Return to previous menu.

### ④ ① / ㊦

- Turn the unit on or off.
- Confirm selection.
- Mute or unmute sound.
- Rotate to adjust volume.

### ⑤ ZONE ▲ / ▼

- Select tuner band.
- Select MP3/WMA folder.

- Switch music listening zone.

## ⑥ ▲

- Eject disc.

## ⑦ MP3 LINK

- Connect external audio device.

## ⑧ **MAX SOUND**

- Turn on or off Maximizing volume.
- View clock.

## ⑨ DBB

- Turn on or off Dynamic Bass Boost (DBB) sound.
- Access to tuner auto store.

## ⑩ ►||

- Select preset radio station No.6.
- Start play.
- Pause or resume play.

## ⑪ REP / SHUF

- Select preset radio station No.3/4.
- Access to repeat play.
- Access to shuffle play.

## ⑫ 🎵 / 📁

- Select preset radio station No.1/2.
- Search for track/folder.

## ⑬ ⏮ / ⏭

- Tune for radio station.
- Skip/search for track.
- Fast backward/forward playback.

## ⑭ DISP

- Display current status.
- Select the dimmer high or low.

## ⑮ EQ / AUDIO

- Select equalizer (EQ) setting.
- Access audio setting menu.

## ⑯ 🔒

- Unlock the panel.

## ⑰ BAND


- Select tuner band.

## ⑱ RESET

- Restore default settings.

## ⑲ Disc slot

## Overview of the remote control

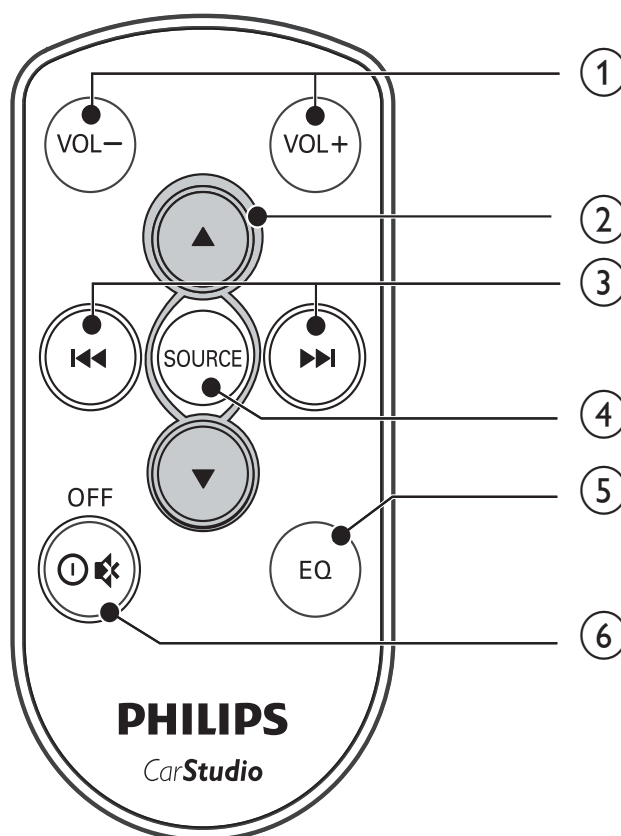

## ① VOL +/-

- Adjust volume.

## ② ▲ / ▼

- Select tuner band.
- Scroll up/down menu.
- Select MP3/WMA folder.

## ③ ⏮ / ⏭

- Tune to a radio station
- Skip track.
- Fast backward/forward playback

#### ④ SOURCE

- Select audio source.

#### ⑤ EQ

- Select equalizer (EQ) settings.

#### ⑥ OFF / ① / ❸

- Turn the unit on or off.
- Mute or restore volume.

## 3 Get started



### Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your apparatus. The model number and serial number are on the bottom of your apparatus. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Install the car audio

These instructions are for a typical installation. However, if your car has different requirements, make the corresponding adjustment. If you have any questions regarding installation kits, consult your Philips car audio dealer.



### Caution

- This unit is designed for negative ground (earth) 12V DC operation only.
- Always install this unit in the car dashboard. Other locations can be dangerous as the rear of the unit heats up during use.
- To avoid short-circuit: before you connect, ensure that the ignition is off.
- Ensure that you connect the yellow and red power supply leads after all other leads are connected.
- Ensure that all loose leads are insulated with electrical tape.
- Ensure that the leads do not get caught under screws or in parts that will move (e.g. seat rail).
- Ensure that all ground (earth) leads are run to a common ground (earth) point.
- Use only the supplied mounting hardware for a safe and secure installation.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.



### Note on the power supply lead (yellow)

- When you connect other devices to this apparatus, ensure that the rating of the car circuit is higher than the total fuse value of all the connected devices.

### Notes on speaker connection

- Never connect speaker wires to the metal body or chassis of the car.
- Never connect speaker wires with stripes to one another.

## Connection: for cars with ISO connectors



### Caution


- Ensure that all loose leads are insulated with electrical tape.



### Note

- Consult a professional to connect CEM1100 as instructed below.

- Connect the supplied male connector to the unit.

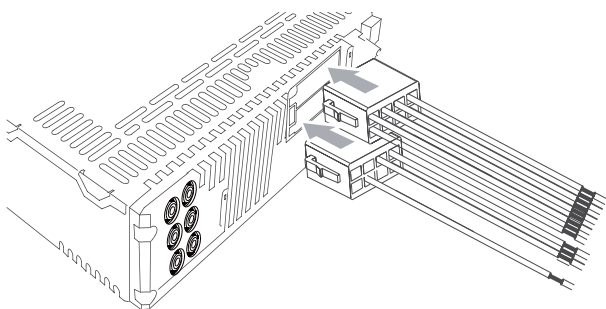


- Check the car's wiring carefully and connect them to the supplied male connector.




### Note

- Risk of danger! Please consult a professional to perform the below steps!

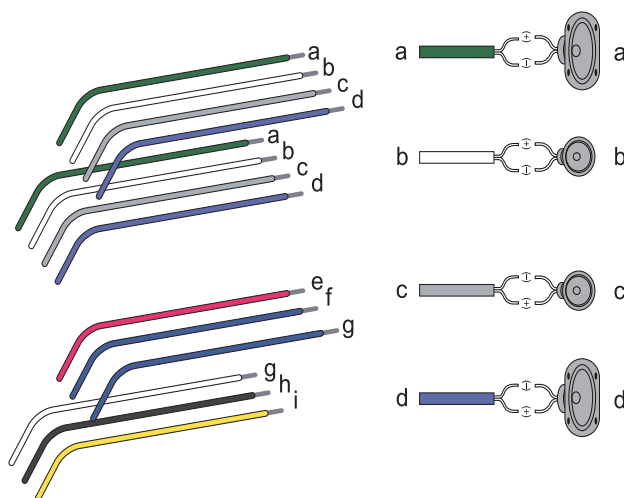

1	Green/black strip	Left speaker (Rear)
2	White/black strip	Left speaker (Front)
3	Gray/black strip	Right speaker (Front)
4	Purple/black strip	Right speaker (Rear)
e	Red	Ignition key +12V DC when ON/ACC
f	Blue	Motor/electric antenna relay control lead
g	Blue/white	Amplifier replay control lead
h	Black	Ground
i	Yellow	To the +12V car battery which is energized at all times

- Connect the antenna and amplifier as illustrated, if applicable.

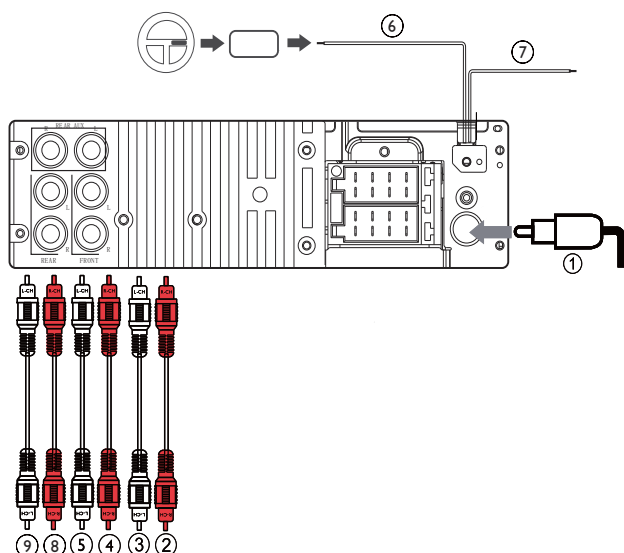

	Connector	Connect to
1	ANTENNA	Antenna
2	FRONT LINE OUT R (Socket)	Front right speaker
3	FRONT LINE OUT L (Socket)	Front left speaker
4	REAR LINE OUT R (Socket)	Rear right speaker
5	REAR LINE OUT L (Socket)	Rear left speaker
6	OE REMOTE (Purple)	OE Remote
7	TEL MUTING (Blue)	To cellular phone system
8	REAR AUX LINE OUT R (Socket)	Rear Aux right
9	REAR AUX LINE OUT L (Socket)	Rear Aux left



#### Tip


- The pin arrangement for the ISO connectors depends on the type of vehicle you drive. Be sure to make proper connections to prevent damage to the unit.

## Mount into the dashboard


- If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.

- If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
- If the car battery is not disconnected, to avoid short-circuit, ensure that the bare wires do not touch each other.

- Ensure that car dashboard opening is within these measurements:

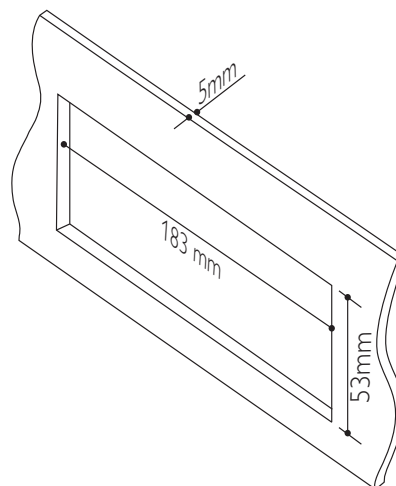

- Remove the mounting sleeve with the supplied disassembly tools.

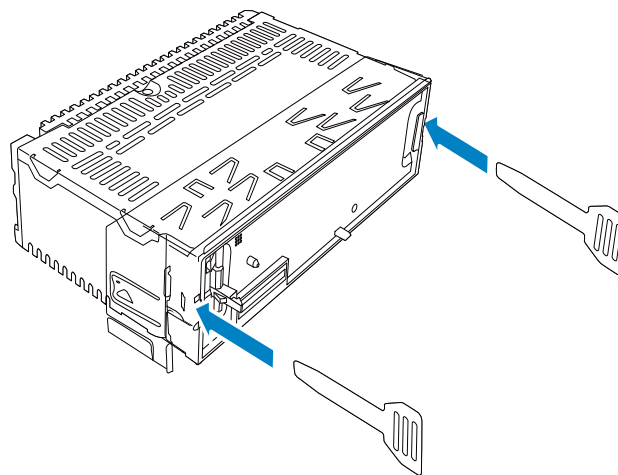


- Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.




#### Note


- If the unit is not fixed by sleeve but by the supplied screws, skip this step.

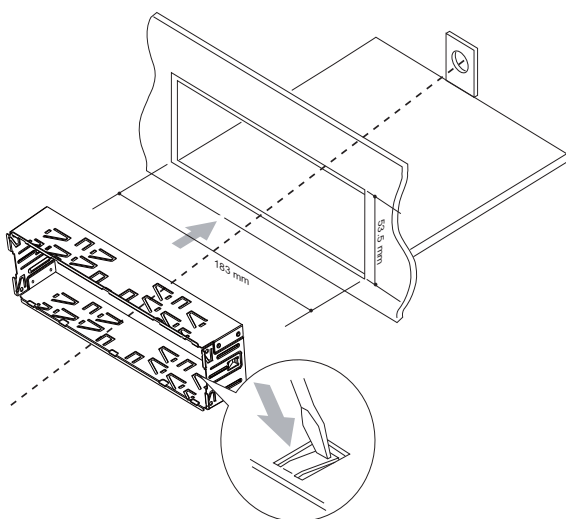

- 5 Place the supplied rubber cushion over the end of the mounting bolt.

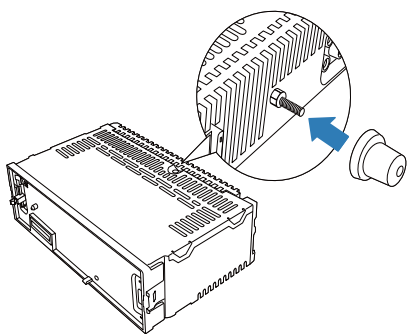



- 6 Slide the unit into the dashboard until you hear a click sound.

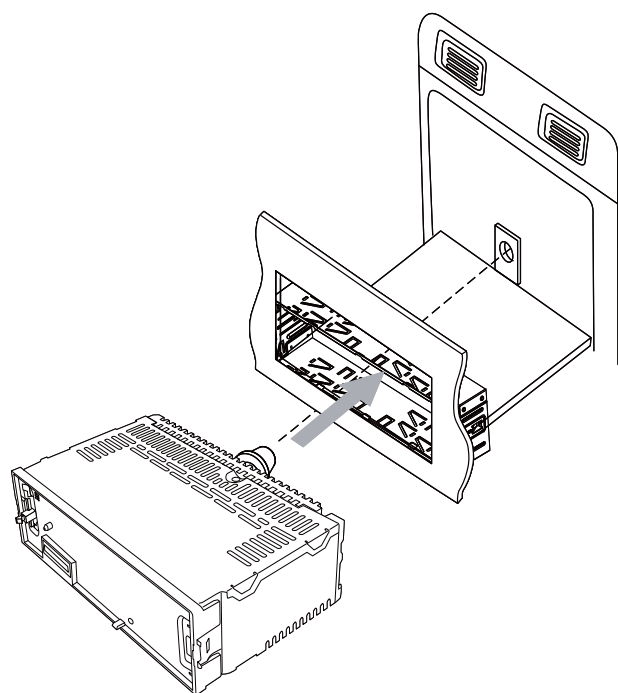

- 7 Reconnect the negative terminal of the car battery.

## Attach the front panel

- 1 Attach the trim plate.
- 2 Insert the right side of the panel in the chassis until it is correctly engaged.
- 3 Press the left side of the panel until the mechanism locks it into place.

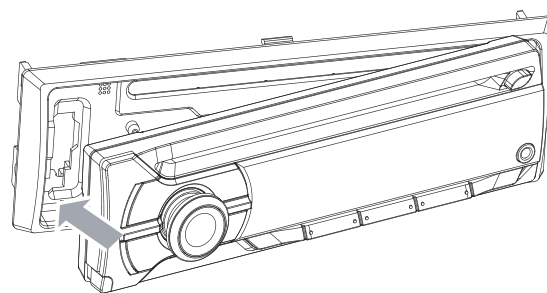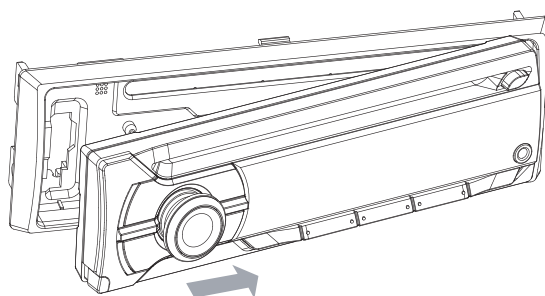

## Install remote control battery



### Caution


- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

### For first-time use:

Remove the protective tab to activate the remote control battery.

### To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert one CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

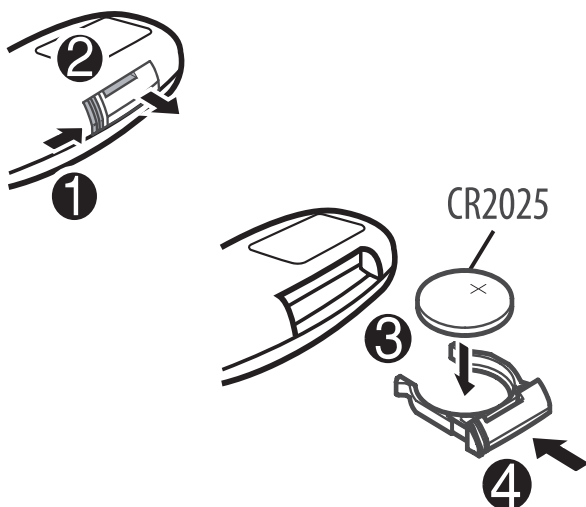

## Turn on

To turn on the unit,

- Press **⏻**.  
To turn off the unit,
- press and hold **⏻** until the unit is turned off.

## Select country/region



### Note

- Select correct country/region for this unit, otherwise the unit can not work properly.

- 1 Press **⏻** to turn on the unit.  
↳ **[SELECT OPERATING REGION]** is displayed.
- 2 Rotate **⌚** to select an option:
  - **[USA]** (United States)
  - **[LATIN]** (Latin America)
  - **[EUROPE]** (Western Europe)
  - **[RUS]** (Russia)
  - **[M-EAST]** (Middle East)

- **[ASIA]** (Asia Pacific)
- **[JAP]** (Japan)
- **[AUST]** (Australia)

- 3 Press **⏻** to confirm.

## Set clock

- 1 Press **MENU** repeatedly until current time is flashed.
- 2 Rotate **⌚** to set hour.
- 3 Press **⏻** to confirm.
- 4 Rotate **⌚** to set minute.
- 5 Press **⏻** to confirm.

## Set clock format

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[CLOCK FORMAT]** is displayed.
- 3 Rotate **⌚** to select a setting:
  - **[CLOCK 12H]**
  - **[CLOCK 24H]**

## View clock

In any mode, press and hold **MAX SOUND** until the clock is displayed.

- Press any key to cancel the clock display.

## 4 Listen to radio

### Tune to a radio station

- 1 Press **SOURCE** repeatedly to select radio mode.
- 2 Press **BAND** or **▲** / **▼** repeatedly to select band: **[FM1]**, **[FM2]**, **[FM3]**, **[AM1]**, or **[AM2]**.
- 3 Press and hold **◀◀** or **▶▶** until the frequency digit is flashed.
- 4 Press **◀◀** or **▶▶** to tune to a radio station manually.
  - ↳ The radio station is broadcast.
  - To search for a radio station automatically, press **◀◀** or **▶▶**.

### Select tuner region

You can select suitable country/region of the radio.

- 1 Press **SOURCE** to select radio mode.
- 2 Press **MENU** repeatedly until **[AREA]** is displayed..
- 3 Rotate **⌚** to select:
  - **[USA]** (United States)
  - **[LATIN]** (Latin America)
  - **[EUROPE]** (Western Europe)
  - **[RUS]** (Russia)
  - **[M-EAST]** (Middle East)
  - **[ASIA]** (Asia Pacific)
  - **[JAP]** (Japan)
  - **[AUST]** (Australia)
- 4 Press **⌚** to confirm.

### Select tuner sensitivity

To receive more radio stations or only stations with strong signal, you can adjust the tuner sensitivity.

- 1 Press **MENU** repeatedly until **[LOCAL]** is displayed.
- 2 Rotate **⌚** to select a setting:
  - **[LOCAL ON]** (local on): Only stations with strong signal can be broadcast.
  - **[LOCAL OFF]** (local off): Stations with strong and weak signals can be broadcast.

### Store radio stations in memory

You can store up to 6 stations in each band.

#### Store stations automatically

- 1 In Radio mode, press and hold **DBB** until **[STORE - - -]** is displayed.
- 2 Press **⌚** to confirm.
  - ↳ The six strongest stations of the selected band are saved in preset channel automatically.

#### Store stations manually

- 1 Tune to a station that you want to store (see 'Tune to a radio station' on page 14).
- 2 Press a numeric button for 3 seconds.
  - ↳ The station is saved in the selected channel.

### Tune to a preset station

- 1 Press **BAND** to select band.
- 2 Press a numeric key to select a preset station.

## 5 Play audio files



### Note

- Ensure that the disc or device contains playable files.

### Play a disc



### Note

- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio CDs and these discs:

- CD-Recordables (CD-R)
- CD-Re-writables (CD-RW)
- MP3 CDs
- WMA CDs



### Note

- Ensure that the disc contains playable content.

Insert a CD with the printed side facing up.

↳ Play starts automatically.

- To pause CD play, press ►||.
- To resume CD play, press ►|| again.
- To skip to the previous/next track, press ◀◀ or ▶▶.
- To search backward/forward rapidly within the current track, press ◀◀ or ▶▶ for 3 seconds.

### Remove the CD

To take out the CD, press ▲ on the front panel.



### Tip

- If the disc is blocked in the disc compartment, press and hold ▲ until the disc comes out.

## Play options

### Search for an MP3/WMA track

#### Search within the current folder

- 1 Press **♪**.  
↳ The name of the current track is displayed.
- 2 Rotate **⌚** to select another track in current folder.

- 3 Press **⌚** to confirm.

#### Search in other folder

- 1 Press **📁**.  
↳ The name of the current folder is displayed.
- 2 Rotate **⌚** to navigate through all folders.
- 3 Press **⌚** to access the selected folder.  
↳ The unit starts playing the first song from the selected folder automatically.



### Tip

- To go back to upper level of a folder, press **⏮**.

## View play information

During playing, press **DISP** repeatedly to view:

- Track number and elapsed play time
- Folder
- File
- Album
- Artist
- Title

---

## Repeat play

- 1 During play, press **REP**.  
↳ **[REPEAT]** is displayed.
- 2 Rotate **⌚** to select a setting.
  - **[REP TRK]** (repeat one track): play current track repeatedly.
  - **[REP FLD]** (repeat a folder): play all tracks in the current folder repeatedly.
  - **[REP ALL]** (repeat all tracks): play all tracks repeatedly.

---

## Shuffle play

You can play the tracks in random order:

- 1 During play, press **SHUF**.  
↳ **[SHUFFLE]** is displayed.
- 2 Rotate **⌚** to select a setting:
  - **[SHUF FLD]**: start random play for all tracks in the current folder.
  - **[SHUF ALL]**: start random play for all tracks.
  - **[SHUF OFF]**: cancel shuffle play.

---

## Connect external sound source

- 1 Connect the external sound source to **MP3 LINK** socket with a 3.5 mm cable.
- 2 Press **SOURCE** repeatedly until **[MP3 LINK]** is displayed.
- 3 Operate the external component (refer to the instructions supplied with the external component).

---

# 6 Adjust sound

---

## Adjust volume

Turn **⌚** clockwise/counterclockwise to increase/decrease volume.

---

## Mute

You can turn off the sound of your audio. During play, press **⌚**.

- To resume sound, press **⌚** again.

---

## Turn Dynamic Bass Boost (DBB) on/off

- 1 Press **DBB** and the current setting is displayed:
  - ↳ **[DBB ON]** :The Dynamic Bass Boost (DBB) function is on.
  - ↳ **[DBB OFF]** :The DBB function is off.
- 2 Press **DBB** again to change the DBB setting.

---

## Turn on/off MAX sound

- 1 Press **MAX SOUND**.
  - ↳ The current setting displays
  - ↳ **[MAX ON]**:The maximum sound (MAX sound) function is on.
  - ↳ **[MAX OFF]**:The maximum sound function is off.
- 2 Press **MAX SOUND** again to select an option.

---

## Select preset equalizer

- 1 Press **EQ / AUDIO**.

↳ Current Equalizer setting is displayed.

**2** Press **EQ / AUDIO** again to select a preset EQ setting:

- **[OPTIMAL]** (optimal)
- **[FLAT]** (flat)
- **[POP]** (pop)
- **[USER]** (user)
- **[TECHNO]** (techno)
- **[ROCK]** (rock)
- **[CLASSIC]** (classic)
- **[JAZZ]** (jazz)

- **[BAL]** (balance) range: 12L to 12R. (L=left speaker, R=right speaker)
- **[FAD]** (fader) range: 12R to 12F. (R=rear speaker, F=front speaker)

**3** Rotate **⌚** to select a value.

## Switch music listening zone

Philips' innovative Zone technology enables driver or passengers to enjoy music with the best speakers balance and experience more vivid spacial effect as the artist is intended to create. You can switch the music listening zone from driver to passengers for the best speaker sound settings in car.

**1** Press **ZONE**.

↳ The current setting is displayed.

**2** Rotate **▲ / ▼** to select a setting:

- **[ALL]**
- **[FRONT-L]** (Front left)
- **[FRONT-R]** (Front right)
- **[FRONT]**

## Other sound settings

You can also adjust the preset **EQ / AUDIO** settings.

**1** Press **EQ / AUDIO** for 3 seconds.

**2** Press **▲** or **▼** repeatedly to select the item to be adjusted:

- **[BAS]** (bass) range: -7 to +7.
- **[TRE]** (treble) range: -7 to +7.



## 7 Adjust system settings

### Turn beep sound on/off

Each time you press a button, the unit beeps. You can turn off/on this beep sound.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[BEEP]** is displayed.
- 3 Rotate **⌚** to select a setting:
  - **[BEEP ON]**: Turn on the beep sound.
  - **[BEEP OFF]**: Turn off the beep sound.

### Turn demo mode on/off

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[DEMO]** is displayed.
  - ↳ The screen shows current Demo mode setting.
- 3 Rotate **⌚** to select a setting:
  - **[DEMO ON]**: Turn on the demo mode. When the unit is idle for more than 10 seconds, all functions are displayed.
  - **[DEMO OFF]**: Turn off the demo mode.

### Dimmer

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[DIMMER]** is displayed.
- 3 Rotate **⌚** to select a setting:
  - **[DIMM HIGH]** (dimmer high)
  - **[DIMM LOW]** (dimmer low)

### Dance

You can turn on or off the spectrum on the LCD display.

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[DANCE]** is displayed.
- 3 Rotate **⌚** to select a setting:
  - **[DANCE ON]**: Turn on the spectrum.
  - **[DANCE OFF]**: Turn off the spectrum.

### Rear Aux

- 1 Press **MENU**.
- 2 Press **▲** or **▼** repeatedly until **[TEL MUTE]** is displayed.
- 3 Rotate **⌚** to select a setting:
  - **[NORMAL]**: Mute the telephone, **[MUTE]** is displayed.
  - **[REAR AUX]**: Mute the telephone, **[PHONE IN]** is displayed.




#### Note

- To support telephone call with this unit, connect **TEL MUTING** wire to your hands-free kit and audio out jack to the **REAR AUX** in jack of the unit.

### Reset

You can reset the unit to its default setting.


- 1 Detach the front panel. (see 'Detach the front panel' on page 19)
- 2 Press the reset button by using a ball-point pen or a similar tool.
  - ↳ Preset adjustments such as preset channels and sound adjustments are erased.


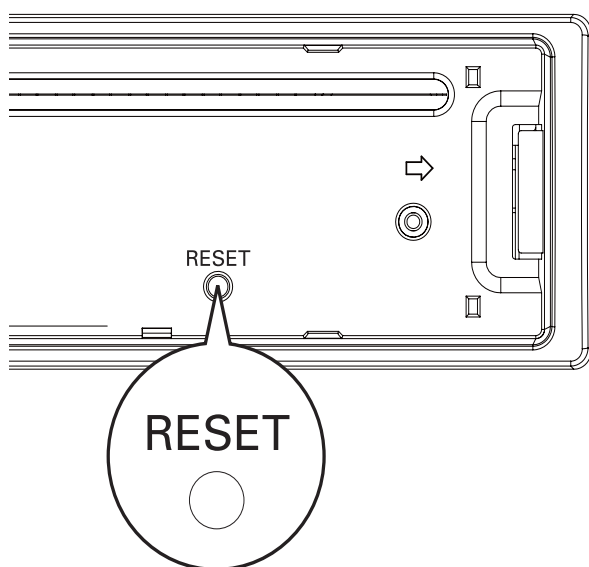


## 8 Additional information

### Detach the front panel

You can detach the front panel to deter theft.

- 1 Press  to release the panel.
- 2 Pull the panel towards you to disengage it from the chassis.

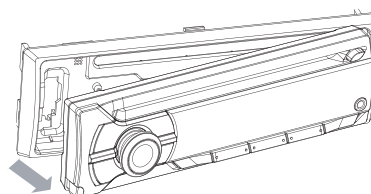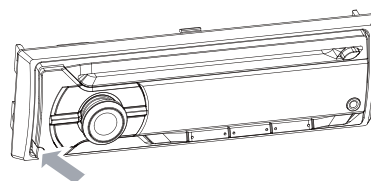


- 3 Store the panel in the supplied carrying case to protect it from dirt or damage.

### Replace fuse

If the fuse is damaged,

- 1 Check the electric connection.
- 2 Buy a fuse that matches the voltage of the damaged fuse.

### 3 Replace the fuse.

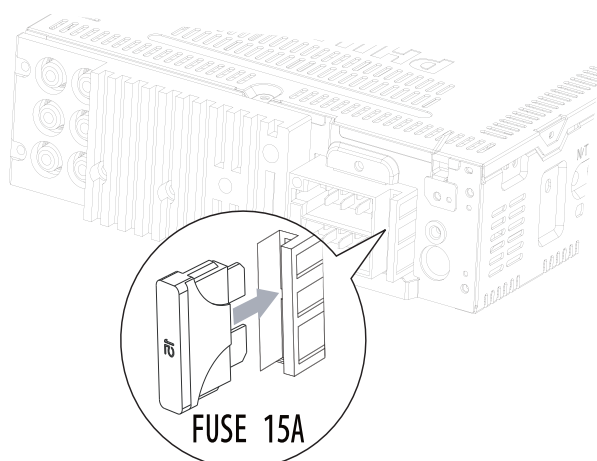


#### Note

- If the new fuse gets damaged again, there may be an internal malfunction. Consult your Philips dealer.

## Remove the unit

You can remove the unit from the dashboard.

- 1 Detach the front panel.
- 2 Pull out the unit by using the disassembly tools.

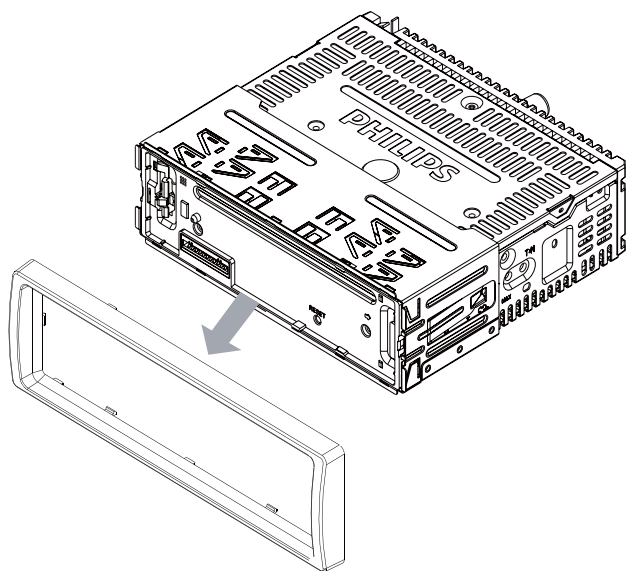

## 9 Product information

#### Note

- Product information is subject to change without prior notice.

Power supply	12 V DC (11 V - 16 V), negative ground
Fuse	15 A
Suitable speaker impedance	4 - 8 $\Omega$
Maximum power output	50 W $\times$ 4 channels
Continuous power output	22 W $\times$ 4 RMS (4 $\Omega$ 10% T.H.D.)
Pre-Amp output voltage	2.5V
Aux-in level	500 mV
Dimensions (W $\times$ H $\times$ D)	181.5 $\times$ 52 $\times$ 191.4 mm
Weight	1.47 kg

#### Radio

Frequency range - FM	87.5 - 108.0 MHz (100kHz per step in auto search and 50kHz per step in manual search)
Frequency range - AM(MW)	522 - 1620 KHz (9 kHz) 530 - 1710 kHz (10 kHz)
Usable sensitivity - FM	8 $\mu$ V
Usable sensitivity - AM(MW) (S/N = 20 dB)	30 $\mu$ V

#### Supported formats:

- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- MP3 sampling frequencies: 8-48 kHz
- WMA V4,V7,V8,V9 (L1, L2)
- ISO9660, Joliet

- WMA sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz
- WMA Bit-rates: 32~192 (kbps), variable bit rates
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: CD maximum 99
- Number of tracks/titles/files: CD maximum 999 (depending on number of album)
- ID3 tag v2.0 or later

#### Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/ WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4p, .mp4, .aac)
- WMA files in Lossless format

## 10 Troubleshooting



#### Caution

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.philips.com/support](http://www.philips.com/support)). When you contact Philips, ensure that your apparatus is nearby and the model number and serial number are available.

#### No power or no sound.

- Car engine is not on. Turn the car engine on.
- Cable is not correctly connected. Check connections.
- Fuse is burnt. Replace fuse.
- Volume is too low. Adjust volume.
- If the above solutions cannot help, press the RESET button.
- Ensure that the track played is of a compatible format.

#### Noise in broadcasts.

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.
- Change broadcast from Stereo to mono.

#### Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.

- Ensure that the CD is a finalised CD/ CD-R/CD-RW.
- Ensure that the CD is not encoded with copyright protection technologies.

#### **The CD skips tracks**

- Ensure that the CD is not damaged or dirty.
- Ensure that random mode is deactivated.

#### **Disc cannot be ejected**

- Press and hold ▲.

#### **Preset stations lost.**

- Battery cable is not correctly connected. Connect the battery cable to the terminal that is always live.

## 11 Glossary

---

### M

#### **MP3**

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

---

### W

#### **WMA (Windows Media Audio)**

An audio format owned by Microsoft, is a part of Microsoft Windows Media technology. Includes Microsoft Digital Rights Management tools, Windows Media Video encoding technology, and Windows Media Audio encoding technology.

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	O	O	O	O	O	O
DVD/CD loader DVD/CD 光盒	X	O	O	O	O	O
LCD Panel 液晶面板	X	X	O	O	O	O
PWBs 电路板组件	X	O	O	O	O	O
Accessories (Remote control & cables) 附件（遥控器，电 源线，连接线）	X	O	O	O	O	O
Batteries in Remote Control (ZnC) 遥控器电池	X	O	O	O	O	O

O：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 – 2006.

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 – 2006 标准规定的限量要求。

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.




环保使用期限 Environmental Protection Use Period

*This logo refers to the period ( 10 years )*

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period ( 10 years ) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

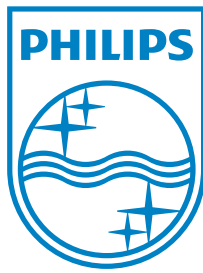

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



CSP550



CSP650



CSP652



# Contents

<b>1</b>	<b>Important</b>	<b>4</b>
	Safety	4
	Notice	4
<b>2</b>	<b>Your car stereo speakers</b>	<b>5</b>
	Introduction	5
	What's in the box	5
<b>3</b>	<b>Installation</b>	<b>6</b>
	Mount the woofer	6
	Mount the Tweeter	7
	Mount the network	8
	Connect the woofer/tweeter to the network	9
<b>4</b>	<b>Product information</b>	<b>10</b>
<b>5</b>	<b>Troubleshooting</b>	<b>11</b>

# 1 Important

---

## Safety

- Read and understand all instructions before you use the apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- Use only the supplied mounting hardware for a safe and secure installation.
- Do not continuously use the speaker system beyond the peak power handling capacity.
- Keep credit cards, watches, recorded tapes etc. with magnetic coding away from the speaker system to prevent damage caused by the magnets in the speakers.
- Clean the apparatus with soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.

---

## Notice

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

2009 © Koninklijke Philips Electronics N.V.

All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

## 2 Your car stereo speakers


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Introduction

With the woofers and tweeters, you can enjoy high power music with vivid sound.

### What's in the box

Check and identify the contents of your package:

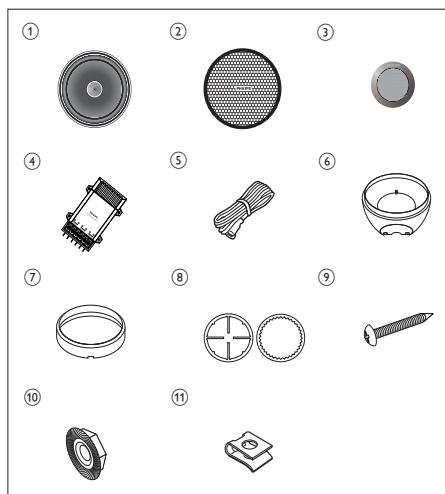

- ① Woofer (x2)
- ② Grille assembly (x2)
- ③ Tweeter (with wire) (x2)
- ④ Network (x2)
- ⑤ Speaker wire (x4)
- ⑥ Angle adapter (x2)
- ⑦ Fix frame (x2)
- ⑧ Mounting bracket (x4)
- ⑨ Screw
- ⑩ Screw nut
- ⑪ Shrapnel

## 3 Installation

A depth of at least 52mm is required to mount the woofer and a depth of at least 19mm is required to mount the tweeter. Measure the depth of the area where you are to mount the woofer/tweeter, and ensure that the woofer/tweeter does not obstruct any other components of the car.


### Note

- Make sure that nothing obstructs around the mounting location of the door.
- A hole for mounting may already be cut out of the inner panel of the door (front or rear). In this case, you need to modify the board only.
- Ensure that the speaker terminals, frame or magnet do not interfere with any inner parts, such as the window mechanism in the door (when you open or close the window), etc. Also ensure that the speaker grille does not touch any inner fittings, such as the window cranks, door handles, arm rests etc.


### Mount the woofer

#### Option 1: Mount on door (front or rear)


You can mount the woofers on the front/rear door of your car.

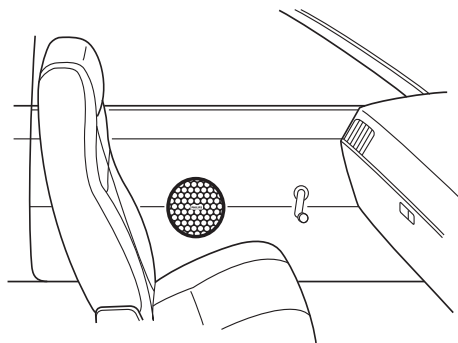


- 1 Turn off the car ignition key.
  - If the power is on, the click noise generated by the connection may damage the speakers.
- 2 Cut out the mounting template from the packing box and paste it on the location selected for mounting the woofer.
- 3 Mark the cut-off hole and the 4 bolt holes.



- 4 Cut out the marked area and drill the bolt holes.

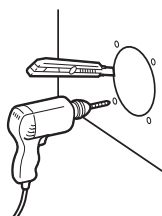


- 5 Remove the grille net.

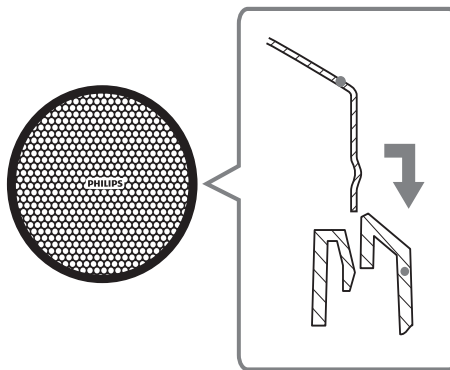


- 6 Connect the woofers to the network or car audio (see "Connect the woofer/tweeter to the network" section).

- 7 Mount on the speaker as shown below.

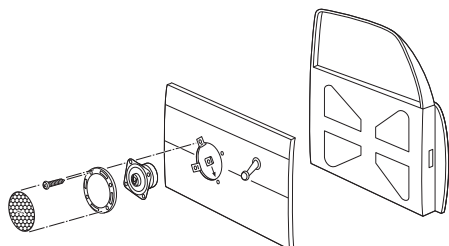

- 8 Press and insert the edges of the grille net.

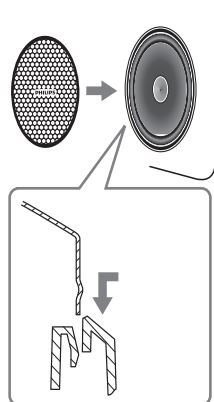


Tip

- The speaker grille can be mounted without the grille net, if you like.

### Option 2: Mount on rear tray

You can also mount the woofers into the surface of the rear tray.

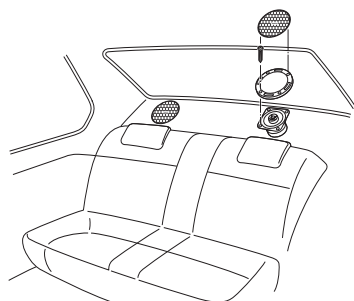


Follow the steps in section "Option 1: Mount in door" to mount the speakers into the rear tray.


## Mount the Tweeter

Follow steps mentioned in "Mount the woofer" section to mount the tweeters.

### Option 1: Flush mounting

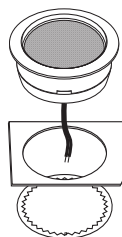

### Option 2: Flush mounting

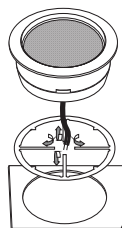


### Option 3: Surface mounting



#### Option 4: Surface mounting



#### Option 5: Angle mounting



## Mount the network

- 1 Find a proper location to mount the networks.
- 2 Mount the networks onto the car with the supplied screws.




## Connect the woofer/tweeter to the network

### Note

- Match the "left", "right", "+" and "-" terminals correctly. Revised polarity may degrade sound quality.
- Two 4-ohm speakers, wired in stereo, present a 8 ohm load to each channel of the amplifier. Most two channel amplifiers work well in this configuration. However, if two 4-ohm speakers, wired in parallel to a bridged two -channel amplifier, present a 2-ohm mono load to the amplifier. Most 2-channel amplifiers do not support 2-ohm mono operation! Amplifier damage may result!

- 1 Connect the woofers and the tweeters to the 2-way crossover network first, then connect the network to your amplifier or car audio directly.

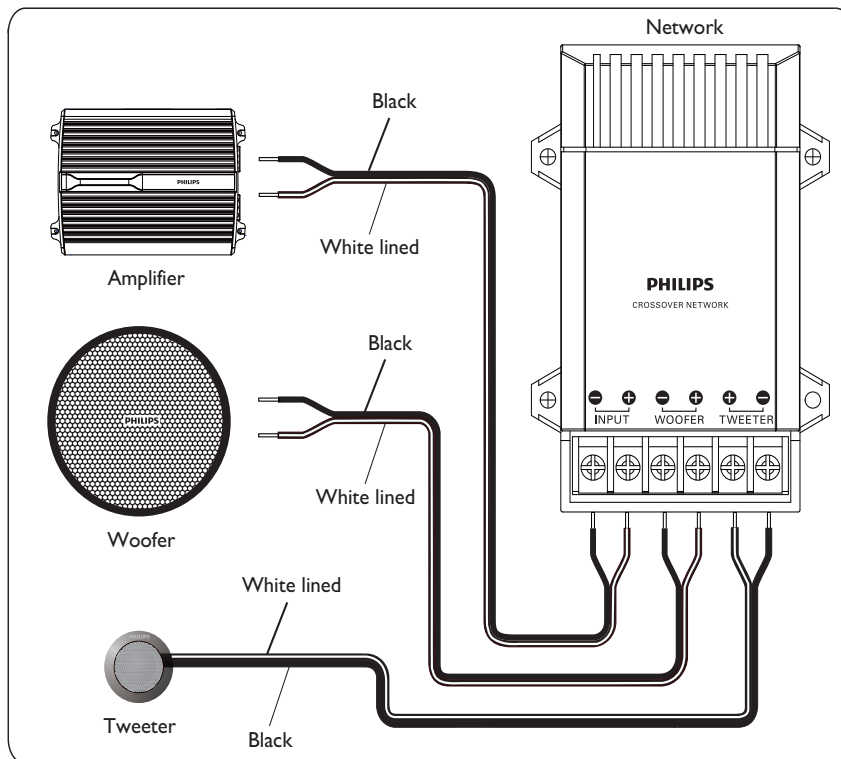

## 4 Product information

### Note

- Product information is subject to change without prior notice.

Model	CSP550	CSP650	CSP652
Speaker type	13cm, 2-way component speaker	16.5cm, 2-way component speaker	16.5cm, 2-way component speaker
RMS power (Watts)	40W	50W	60W
Peak music power (Watts)	210W	240W	300W
Sensitivity (dB/W/m)	90dB	90dB	91dB
Frequency response (Hz)	40-35kHz	36-35kHz	34-35kHz
Impedance (ohms)	4ohm	4ohm	4ohm
Magnet mass(Oz)	11Oz	12.6Oz	18.8Oz
Woofer mounting depth (mm)	52mm	61mm	63mm
Tweeter mounting depth (mm)	19mm	19mm	19mm



## 5 Troubleshooting

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, go to the Philips web site ([www.philips.com/welcome](http://www.philips.com/welcome)). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.



© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

Document order number: CSP550\_55\_UM\_V2.1