



Philips
Wireless stereo speaker

Bluetooth®

Built-in microphone for calls
4 x AA battery
5W



BT3000W

Stream tunes wirelessly in seconds

Easy wireless Bluetooth® music streaming in a sleek, modern case. Bass Reflex speakers deliver deep and powerful bass while a built-in microphone is ideal for hands-free calling. Battery operation allows it to go wherever you want.

Impressive sound

- Bass Reflex Speaker System delivers a powerful, deeper bass
- 5W RMS total output power

Simplicity in use

- Wireless music streaming via Bluetooth
- Built-in microphone for hands-free phone calls
- Audio-in for easy portable music playback

Advanced versatility

- Battery or AC power option for music enjoyment anywhere
- Up to 8 hours music playback

PHILIPS

Wireless stereo speaker
Bluetooth® Built-in microphone for calls, 4 x AA battery, 5W

Highlights

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

5W RMS

This system has 5W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection

to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

AUDIO-IN (3.5mm)




Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Battery or AC powered

Battery or AC power option for music enjoyment anywhere

Up to 8 hours music playback

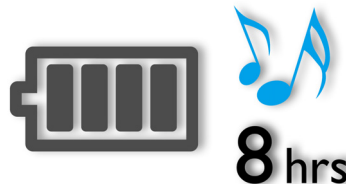

Enjoy music playback for up to 8 hours on a single charge.

BT3000W/12

Specifications

Compatibility

- iPad: iPad 1, iPad 2, iPad mini, iPad with Retina display, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above
- other Bluetooth-enabled device

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

Convenience

- Built-in microphone: for speaker conference

Sound

- Output power (RMS): 5W
- Sound System: Stereo

Loudspeakers

- Speaker drivers: 2 x 2.75"

Power

- Operating time on battery: 8 hr
- Battery type: AA
- Number of batteries: 4
- Mains power: 110 - 220V

Accessories

- AC/DC adaptor
- Quick start guide
- Warranty certificate
- World Wide Warranty leaflet

Product dimensions

- Product dimensions (W x H x D): 28 x 12,1 x 9,3 cm
- Weight: 1,25 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 36,9 x 16,8 x 14,1 cm
- EAN: 87 12581 72086 5
- Gross weight: 1,7 kg
- Nett weight: 1,385 kg
- Number of products included: 1
- Packaging type: Dummy
- Tare weight: 0,315 kg
- Type of shelf placement: Dummy

Outer Carton

- Gross weight: 3,8 kg
- GTIN: 1 87 12581 72086 2
- Outer carton (L x W x H): 38,2 x 15,5 x 35,5 cm
- Nett weight: 2,770 kg
- Number of consumer packagings: 2
- Tare weight: 1,030 kg



Issue date 2014-08-13

Version: 2.1.7

12 NC: 8670 001 14709
EAN: 08 71258 17208 65

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com