

Philips
Wireless Home Theatre
System

HTS5000W



Experience everything wireless

This stylish and compact full digital home entertainment system plays practically any disc in high quality Dolby, DTS or SACD surround sound. So relax and fully immerse yourself in movies and music at home.

Superb audio and video performance

- PAL & NTSC Progressive Scan gives razor-sharp images
- 12-bit/108MHz video processing for sharp, natural images
- Conical Dome Tweeters enhance SACD sound in high frequencies

Plays it all

- Movies: DVD, DVD+R/RW, (S)VCD, DivX, MPEG4
- Photos (JPEG) with musical slideshow
- Music: SACD, CD, MP3-CD, CD-R, CD-RW & Windows Media™ Audio

Ultimate convenience

- USB Direct plays photos and music from USB flash drives
- Wireless rear speakers for fewer wires across your room



PHILIPS
sense and simplicity

Specifications

Picture/Display

- **Aspect ratio:** 4:3, 16:9
- **D/A converter:** 12 bit, 108 MHz
- **Picture enhancement:** 3/2 - 2/2 motion pull down, Progressive Scan, Video upsampling

Sound

- **D/A converter:** 24 bit, 192 kHz
- **Equalizer settings:** Action, Classic, Concert, Digital, Drama, Jazz, Rock, Sci-Fi
- **Frequency response:** 30-20000 Hz Hz
- **Output power (RMS):** 4x75W (front+surround), 2x100W (center+subwoofer)
- **Signal to noise ratio:** >95 dB
- **Sound Enhancement:** Class "D" Digital Amplifier, Dynamic Bass Enhancement
- **Sound System:** Dolby Digital, Dolby Prologic II, DTS, Stereo
- **Total Sound Power (RMS):** 500 W

Loudspeakers

- **Satellite Speaker:** Magnetically shielded front
- **Satellite speaker freq range:** 120-20000 Hz Hz
- **Satellite speaker impedance:** 6 ohm
- **Satellite speaker drivers:** 1" conical dome tweeter, 3" full range woofer
- **Centre Speaker:** Magnetically shielded
- **Centre freq range:** 120-20000 Hz Hz
- **Centre speaker impedance:** 3 ohm
- **Centre speaker drivers:** 1" conical dome tweeter, 3" full range woofer
- **Subwoofer freq range:** 30-120 Hz
- **Subwoofer impedance:** 3 ohm
- **Subwoofer driver:** 6.5" high efficiency woofer

Video Playback

- **Compression formats:** MPEG1, MPEG2, MPEG4, XviD, DivX 3.11, DivX 4.x, DivX 5.x
- **Playback Media:** 80mm + 120mm audio discs, CD, CD-R/CD-RW, DivX, DVD, DVD+RW, DVD+R, DVD-RW (Video mode), DVD-R, DVD-Video, MP3-CD, MPEG4, Picture CD, Super Audio CD, Video CD/SVCD, WMA
- **Disc Playback Modes:** A-B Repeat, Angle, CD Text, Night mode, PBC, Repeat, Resume Playback from Stop
- **Loader Type:** Slot
- **Video disc playback system:** NTSC, PAL
- **Video Enhancement:** Progressive Scan

Audio Playback

- **Compression format:** Dolby Digital, DTS, MP3, PCM, Windows Media™ Audio
- **Playback Media:** CD, MP3-CD, WMA, CD-R, CD-RW, SACD Multichannel, SACD Stereo
- **MP3 bit rates:** 32-256 kbps and VBR

Still Picture Playback

- **Playback Media:** Picture CD
- **Picture compression format:** JPEG
- **Picture enhancement:** Rotate, Slideshow with MP3 playback
- **Slide show:** with music (MP3)

Tuner/Reception/Transmission

- **Antenna:** AM antenna, FM Antenna
- Auto digital tuning
- Auto store
- **Number of Preset Channels:** 20
- **RDS:** Station Name
- **Tuner Bands:** FM Stereo, MW

Connectivity

- **Front / Side connections:** USB
- **Other connections:** AUX in, ComponentVideo out Progressive, Composite video (CVBS) out, Digital coaxial in, Easy-Fit speaker connectors, FM Antenna, Line out, MW Antenna, S-Video out, SCART I (CVBS, S-video/RGB out)

Convenience

- **Remote Control:** Multi-functional
- **Remote control:** 3139 2587 0141

Accessories


- **Included Accessories:** 1x centre speaker, 1x subwoofer, 2x front satellite speakers, 2x rear satellite speakers, AC Power Cord, Batteries for remote control, FM/MW Antenna, Quick Use Guide, Remote Control, Scart Cable, User Manual, Warranty certificate, Wireless receiver

Dimensions

- **Center speaker dimensions (W x H x D):** 225 x 94 x 75 mm
- **Centre Speaker Weight:** 0.78 kg
- **Packaging dimensions (W x H x D):** 547 x 310 x 539 mm
- **Receiver dimensions (W x H x D):** 210 x 55 x 185 mm
- **Receiver Weight:** 0.9 kg
- **Set dimensions (W x H x D):** 360 x 54 x 324 mm
- **Set weight:** 3 kg
- **Subwoofer dimensions (W x H x D):** 360 x 340 x 130 mm
- **Subwoofer Weight:** 3.92 kg
- **Surround Speaker dimensions (W x H x D):** 94 x 175 x 65 mm
- **Surround speaker Weight:** 0.7 kg
- **Weight incl. Packaging:** 13.8 kg

Power

- **Power supply:** 200-240 V, 50Hz
- **Standby power consumption:** < 0.5 W

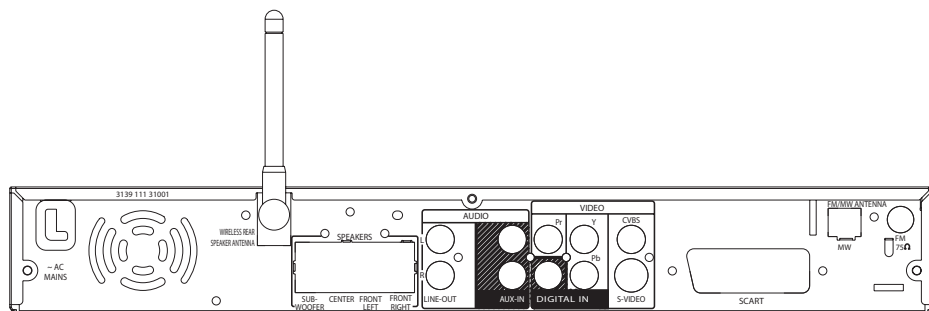



Product highlights

12-bit/108MHz video DAC

12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother gradation of colours, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

PAL & NTSC Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending fields with the odd lines to the screen first, followed by the fields with the even lines, both fields are written at one time. A flicker free high resolution image is created giving you the best viewing experience.

Conical Dome Tweeters

Conical Dome Tweeters enhance SACD sound at the highest frequencies by capturing every nuance and inflection of sound by using an extremely light and stiff membrane created of LEXAR, which allows the tweeters to deliver a higher range of audio frequency. The special cone shape of the reflector dish ensures a wider sound distribution of the higher frequencies. This results in stunningly clear and crisp highs and an overall more balanced sound perception.

Multi-format Movies-DivX, MP4

Multi format playability allows you to play most disc formats for maximum compatibility and viewing pleasure.

Music:SACDWindows Media™ Audio

Multi format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Photos with musical slideshow

Make sharing photos with family and friends more fun! Run a photo slideshow with music playing in the background. This Philips product supports simultaneous playback of JPEG pictures and MP3 music. Make sure the files for the musical slideshow are stored in the same media. Select your favourite MP3 music and start a slideshow of JPEG pictures.

Wireless rear speakers

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

USB Direct

Simply plug your device into the USB port on your Philips DVD system. Your digital music and photos will be played directly from the device. Now you can share your favourite moments with family and friends.



Issue date 2007-12-07

Version: 1.0

12 NC: 9073 100 12097
EAN: 87 10895 85786 4

© 2007 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com