


Philips  
MP3 portable speaker

Universal 3.5mm

Black & Red



TCP320

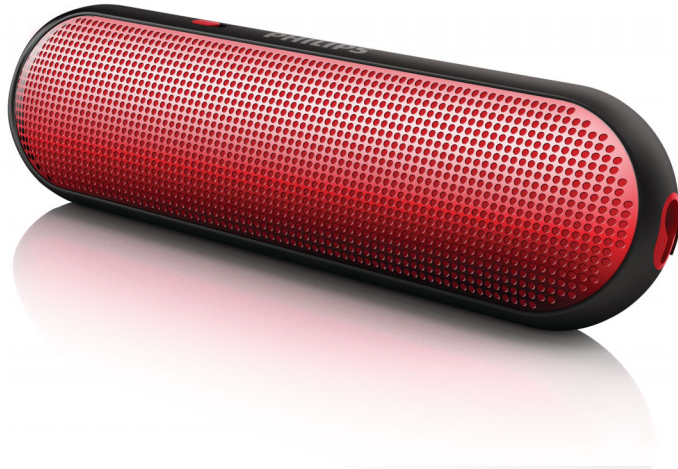

## Stereo sound on the go

from a fun, pocket-sized speaker

Move with your music! Enjoy stereo sound wherever you go on a travel speaker with exceptional battery life. Secure the line-in cable to use as a lanyard for easy portability. Inside, a digital amplifier eliminates mobile-phone interference.

### Enjoy your music in stereo

- Class 'D' digital amplifier for quality sound performance
- Lightweight, portable design for music enjoyment anytime
- Mobile phone shielding technology for static-free sound
- Universal: works via your device's 3.5mm headphone jack

### Take your music with you

- 40 hours of continuous play for worry-free enjoyment
- Battery powered for portability
- Line-in cable becomes a lanyard for easy portability

**PHILIPS**  
sense and simplicity

MP3 portable speaker  
Universal 3.5mm Black & Red

TCP320/00

# Specifications

## Compatible with

- PCs and laptops
- Mobile phones and mp3 players
- GoGear
- iPhone
- iPod
- iPad

## Design and finishing

- Color(s): black and red

## Sound

- Frequency response: 350 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W

## Accessories

- Batteries: not included

## Power

- Battery type: AAA
- Operating time on battery: 40 hr
- Number of batteries: 3

## Product dimensions

- Product dimensions (W x H x D):  
8.5 x 14.5 x 2.5 cm
- Weight: 0.074 kg

## Outer Carton

- Gross weight: 1.67 kg
- GTIN: 1 69 23410 71727 0
- Outer carton (L x W x H): 22.7 x 21.2 x 20.2 cm
- Nett weight: 1.092 kg
- Number of consumer packagings: 12
- Tare weight: 0.578 kg

## Packaging dimensions

- Packaging dimensions (W x H x D):  
9.5 x 17.3 x 3.37 cm
- EAN: 69 23410 71727 3
- Gross weight: 0.111 kg
- Nett weight: 0.091 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.02 kg
- Type of shelf placement: Both

# Highlights

## 40 hours of continuous play

Powered by batteries, this speaker offers up to 40 hours of continuous play for worry-free enjoyment when you're listening to your music on the go.

## Battery powered

Powered by batteries, it's easy to take with you for enjoyment on the go - anywhere and everywhere.

## Class 'D' Amplifier

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.



Issue date 2013-03-26

Version: 1.0.8

12 NC: 8670 000 92146  
EAN: 69 23410 71727 3

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)