



Philips  
wireless portable speaker

Bluetooth® and NFC

Splash proof  
Rechargeable battery  
Camouflage



BT6000C

## Small is Great

Big sound 360° around

Chuck the speaker down any way you like, vertical or horizontal. 360° of sound means you get big sound all around, every time. Splashproof, rugged and equipped with wireless music streaming it brings warm, natural sound wherever you go.

### Designed to go places

- Built-in rechargeable Li-ion battery for playback anywhere
- Splash-proof design ideal for outdoor use (IPX4)

### Advanced versatility

- Audio-in for easy portable music playback
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Built-in microphone for hands-free phone calls
- Wireless music streaming via Bluetooth

### Sound that blows you away

- Two speaker drivers & passive radiators give immersive sound
- Digital Sound Processing for lifelike, distortion-less music
- 14W RMS total output power


# PHILIPS

wireless portable speaker  
Bluetooth® and NFC Splash proof, Rechargeable battery, Camouflage

BT6000C/37

# Highlights

## Wireless music streaming

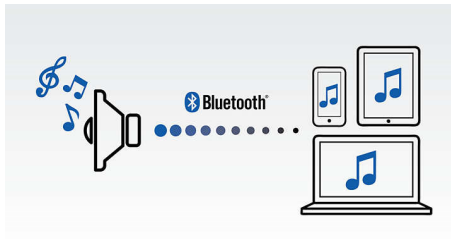


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## Twin speaker drivers



Twin 1.5" Neodymium speaker drivers deliver natural, clear and balanced sound while dual opposing passive radiators extend and boost bass. Front and back full-range speaker drivers create even 360-degree sound, offering the freedom to enjoy the same quality sound wherever the speaker is facing.

## Digital Sound Processing

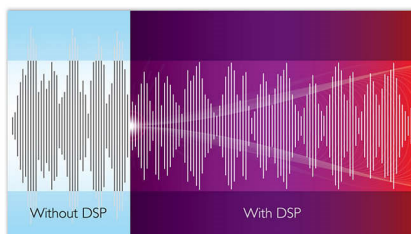

Advanced sound processing technology enhances the reproduction of your music so

that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimizes the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

## Splash-proof design



Water-resistant design allows enjoyment in wet and rainy environments. Tested to stringent IPX4 standards, internal components are proven to be protected from exposure to the elements, making music enjoyment indoors in the bathroom, kitchen or even outdoors whatever the weather.

## NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

## Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting.

Or, call your friend from a party. Either way, it works great.

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## Rechargeable Li-ion battery



Built-in rechargeable Li-ion battery for playback anywhere

## 14W RMS total output power

14W RMS total output power

# Specifications

## Sound

- Output power (RMS): 2 x 7W
- Sound System: Stereo
- Volume Control: rotary
- Speakers: 2 x 1.5"

## Design and finishing

- Color: Green

## Loudspeakers

- Speaker drivers: Neodymium magnet system

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)
- NFC: Tap-to-pair Bluetooth; works with Android 4.0 or above, and Windows phone 8 or above

## Convenience

- Water resistance: IPX4
- Built-in microphone: for speaker conference

## Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above

- iPod touch: 3rd generation or later
- Works with: most Bluetooth smartphones, tablets, music devices
- iPad: iPad 1, iPad 2, new iPad, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- other music devices: with Bluetooth 2.1 or above

## Power

- Battery type: Lithium-ion (built-in)
- Power supply: 5V, 2A (USB adapter)
- Operating time on battery: 8 hour(s)

## Accessories

- Included: USB adapter, USB charging cable, Quick start guide, Warranty certificate, Worldwide warranty leaflet

## Dimensions

- Product dimensions (WxDxH): 188 x 71 x 70 mm
- Packaging dimensions (WxDxH): 282 x 105 x 108 mm
- Product weight: 0.49 kg



Issue date 2024-03-24

Version: 1.0.4

UPC: 8 89446 00537 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)