




Philips  
Soundbar speaker

3.1 CH wired subwoofer

Bluetooth®  
HDMI ARC  
150W

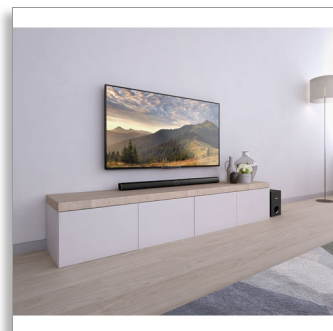

HTL2193B

## Unmatched voice clarity from 3.1 channels of sound with subwoofer

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience, plus wireless music streaming over Bluetooth.

### Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- FM digital tuning with auto scan and presets for ease of use
- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3 music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control


### Richer sound for watching TV and movies

- Dedicated center-channel speaker for superior voice clarity
- Dolby Digital and Pro Logic II surround sound
- Virtual Surround Sound for a realistic movie experience
- External subwoofer adds thrill to the action

**PHILIPS**

# Highlights

## Virtual Surround Sound

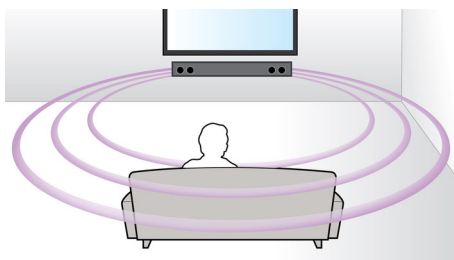

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.


## Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for

easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

## FM digital tuning

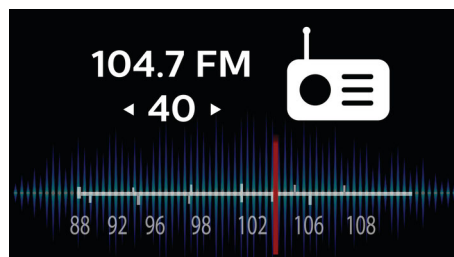

Digital FM radio delivers new music options and entertainment to your soundbar speaker, speaker system and home theater system. Auto scan is available for radio stations, so searching for your favorite channel will never take more than a few seconds. Preset radio stations can be stored, giving you instant access to all your favorite stations without manual tuning each time.

## Enjoy MP3 music directly

Enjoy MP3 music directly from your portable USB devices

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## External subwoofer



External subwoofer adds thrill to the action

# Specifications

## Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode, Audio sync, Movie, Music, Voice
- Sound System: Dolby Digital, Dolby pro-logic 2
- Speaker output power: 32W x 3
- Subwoofer output power: 55 W
- Total Power RMS @ 10% THD: 150 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 2 ohm
- Drivers per Soundbar: 3 x race track woofers

## Connectivity

- Integrated Connections: Bluetooth
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in, HDMI 1.4 output (ARC), FM Antenna Socket
- Top connections: Audio In (3.5mm), USB 2.0

## Design

- Wall mountable

## Power

- Power consumption: 30 W
- Power supply: 100-240VAC, 50-60Hz
- Standby power consumption: < 0.5 W

## Dimensions

- Main Unit (W x H x D): 950 x 51 x 69 mm
- Main Unit Weight: 1.62 kg
- Subwoofer Weight: 2.78 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 395 x 418 x 295 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Weight incl. Packaging: 6.6 kg

## Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AC Adapter, FM antenna, Screws (x6)

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

## Audio Playback

- Compression format: MP3



Issue date 2020-07-08

Version: 3.0.4

12 NC: 8670 001 29345  
EAN: 48 95185 61606 3

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)