Quick Start Guide






Step A Connect


Step B Setup


Step C Enjoy


What's in the Box?

You should find these items upon opening the box.

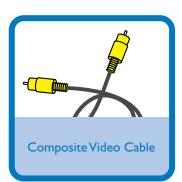

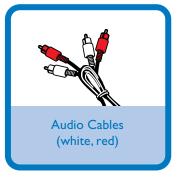

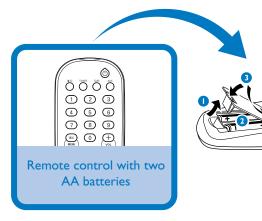

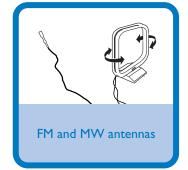








Step A Connect

Tip

See the User Manual for other TV connection options.

- Connect the speaker cables.
- Connect the MW and FM antennas.
- Connect the composite video cable and audio cables to a TV.
- Connect the power cords of the system and TV.

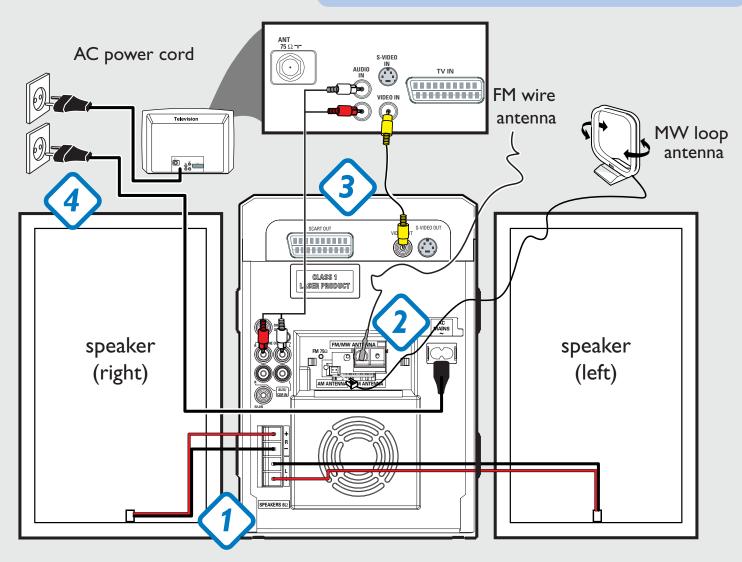


Step B Setup

Setting up the TV

Press **SOURCE** (**DISC** on the remote) to select disc source.



Turn on the TV and set it to the correct Video In channel.

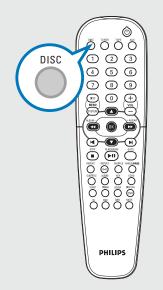



Setting the clock

In normal standby mode, press and hold **CLOCK SET/RDS** on the system.

When the hour digits flash, press **TUNING** on the system to set the hours.


Press CLOCK SET/RDS again and the minute digits flash. Then press TUNING to set the minutes.

4


Press CLOCK SET/RDS again to confirm the time setting.

Tip


If the system is in Eco power standby mode, press and hold **ECO POWER**/ **STANDBY-ON** \oplus for more than 3 seconds to switch to normal standby.

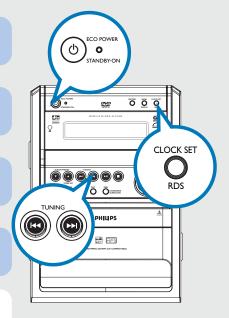


Setting DVD menu options

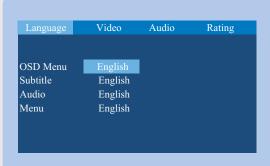

Language	Video	Audio	Rating
TV Shape	4:3 LB	ı	4:3 PS
TV Shape TV System	Auto	l	4:3 LB
Video output	S-VIDEO		16:9
•			

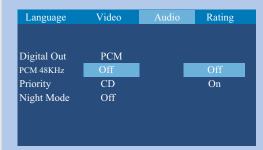

Language	Video	Audio	Rating
Password Rating Load Factory	8. Adult Reset	2 3 4 5 6 7	.kid Safe .G .PG .PG-13 .PG-R .R .NC-17

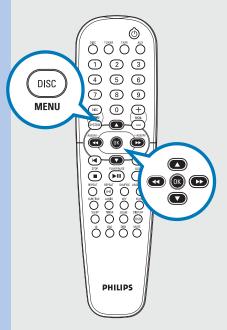

Tip

See chapters "Preparations" and "DVD Menu Options" in the User Manual for detailed descriptions.



Playing a disc

Press OPEN •CLOSE ≜ to open the disc door and load in a disc, then press the same button again to close the disc door.


Load in a disc with the label side facing up.

Playback will start automatically. If not press ► II (PLAY/PAUSE ► II on the remote).



To stop playback, press \blacksquare (STOP \blacksquare on the remote).

Programming and tuning to radio stations



Press PROGRAM (ANGLE/PROG on the remote) for more than two seconds to program all available stations in order of waveband.

Press **ALBUM/PRESET △**/**▼** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.





0 0 0

@...