

Philips Philips Fidelio
SoundHub
2.1 3D Blu-ray Home
theater

Titanium tweeters

CinemaPerfect HD
Built-in Wi-Fi & Bluetooth®
500W



HTB9225D

Breathtaking clarity of all sound details

Obsessed with Sound

Discover Crystal Clear Sound with the new Philips SoundHub home theater system HTB9225D. The titanium tweeters deliver astonishing clarity of every sound detail. Start enjoying your favorite movies and music as they were meant to be heard.

Discover Crystal Clear Sound

- Crystal Clear Sound for superbly clear and detailed sound
- Premium Class D Amplifiers to preserve every sound detail
- Titanium tweeters for undistorted sound of superb clarity
- Virtual Surround Sound for a realistic movie experience

Designed to enhance your cinema at home

- Lifestyle design in high quality brushed aluminum and glass
- Unique speakers with exposed tweeter for undisturbed sound

Simply enjoy all your entertainment

- Built-in WiFi to enjoy your connected media wirelessly
- Wireless music streaming via Bluetooth
- CinemaPerfect HD for ultra-high resolution video playback
- Integrated HDMI Hub connects devices to the TV conveniently
- iPod/iPhone music playback and recharge

PHILIPS
Fidelio


Highlights

CinemaPerfect Quad Full HD



Philips' new CinemaPerfect HD engine offers quad full HD for better video playback than ever. The intelligent engine sharpens and reduces noise that is produced when video is compressed into MPEG format. Together with improved upscale processing, the engine produces sharp and deep images on screen.

Integrated HDMI Hub

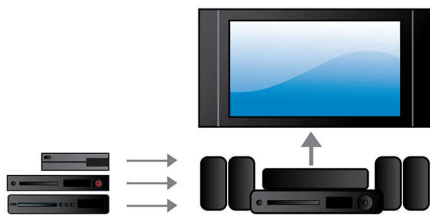


The HDMI Hub gives you the ease of connecting all your devices to the TV without too many wires. It provides you the convenience of enjoying the best possible sound quality while watching different contents on your flat TV. You can connect all your HDMI devices directly into the home theater system's HDMI hub and using only one cable to connect to your flat TV. With this setup, you can easily enjoy your movies or TV programs in HD picture and sound and not have to deal with messy wires!

Bluetooth




Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

Titanium tweeters

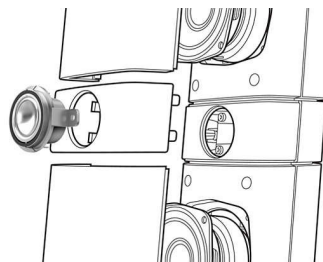

The co-developed tweeters, crafted in titanium, are very rigid and light to guarantee undistorted sound. Their incredible resistance to distortion and resonance through the whole audible frequency range guarantees superb clarity of all sound details.


Premium Class D Amplifiers

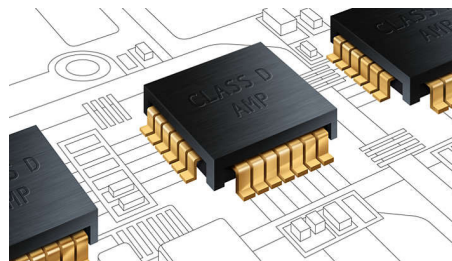

The Philips proprietary Premium Class-D Amplifiers are designed to preserve the original sound source for greater audio signal accuracy, thus allowing acoustic details in


music and movies to be delivered exactly as the artist or director intended.

Virtual Surround Sound

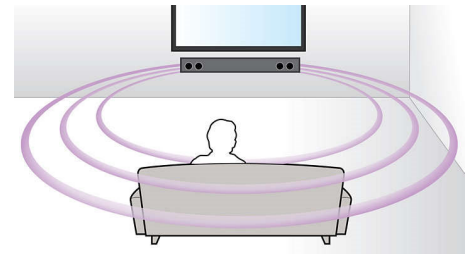

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Exposed tweeter

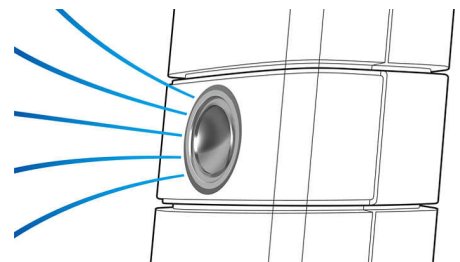

Unique speakers designed with exposed tweeters to give maximum dispersion and openness in the sound.

Lifestyle design



Lifestyle design in high quality brushed aluminum and glass

Specifications

Sound

- Sound Enhancement: Dialog Enhancement, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Subwoofer output power: 230 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Satellite speaker output power: 135 W x2
- Total Power RMS @ 30% THD: 500 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Active
- Drivers per Satellite speaker: 1 x 1" Titanium tweeter, 2 x 3" full range woofers
- Subwoofer impedance: 3 ohm

Connectivity

- Front / Side connections: USB, Audio in
- Integrated Connections: Wi-Fi
- Rear Connections: HDMI 1.4 output (ARC), HDMI IN 3, AUX in, Digital optical in, Ethernet, FM Antenna Socket, Mini Easy-Fit Speaker Jacks, Subwoofer out

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40
- RDS: Station Name

Outer Carton

- EAN: 87 12581 67895 1
- Length: 56.5 cm
- Number of consumer packagings: 1
- Width: 40 cm
- Gross weight: 16.15 kg
- Height: 41.3 cm
- Nett weight: 12.52 kg
- Tare weight: 3.63 kg

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Power

- Power consumption: 135 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Packaging dimensions

- Height: 41.3 cm
- Packaging type: Carton
- Type of shelf placement: Laying

- Width: 56.5 cm
- Depth: 40 cm
- Number of products included: 1
- EAN: 87 12581 67895 1
- Gross weight: 16.15 kg
- Nett weight: 12.52 kg
- Tare weight: 3.63 kg

Product dimensions

- Cable length: 0 cm
- Height: 5.8 cm
- Width: 30 cm
- Depth: 30 cm
- Weight: 2.3 kg

Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 307 x 66 x 304 mm
- Weight incl. Packaging: 16.6 kg
- Main Unit Weight: 3.87 kg
- Packaging (W x H x D): 570 x 413 x 400 mm
- Subwoofer (W x H x D): 196 x 397 x 342 mm
- Subwoofer Weight: 5.3 kg
- Satellite Speaker (W x H x D): 131 x 334 x 99 mm
- Satellite Speaker Cable length: 3 m
- Satellite Speaker Weight: 1.2 kg
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, Dolby Digital, DTS, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

File Format

- Audio: aac, mka, mp3, wav, wma
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv, flv, mov
- Picture: GIF, JPEG, JPG

Picture/Display

- Philips Branded feature: CinemaPerfect HD
- Picture enhancement: Quad HD (3840 x 2160), Instant 2D to 3D, HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD, avi, MKV, XviD