



Philips Fidelio SoundBar
Home theater with
Ambisound technology

3D Blu-ray

Aluminium
Wall mountable

SoundBar



HTB9150

The thinnest Blu-ray Soundbar with Ambisound yet

Obsessed with Sound

Delivering totally immersive sound and chic design elegance, nothing matches slimline TVs like Ambisound. This Philips home theater SoundBar HTB9150 has stylish 5-amplifiers and 6 loudspeakers minimizing clutter in any room.

Ultimate listening experience

- Ambisound technology for surround sound from fewer speakers
- 600W RMS power delivers great sound for movies and music
- Voice Clarity enhancer for true-to-life voices

Designed to enhance your living space

- SoundBar design best fitting a 102cm (40") flat TV or larger
- Sophisticated design with high quality aluminum finishing
- Super slim design of 87mm depth ideal for wall mounting


Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Internet radio to enjoy the world of online radio channels
- Built-in Wi-Fi to enjoy your connected media wirelessly
- Instant 2D to 3D conversion for a lifelike movie experience
- Turn your Smartphone into a remote for Philips AV products

PHILIPS
Fidelio

Highlights

Ambisound technology

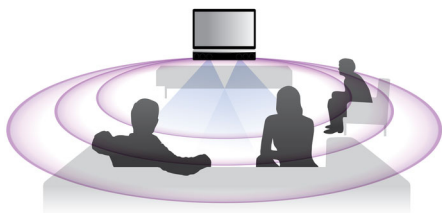

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images

through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Built-in Wi-Fi

With built-in Wi-Fi, you can access your media content wireless. Say goodbye to squinting at the computer screen, and lean back and enjoy your media files on your TV - in the comfort of your living room.

Internet radio

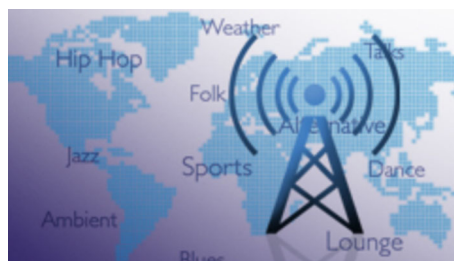

Internet radio is an audio broadcasting service that is transmitted via the Internet. Some internet stations are affiliated with a traditional (terrestrial) radio station or network while others are internet-only radio stations, which are independent and devote their broadcasts only to the World Wide Web. With Internet Radio, you can enjoy access to online radio stations from anywhere in the world and listen to a wide variety of genres, news, sports and

entertainment updates, or connect to favourite or niche stations.

Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

600W RMS power



600W RMS power delivers great sound for movies and music

Specifications

Sound

- Philips Branded feature: Ambisound
- Equalizer settings: MySound, Gaming, Movie, Music, News, Original
- Sound Enhancement: Dolby Digital Prologic II, Night Mode, Treble and Bass Control, Voice Clarity Enhancer
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Center speaker output power: 2 x 60 W
- Surround speaker output power: 4 x 90 W
- Subwoofer output power: 120 W
- Total Power RMS @ 30% THD: 600 W

Loudspeakers

- Loudspeaker types: Integrated with main unit, 2 Integrated center speakers, 4 Integrated surround speakers
- Drivers per Center speaker: 1 x 2.5" Full range woofer
- Drivers per Surround speaker: 2 x 2.5" Full range woofers
- Surround speaker freq range: 150 - 20k Hz
- Surround speaker impedance: 6 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm
- Center speaker impedance: 8 ohm

Connectivity

- Integrated Connections: Wi-Fi
- Side Connections: Music iLink, USB
- iPod/iPhone: Ready (Dock sold separately), via 3.5mm Music iLink
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot
- MyRemote App: MySound, SimplyShare, Virtual Remote

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play,

- One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Tuner/Reception/Transmission

- Internet Radio
- Tuner Bands: FM
- Number of Preset Channels: 40
- RDS: News, News & Traffic, Station Name

Optical Playback Media

- Playable Discs: 3D Blu-ray, AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, flv, mkv, mp4, mpeg, mpg

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Philips Branded feature: CinemaPerfect HD
- Picture enhancement: Instant 2D to 3D, HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Design

- Wall mountable

Power

- Power consumption: 85 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.25 W

Sustainability


- Packaging: Electronic User Manual

Dimensions

- Main Unit (W x H x D): 927 x 150 x 87 mm
- Main Unit Weight: 5 kg
- Subwoofer (W x H x D): 196 x 396.5 x 300 mm
- Subwoofer cable length: 4 m
- Subwoofer Weight: 4.79 kg
- Packaging (W x H x D): tbc mm
- Weight incl. Packaging: 15.5 kg

Accessories

- Compatible accessories: DCK3061 Dock for iPod/iPhone, STS1100 Table top stand, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

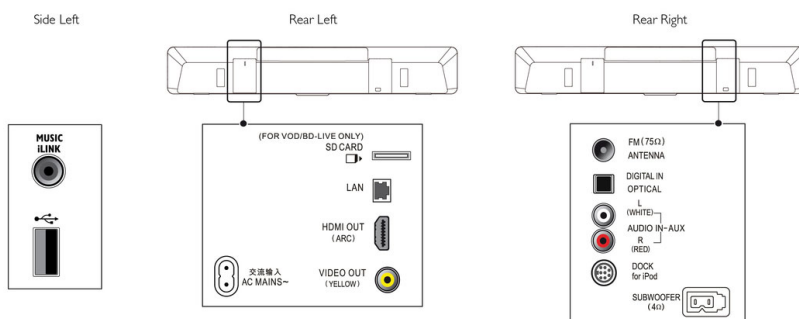

Issue date 2020-07-08

Version: 8.1.12

12 NC: 8670 000 90322
EAN: 87 12581 64486 4

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com