




Philips  
Wireless headphones

### Noise Cancelling Pro

Up to 60 hours of play time  
Bluetooth multipoint  
Touch control

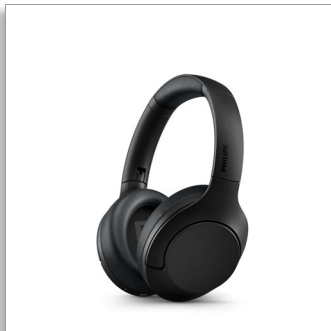

TAH8506BK

## Sleek style. Great sound.

Turn the everyday into the awesome with these sleek over-ear wireless headphones. Thrilling sound and advanced noise cancellation leaves you free to get lost in every playlist and podcast. Need to chat? You get clear calls too.

### Great sound, sleek looks

- Sleek design with Noise Cancelling Pro
- Clear sound for calls
- Great sound from 40 mm drivers

### Simple connections. Easy to use.

- Bluetooth multipoint. Connect multiple devices
- Plug in for Hi-Res Audio
- Up to 60 hours of play time\*
- Touch control that you control. Turn touch on or off

### Made for you

- Lightweight comfort
- Smart-looking hard case keeps the headphones safe
- Philips Headphones app. Custom sound and more


# PHILIPS

Wireless headphones  
Noise Cancelling Pro Up to 60 hours of play time, Bluetooth multipoint, Touch control

TAH8506BK/00

# Highlights

## Noise Cancelling Pro

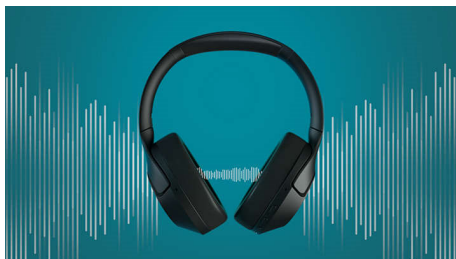

These lightweight wireless headphones don't just look great, they also let you focus on what you want to hear. Advanced noise cancellation filters out unwanted sounds from the world around you. Awareness Mode lets you bring the world back in when you need to.

## Great sound



Perfectly tuned 40 mm drivers deliver plenty of detail and bass for every song or podcast. You can even use the included cable to plug in and enjoy the Hi-Res Audio files available on your favourite streaming service. When you're not listening, the attractive hard case keeps the headphones safe.

## Bluetooth multipoint



Watch a film on your tablet. Take a call from your phone. With Bluetooth multipoint connectivity, you can connect up to two smart devices to these headphones simultaneously and switch between them as you need.

## Up to 60 hours of play time\*



With noise cancelling turned off, you get up to 60 hours to enjoy your tunes, podcasts and more. With noise cancelling turned on, it's up to 45 hours. A full charge takes 2 hours, and if you need a boost, you can get an extra 5 hours with a quick 15 minute charge.

## Touch control



Touch controls let you control music and calls. Don't want to accidentally activate a control when you're concentrating on your tunes or podcasts? You can turn touch controls on and off using the app.

## Philips Headphones app



The Philips Headphones app puts you in charge of the music you're listening to. Adjust levels yourself or choose from preset sound styles. You can also use the app to switch between preset noise-cancellation modes.

## Clear sound for calls

Clear sound for calls

## Lightweight comfort

Lightweight comfort

## Plug in for Hi-Res Audio

Plug in for Hi-Res Audio

## Smart-looking hard case

Smart-looking hard case keeps the headphones safe



# Specifications

## Sound

- Frequency range: 7 - 40,000 Hz
- Speaker diameter: 40 mm
- Impedance: 32 Ohm
- Maximum power input: 30 mW
- Sensitivity: 96 dB (1 kHz)
- Driver type: Dynamic
- Hi-Res Audio

## Connectivity

- Bluetooth version: 5.0
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Detachable cable
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: AAC, SBC
- Type of wireless transmission: Bluetooth
- Headphone socket: 2.5 mm

## Outer Carton

- Length: 24.3 cm
- Number of consumer packages: 3
- Width: 21.7 cm
- Gross weight: 2.75 kg
- Height: 26.5 cm
- GTIN: 1 48 95229 11854 3
- Net weight: 1.518 kg
- Tare weight: 1.232 kg

## Convenience

- Automatic power off
- Volume control
- Philips Headphones app support
- Firmware updates possible
- Type of controls: Touch

## Power

- Rechargeable
- Number of batteries: 1 pcs
- Charging time: 2 hour(s)
- Music play time (ANC on): 45 hour(s)
- Music play time (ANC off): 60 hour(s)
- Fast charging time: 15 mins for 5 hrs
- Battery weight (Total): 14.936 g
- Battery capacity (Headphones): 800 mAh
- Battery type (Headphones): Lithium Polymer (built-in)

## Packaging dimensions

- Height: 25.5 cm

- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 19.2 cm
- Depth: 7.2 cm
- Number of products included: 1
- EAN: 48 95229 11854 6
- Gross weight: 0.819 kg
- Net weight: 0.506 kg
- Tare weight: 0.313 kg

## Product dimensions

- Height: 20.5 cm
- Width: 18.5 cm
- Depth: 4.5 cm
- Weight: 0.279 kg

## Accessories

- Others: 1 pcs hard carrying case
- Audio cable: 2.5-3.5 mm stereo cable, L=1.2 m
- Quick Start Guide
- Charging cable: USB-C cable, 500 mm
- Included adapters: Aeroplane adapter

## Design

- Colour: Black
- Wearing style: Headband
- Foldable design: Flat/Inward
- Ear coupling material: Synthetic leather
- Ear fitting: Over-ear
- Earcup type: Closed-back

## Telecommunication

- Microphone for call: 1 mic

## UPC

- UPC: 8 40063 20202 3

## ANC features

- ANC technology: Hybrid
- Awareness mode
- Adaptive ANC
- Microphone for ANC: 4 mic
- ANC (Active Noise Canceling )

## Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-03-24

Version: 11.4.9

EAN: 48 95229 11854 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Battery life of play time is approximate and may vary depending on application condition.